




CAUTIONS

 **To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.**

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.


INSPECT YOUR MODEL BEFORE OPERATION.

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.

AFTER OPERATION OF YOUR R/C MODEL

- Disconnect battery in vehicle first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

VORSICHT!

 **Um Verletzungen an Personen und/oder Sachschäden zu vermeiden, sollten alle ferngesteuerten Modelle sorgfältig und verantwortungsbewusst bedient werden, wie nachfolgend beschrieben.**

Wählen Sie den richtigen Platz zum Fahren

- Fahren Sie niemals auf öffentlichen Straßen. Dies könnte Verkehrsunfälle, Personen schäden oder Sachschäden verursachen.
- Fahren Sie niemals in der Nähe von anderen Personen oder Tieren.
- Fahren Sie niemals auf belebten Straßen.
- Fahren Sie nie in der Nähe von Wohnhäusern oder Krankenhäusern. Der Lärm könnte andere Personen stören.
- Fahren Sie niemals in Innenräumen. Dort könnte etwas beschädigt werden.

Überprüfen Sie Ihr Modell, bevor Sie es in Betrieb nehmen.

- Gehen Sie sicher, dass alle Schrauben und Muttern festgezogen sind. Verwenden Sie überall dort Schrauben-Sicherungslack, wo Metallschrauben in ein Metallgewinde greifen, besonders bei den Motorhaltern.
- Um Störungen zu vermeiden, benutzen Sie immer voll geladene Akkus in Ihrem Sender und Empfänger.
- Bevor Sie den Motor starten, sollten Sie immer die Funktion der Bremse und des Gashebels testen.

Nach Betrieb des RC Modells:

- Zuerst den Empfänger abdrehen, dann den Sender abdrehen um unkontrolliertes Durchgehen zu vermeiden.
- Seien Sie vorsichtig mit gebrauchten Akkus, sie können nach dem Gebrauch heiß sein.
- Ersetzen Sie Akkus/Batterien die beschädigt sind oder schadhafte Kabel aufweisen, sie können Kurzschlüsse oder Feuer verursachen.
- Halten Sie Ihr Fahrzeug sauber und entfernen Sie Schmutz und Schmierfett, damit erhöhen Sie die Lebensdauer Ihres Modells.

PRECAUTIONS

 **Afin d'éviter toutes blessures corporelles et/ou dommages environnants, veuillez procéder en toute responsabilité comme indiqué ci-dessous**

Choisir le lieu adéquat pour faire rouler votre modèle.

- Ne jamais rouler dans les rues ou sur les routes ouvertes au public. Ceci peut provoquer de graves accidents.
- Ne jamais rouler près de personnes ou d'animaux.
- Pour éviter les blessures, ne pas rouler dans des espaces confinés.
- Ne jamais rouler où le bruit peut déranger, comme aux abords des hôpitaux ou des quartiers résidentiels.
- Ne jamais rouler à l'intérieur: les gaz d'échappement sont nocifs.

Controler votre modèle avant chaque utilisation.



- Vérifier que les vis et les écrous sont bien serrés. Il est très fortement conseillé d'utiliser du frein filet pour bloquer les vis qui sont en contact avec du métal et tout particulièrement les vis du moteur.
- Toujours utiliser des batteries bien chargées pour l'émission et la réception.
- Toujours vérifier les freins et la commande des gaz avant de démarrer.

Après l'Opération De Votre Modèle de R/C

- Le virage du récepteur premier, alors virage de l'émetteur, ceci empêchera des fugitifs.
- Faire attention en contrôlant des piles, ils auront chaud après avoir couru.
- Remplacer n'importe quelles piles qui ont été cabossées ou a éraillé des fils, les court-circuits peuvent causer le feu.
- Etre sûr de garder votre modèle de R/C nettoie et libère de terre et la graisse supplémentaires, ceci augmentera la vie.


Included items / Im Baukasten enthalten / Outils inclus dans le kit

Radio control car
Ferngesteuertes Modellauto
Voiture radio-commandée

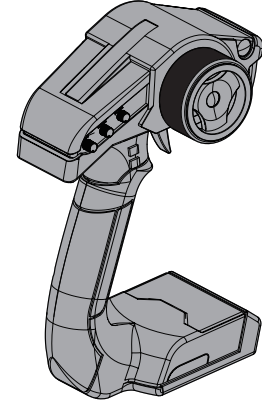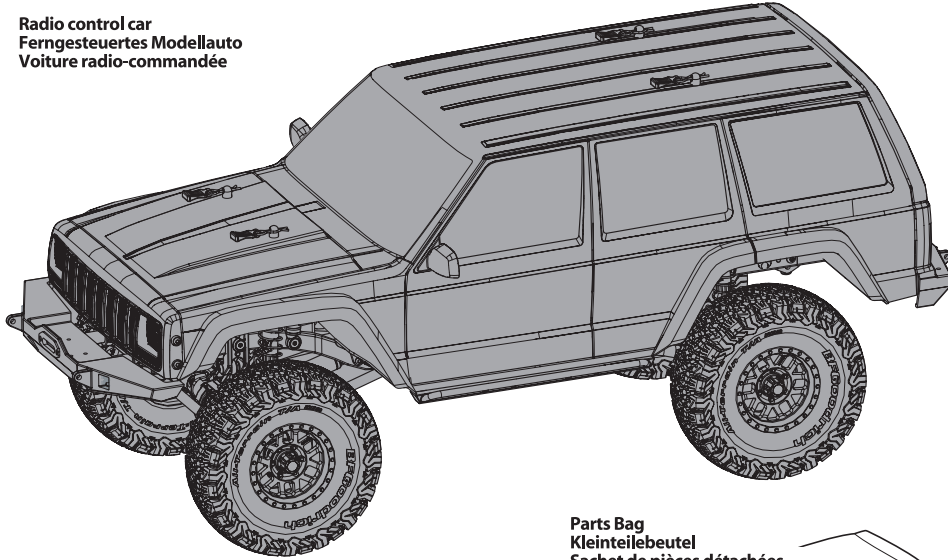


2.4GHz
Transmitter
Sender
Emetteur


Parts Bag
Kleinteilebeutel
Sachet de pièces détachées

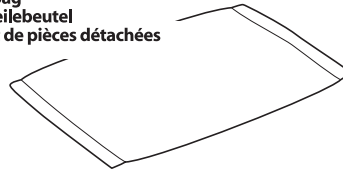

Cross wrench
Steckschlüssel
Clé à tube

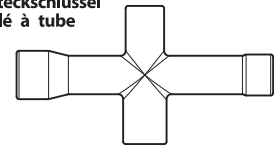

 
Equipment needed / Benötigtes Zubehör / Equipement nécessaire



x4


4 AA Alkaline Dry Batteries.
4 St. AA Trockenbatterien.
4 piles type R6 pour votre
radio commande.

Li-Po or Ni-MH Battery Pack
Akku-Pack
Pack de batterie

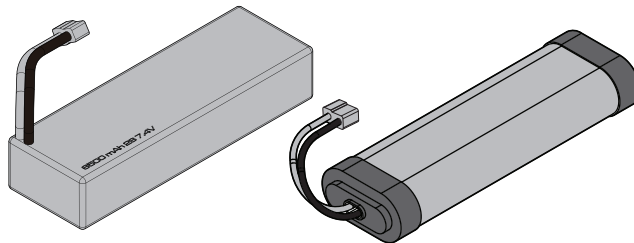


T-Style Battery Connector Required.




Charger
Ladegerät
Chargeur

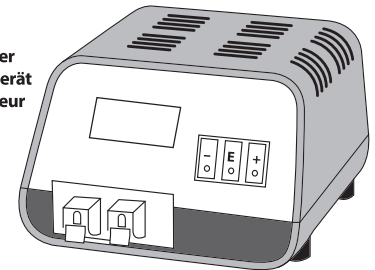

 
Tools Recommended / Benötigte Werkzeuge / Outillage




Hex wrench
Inbusschlüssel
Clé Allen

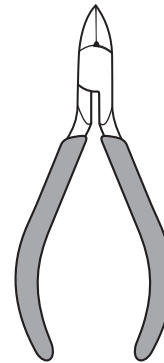  

Side cutter
Seitenschneider
Pinces coupantes

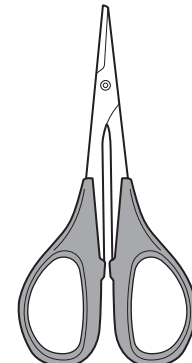


Curved scissors
Schere
Ciseaux

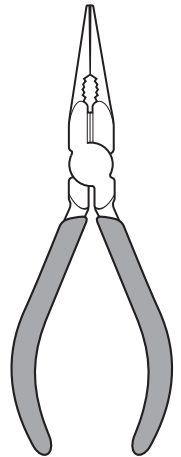


Long nose pliers
Flachzange
Pinces à becs longs

 Modeling knife
Modelliermesser
Couteau de modéliste



Charge your battery / Laden des Fahrakkus / Chargement de la batterie

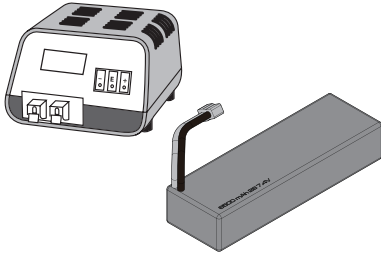

Follow the manufacturer's directions for the charger you purchased to properly charge your batteries.

Folgen Sie den Herstelleranweisungen für den Auflader Ihres gekauften ordentlich, Ihre Batterien zu laden.


Suivre les directions de fabricants pour le chargeur votre a acheté convenablement pour charger vos piles.

Make sure charger is correct for battery type selected for use. Examples: Do NOT charge Lipo batteries with Nickel Metal Hydride charger. Do NOT charge Nickel Cadmium batteries Lipo charger.


Stellen Sie sicher, Ladegerät ist korrekt für Batterietyp zur Verwendung ausgewählt. Beispiele: Laden Sie keine Lipo-Akkus mit Nickel-Metall-Hydrid-Ladegerät. Laden Sie keine Nickel-Cadmium-Akkus Lipo Ladegerät.

Assurez-vous que le chargeur est correcte pour le type de batterie sélectionné à l'emploi. Exemples: Ne pas charger les batteries Lipo avec chargeur hydrure métallique de nickel. Ne chargez pas les batteries au nickel-cadmium Lipo chargeur.


1. Turn on the transmitter.

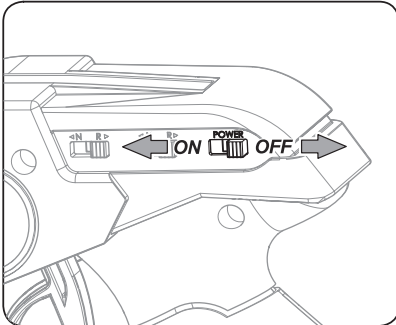

2. Remove the body clips and body. Install the battery and secure with Hook and Loop straps.


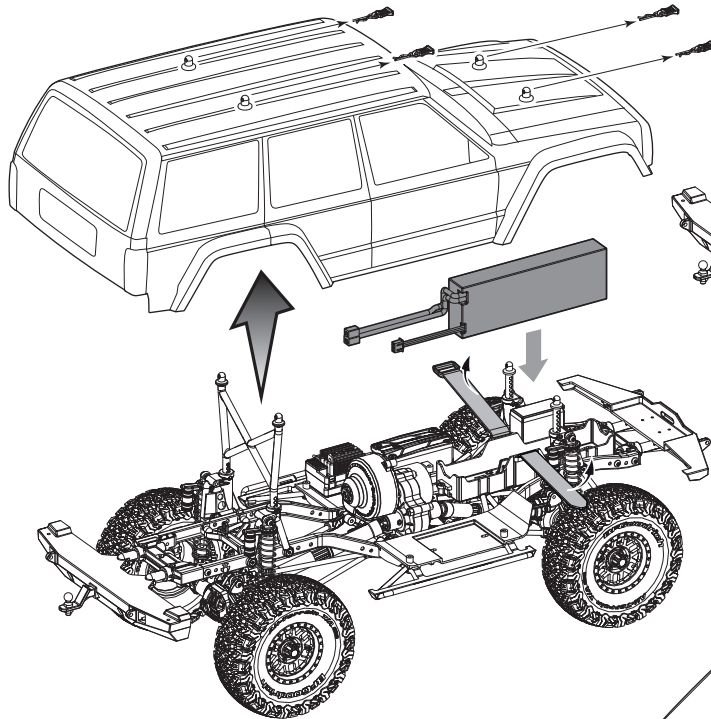


3. Connect the battery to ESC. Re-attach the body with body clips.

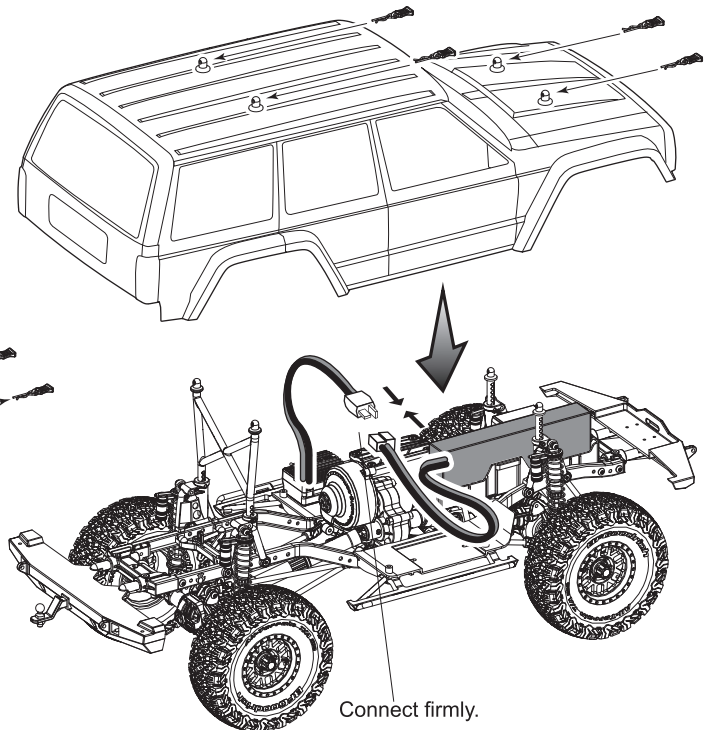


Connect firmly.

Note:
Power to the vehicle is controlled by connecting / disconnecting the

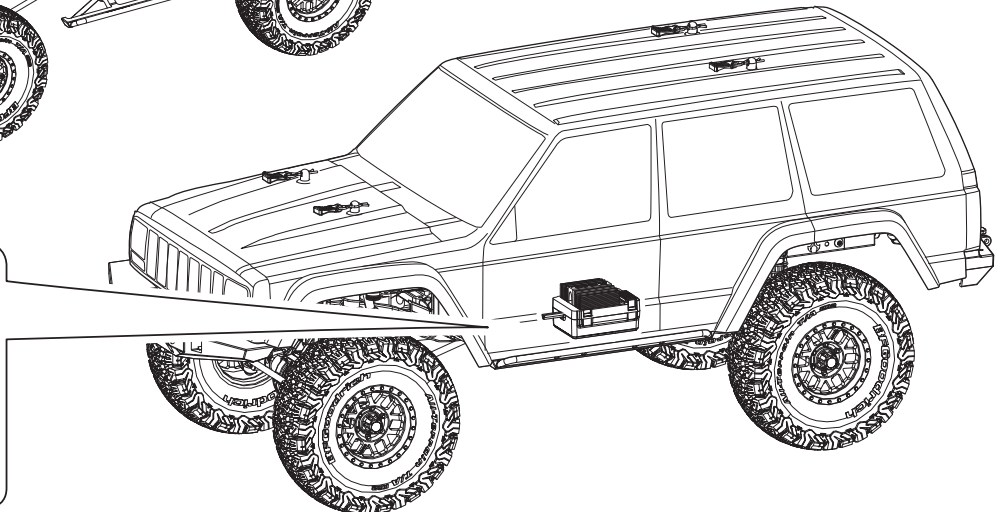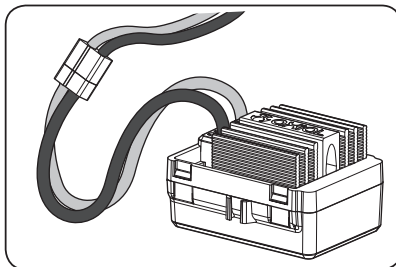


Top View Parts

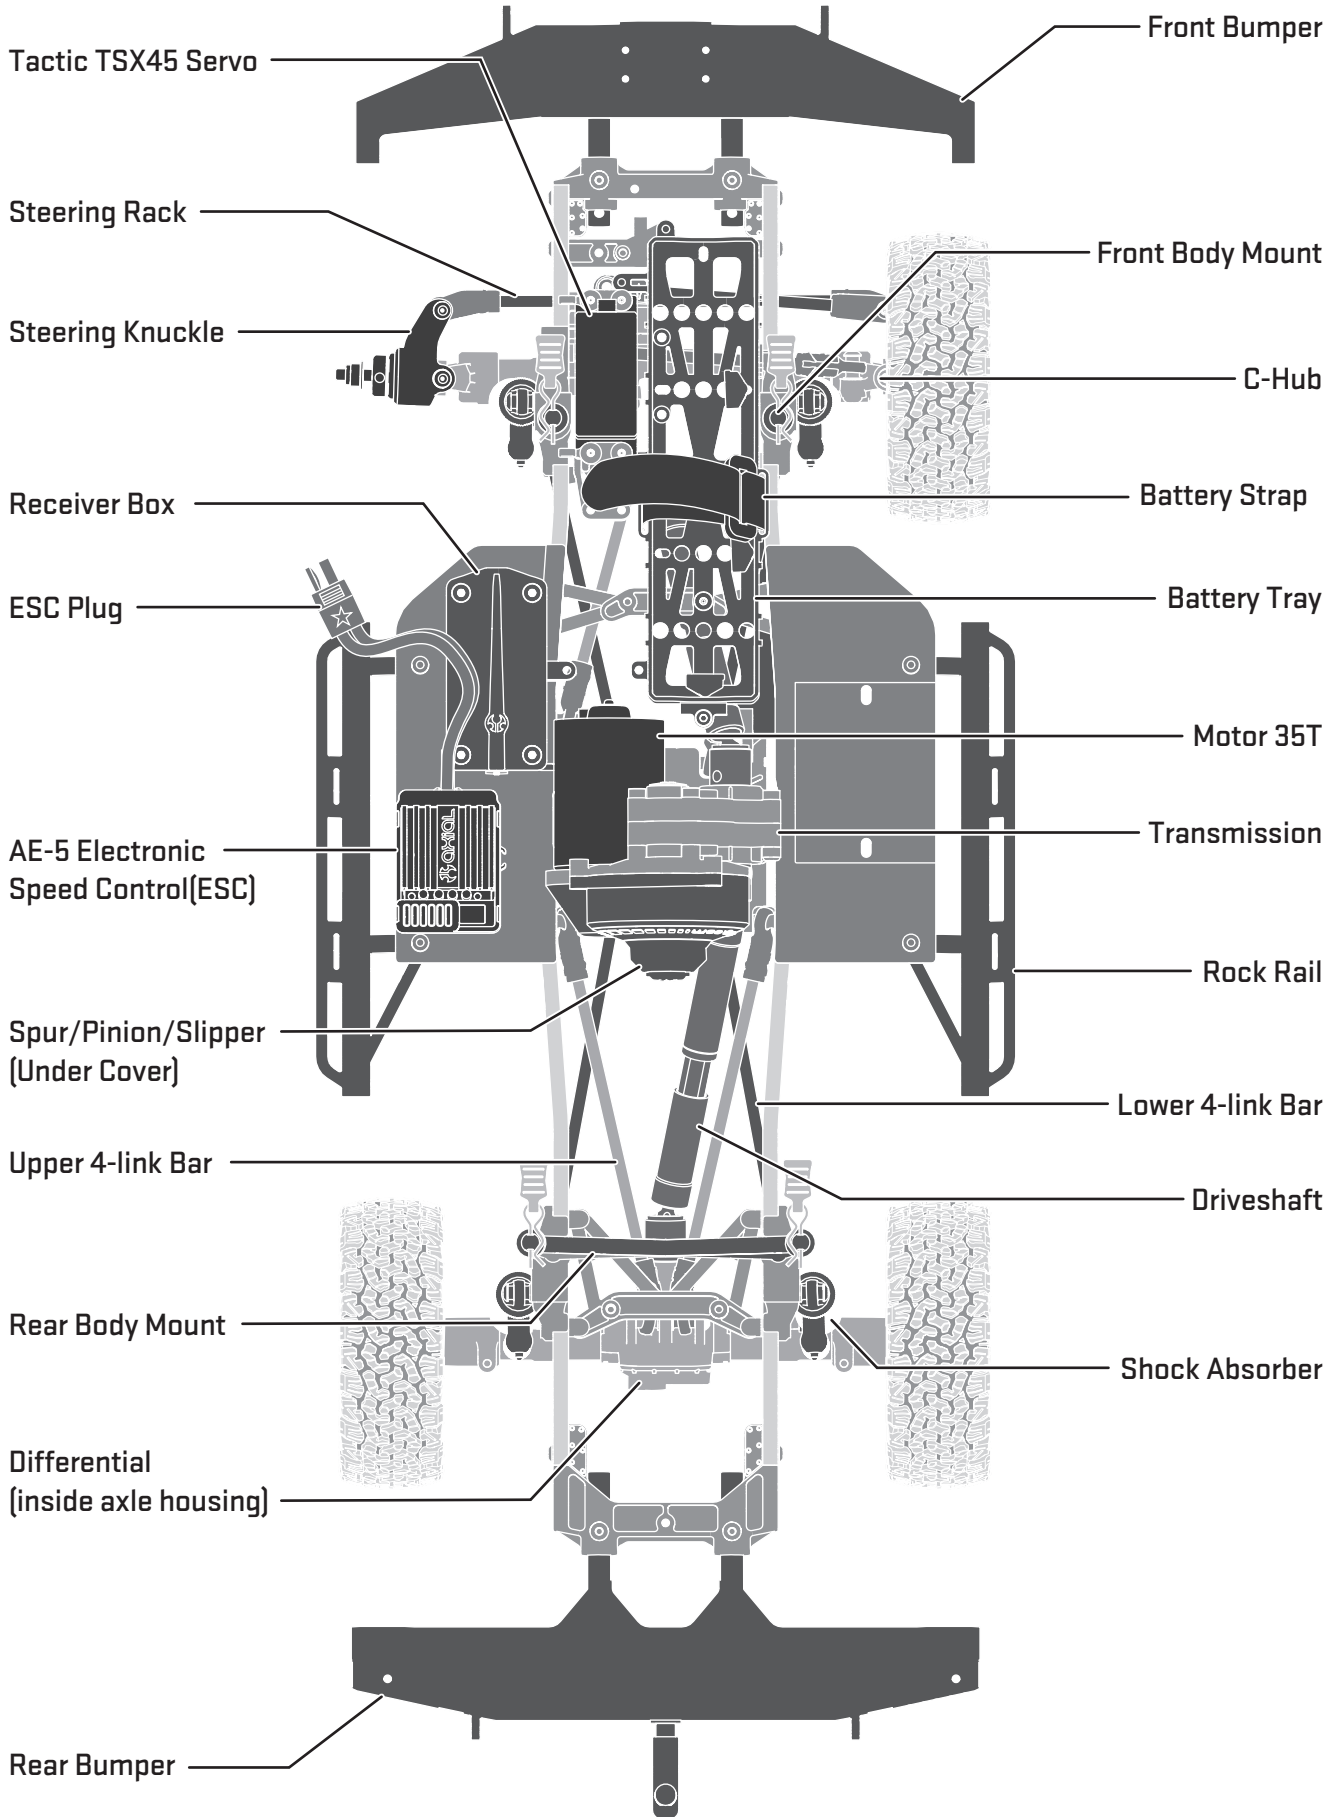


Getting-Started Checklist


The following checklist is a guide for getting you vehicle running for the first time.

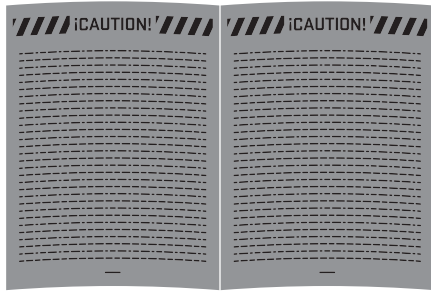


Read 'Cautions' in Manual. (Page 2)

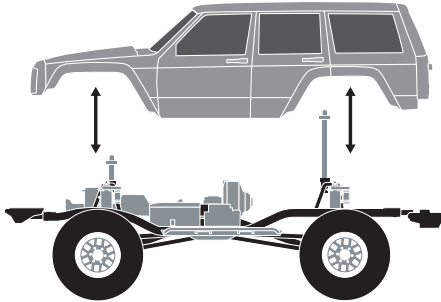


Familiarize yourself with vehicle and its components.

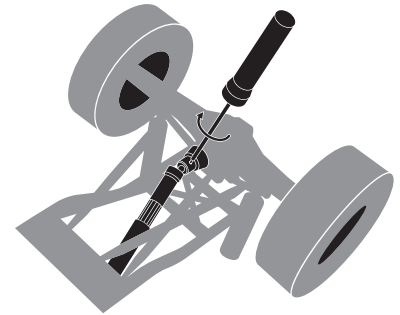


Even though the vehicle is new check driveshaft setscrews and other screws to make sure they are tight from the factory.

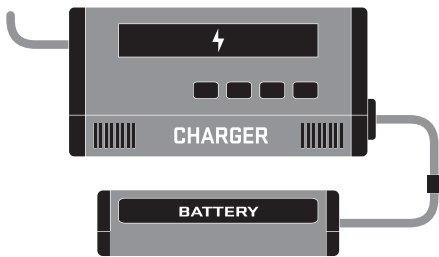


Charge battery pack. (Page 4)

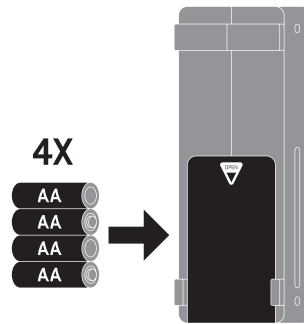


Install 4X AA batteries into Transmitter. (Page 7)

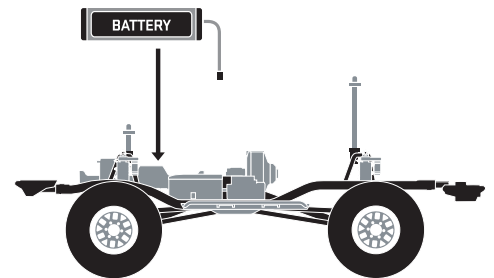

Install battery pack in vehicle. (Page 4)

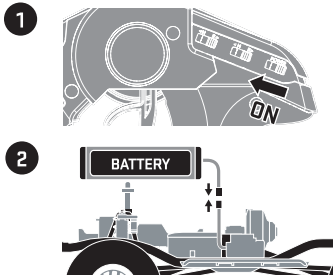


Turn on transmitter first, then plug in battery. (power ESC) (Page 4)

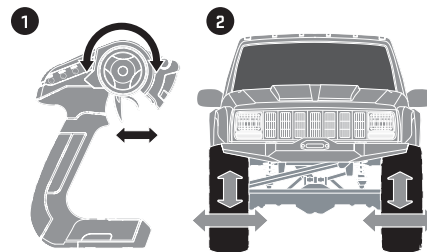


Check to make sure steering and throttle operation work correctly. (Page 7)



Range check radio system. (Page 7)

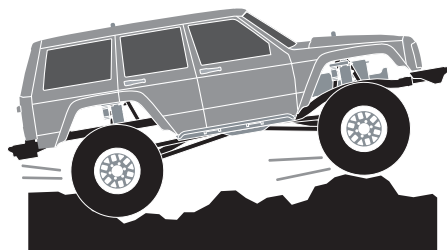

Drive vehicle, challenge yourself and have fun!

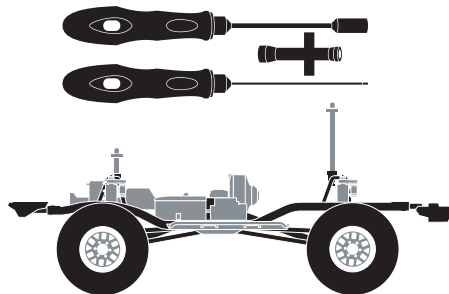

Maintain vehicle. (Page 7)

Range-Checking Your Radio System

The radio system should be checked before operating the vehicle to ensure it's operating properly and has adequate range.














1. Turn on the transmitter and then connect the battery in the vehicle.
2. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
3. Walk away until you are at the farthest distance you plan to operate the vehicle.
4. Steer the vehicle back and forth and throttle both forward and reverse making sure there is no erratic behavior.
5. If any erratic behavior is exhibited do not operate the vehicle, call customer service for further assistance.






RANGE-CHECKING FOR DISTANCE

Maintaining Your Vehicle


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak running performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

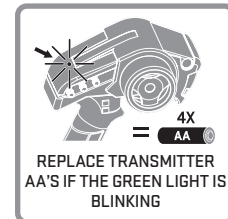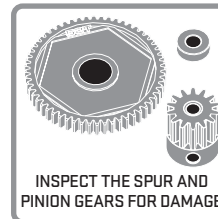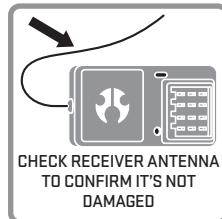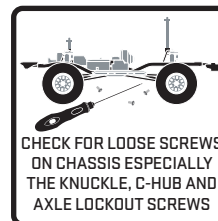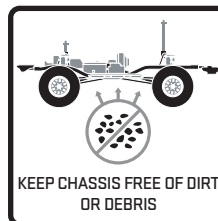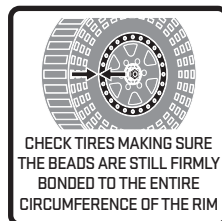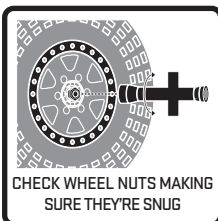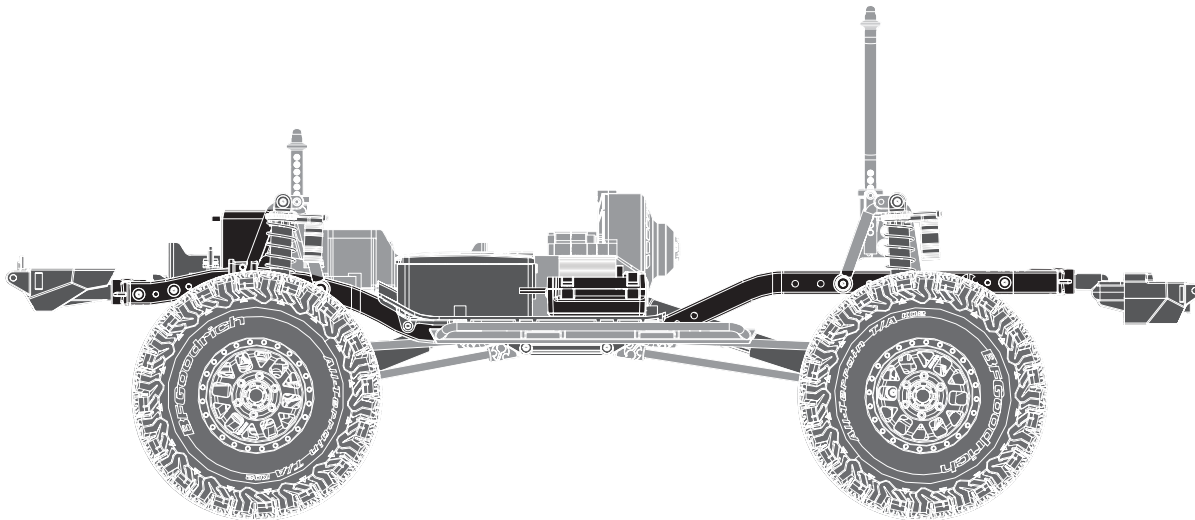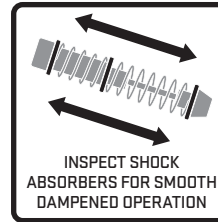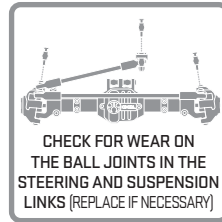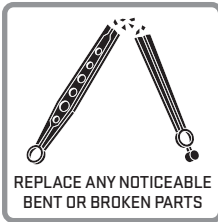

Battery Tray

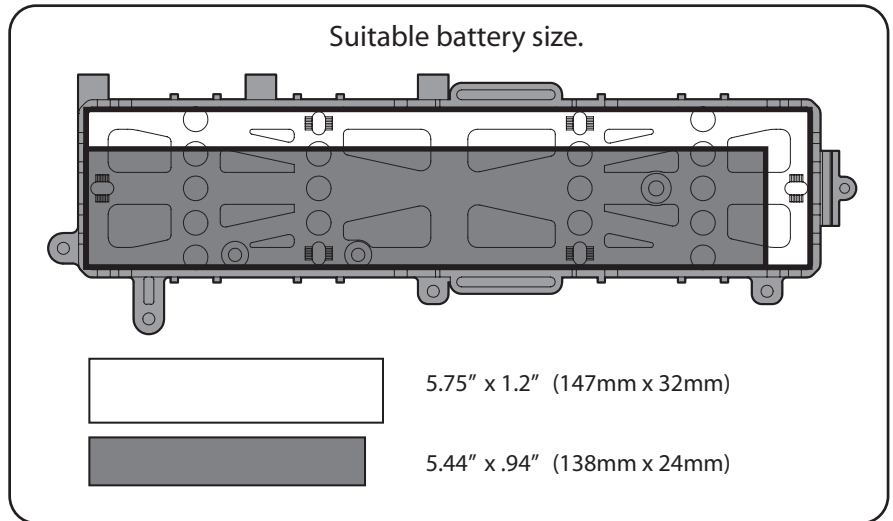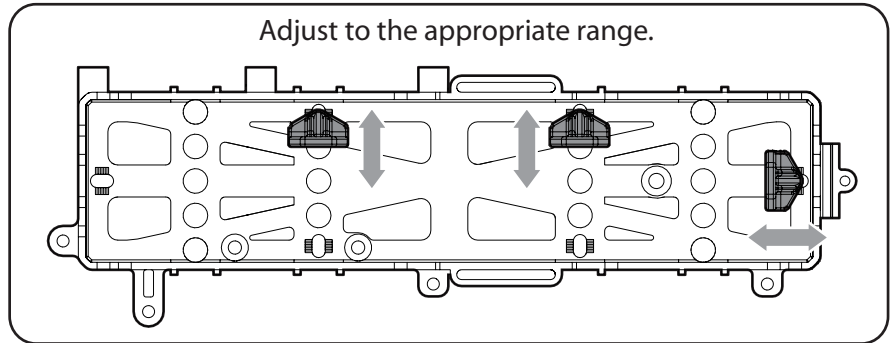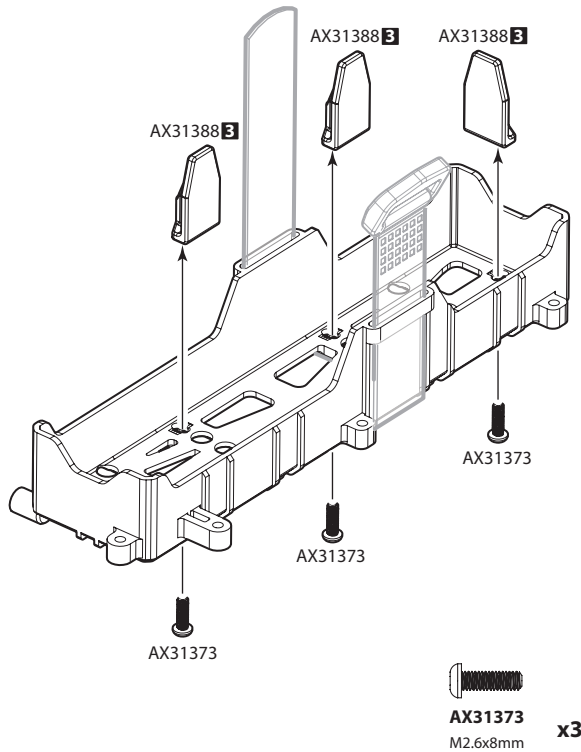

AE-5 Forward/Reverse ESC w/ Drag Brake

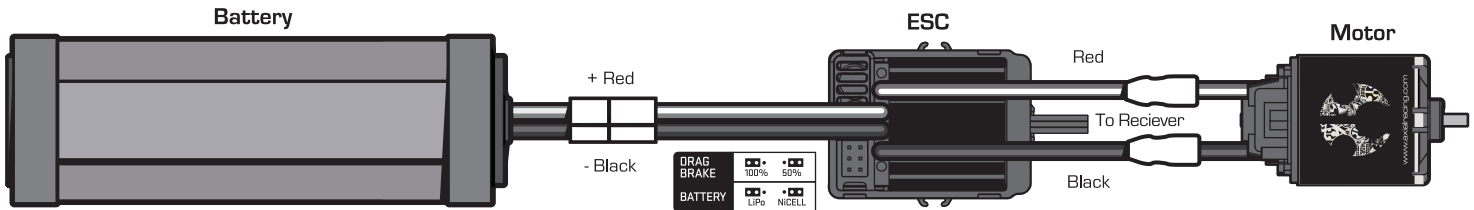

Setup:

Throttle calibration should not be needed out-of-the-box. However in order to make the throttle range of different transmitters, the calibration of the ESC is necessary:

- Mount the ESC in an area that is well ventilated and isolated from vibration and shock.
- Connect the ESC motor wires to the motor red-red & black-black.
- Plug the receiver with into the throttle channel on the receiver. The black negative wire should be towards the outside of the receiver.
- Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set at zero.
- Connect the battery to the ESC, this will turn on the ESC.
- Test forward and reverse control using the transmitter.
- To calibrate the ESC, make sure the transmitter is on and the throttle control is at neutral.
- Connect the battery to the ESC and wait 3 seconds to let the ESC initiate a self-test and automatic throttle calibration.

When the ESC is ready to run a long beep sound will be emitted from the motor. Always disconnect the battery when the vehicle is not in use.

Notes:

- Drag Brake set to 100% from the factory.
- LiPo Cut-Off is set to "ON" from the factory.

Specifications:

Input Voltage:	2-3S LiPo, 5-9 Cells NiMH/NiCd
Size:	46.5mm x 34mm x 28.5mm
Weight:	70g
Motor Limit:	12T 2S / 18T 3S
On-Resistance FET:	.002
Rated/Peak Current:	180A
Braking Current:	90A
BEC Voltage/A:	6.0V 3.0A Peak
PWM Frequency:	1KHz

Beep Sound and LED Status:

1 Short Beep:	Battery is NiMH/NiCd
2 Short Beeps:	Battery is 2S Lipo
3 Short Beeps:	Battery is 3S Lipo
1 Long Beep:	Self-test and throttle calibration is OK and ESC is ready to run



CONNECT THE BATTERY PACK JUST BEFORE DRIVING AND DISCONNECT IT IMMEDIATELY AFTER. ALWAYS MAKE SURE YOU ARE CONNECTING THE ESC TO A PROPER POWER SOURCE THAT HAS THE CORRECT VOLTAGE & POLARITY. INCORRECT VOLTAGES OR REVERSED POLARITY WILL DAMAGE THE ESC. ONCE THE BATTERY PACK IS CONNECTED, HANDLE THE MODEL WITH EXTREME CARE, MAKE SURE YOU ARE CLEAR OF ALL ROTATING PARTS.

2016 SCX10 Spur/Pinion Gear Ratio Chart - AX Transmission

Spur	12	13	14	15	16	17	18
56	45.50	42.00	39.00	36.40	34.13	32.12	30.33
60	48.75	45.00	41.79	39.00	36.56		

NOTES

Details Install



AXA1179
2.5x1.5mm **x4**





AX31374
3mm Body Clip **x4**




AX31373
M2.6x8mm **x2**



AX31194
M2.6x4mm **x2**

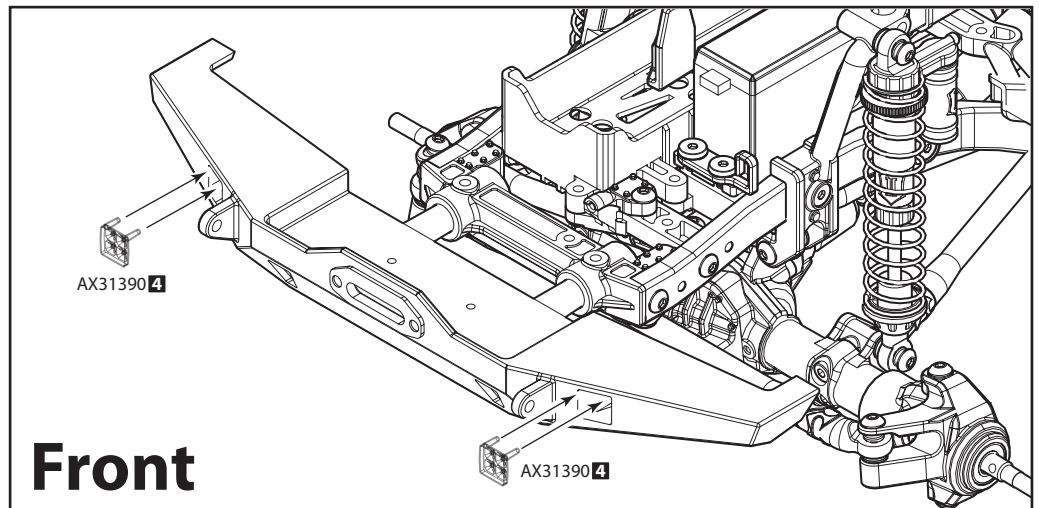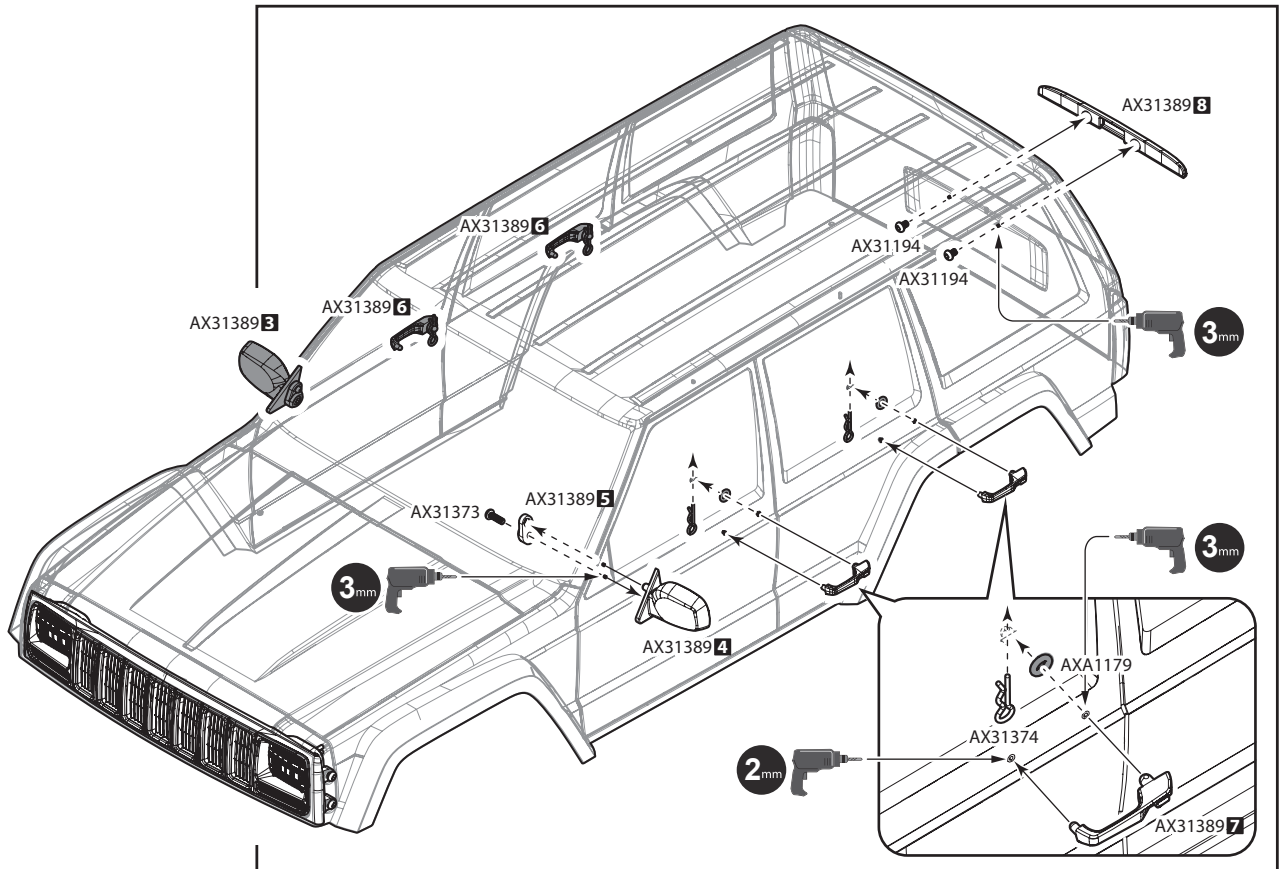

AXA0286
M4x2.5x13mm **x1**

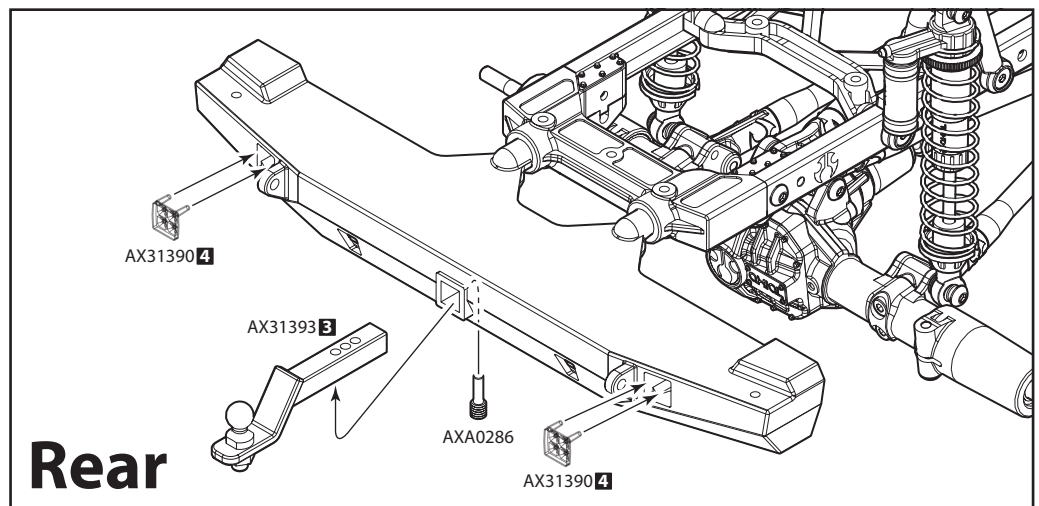

AXIAL LIMITED WARRANTY

Your Axial product is warranted to be free of defects in materials and workmanship when new in the factory sealed box. This warranty does not cover damages due to normal wear and tear, users' failure to perform routine maintenance, error of assembly or installation, modifications or addition of aftermarket parts or option parts. This warranty lasts as long as the original purchaser owns the product and is not transferable (verified by dated itemized sales receipt accompanied with product). In the event of a defect under this warranty, Axial will, at our discretion, repair or replace the product, provided our inspection indicates that an original defect exists. Axial provides a 10-day warranty from the date of purchase on electronics (i.e. servo, esc, radio). Axial reserves the right to replace any product which is no longer available with a product of comparable value and function. If Axial determines the repair is not covered under warranty guidelines, there could be a charge applied for the repair and return shipping charges. Note: Purchasing products from unauthorized distributors may void warranty and prevent support and service.

INTERNATIONAL CUSTOMER WARRANTY

Please return product to the dealer where the purchase was made. If your Axial product purchase was made through an on-line retailer, any warranty issues must be taken care of by that retailer. Axial assumes no responsibility for Axial products sold internationally by on-line retailers.

REPAIR

For warranty repair, please contact Axial Customer Service at (877) 64-AXIAL (877-642-9425).


HOURS AVAILABLE:


8:00 am - 5:00 pm Monday through Friday, Central Time.

Trouble Shooting / Fehlerbehebung / Dépannage


Problem Problem Problème	Cause Grund Cause	Remedy Lösung Remède
<p>Does not move Das Auto fährt nicht Le véhicule ne bouge pas</p>	<p>Batteries are not installed properly in the transmitter. Die Batterien sitzen nicht korrekt im Sender. Les piles ne sont pas placées correctement dans l'émetteur.</p> <p>Weak or no battery in model. Leerer oder kein Akku im Auto. Batterie faible ou non installée</p> <p>Damaged motor. Kaputter Motor. Moteur endommagé</p> <p>Frayed or broken wiring. Beschädigte Verkabelung. Câble dénudé ou coupe</p> <p>ESC is shut down by heat protection circuit. Notabschaltung des Reglers wegen Überhitzung. Le système ESC est fermé par le circuit de protection thermique.</p>	<p>Make sure batteries are properly installed. Legen Sie die Batterien korrekt ein. Positionnez correctement les piles dans l'émetteur.</p> <p>Install charged battery. Einbauen eines geladenen Akkus. Mettez en place une batterie chargée</p> <p>Replace with new motor. Austausch durch einen neuen Motor. Remplacez par un nouveau moteur</p> <p>Splice and insulate wiring completely. Erneuern und isolieren Sie die kaputte Stelle. Faites une épissure et isolez complètement le câble.</p> <p>Stop driving immediately, do not drive the car until the Speed Controller cools down. Fahren Sie nicht weiter. Warten Sie bis der Fahrten regler abgekühlt ist. Arrêtez immédiatement de conduire, ne pilotez pas la voiture tant que le contrôleur de vitesse n'a pas refroidi.</p>
<p>No Control. Keine Kontrolle über das Auto Pas de contrôle</p>	<p>Improper antenna on transmitter or model. Zu kurze Antenne am Sender oder Auto. Antenne inadéquate sur l'émetteur ou le véhicule</p> <p>Weak or no batteries in transmitter or model. Leere oder keine Batterien im Sender oder Auto. Batterie faible ou absente dans l'émetteur ou le véhicule.</p> <p>Neutral position or trim is incorrect. Neutralposition oder Trimmung sind verstellt. La position neutre est incorrecte ou le trim n'est pas réglé.</p> <p>Are the receiver and battery connections properly connected? Sind der Empfänger und die Batterieverbindungen ordentlich verbunden? Son conectadas apropiadamente las conexiones del receptor y la batería?</p>	<p>Install charged or fresh batteries. Einbauen voller Batterien. Mettez des batteries rechargées ou neuves.</p> <p>Fully extend antenna. Ziehen Sie die Antenne vollständig aus. Dépliez complètement l'antenne.</p> <p>Adjust the steering trim. Stellen Sie die Lenkungstrimmung neu ein. Réglez le trim de direction.</p> <p>Check receiver and battery connections. Prüfen Sie Empfänger und Batterieverbindungen. Compruebe conexiones de bateria y receptor.</p>
<p>Steering and Throttle Function Reversed. Lenkung und Gas funktionieren genau verkehrt herum. Direction et accélération inverses.</p>	<p>Servo reverse switch is in wrong position. Servorichtungs-Schalter ist in der falschen Position. L'interrupteur de marche arrière du servo est dans la mauvaise position</p> <p>Please check that the wires from ESC to motor are connected properly. Bitte überprüfen Sie, ob die Kabel vom Regler zum Motor richtig sitzen. Veuillez vérifier que les fils allant de l'ESC au moteur sont correctement raccordés.</p>	<p>Set to correct position. Satz, Position zu korrigieren Vérifiez la position correcte</p> <p>Check to make sure motor and ESC are properly connected. Kontrolle sich zu vergewissern, dass Motor und ESC ordentlich verbunden sind. Le contrôle pour assurer que le moteur et ESC est convenablement connecté.</p>

Parts Reference / Übersicht aller Teile / Référence des pièces


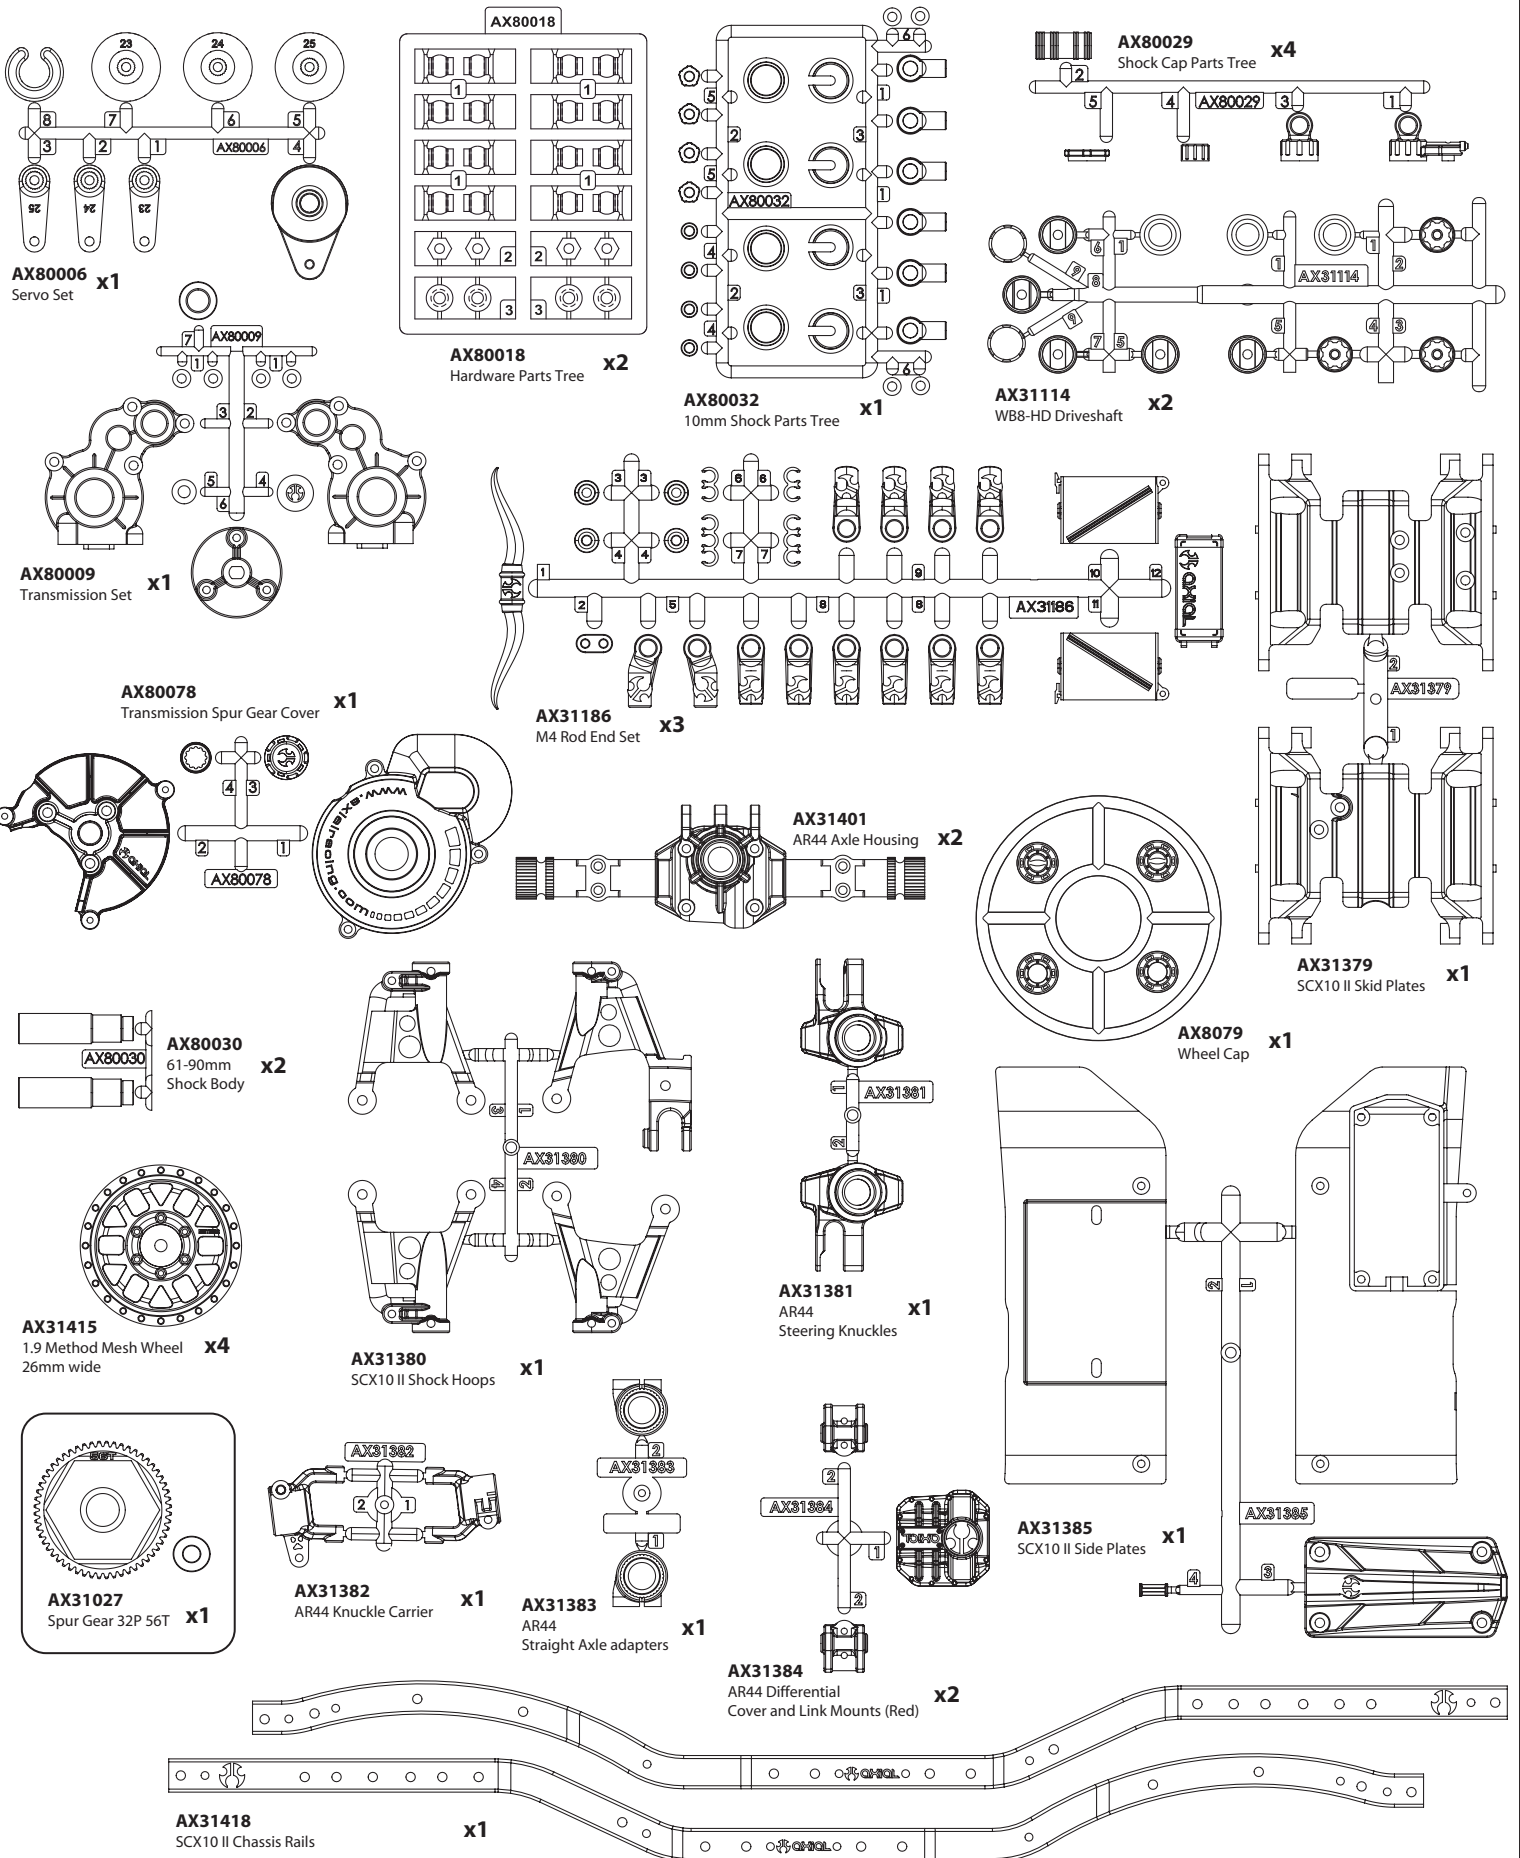


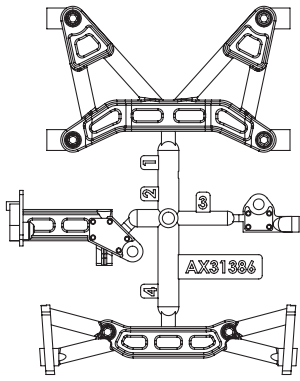


AX31386
SCX10 II Frame Braces **x1**

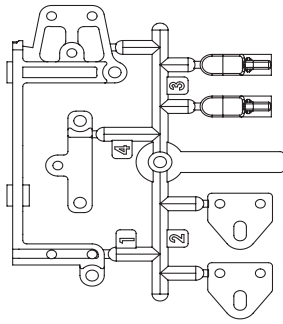


AX31387
SCX10 II Servo Mounts **x1**

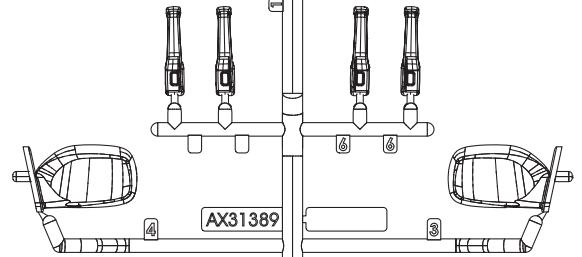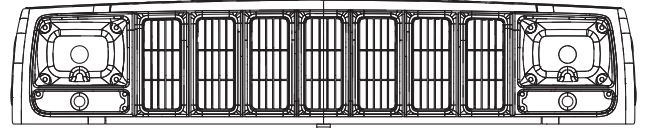


AX31389

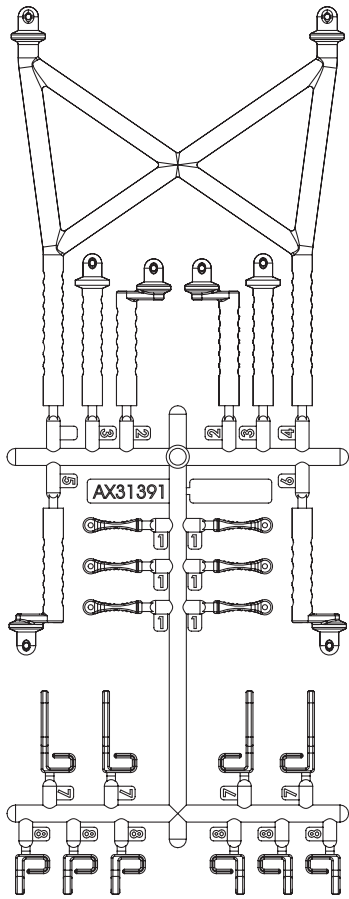

AX31391
SCX10 II Body Posts **x1**

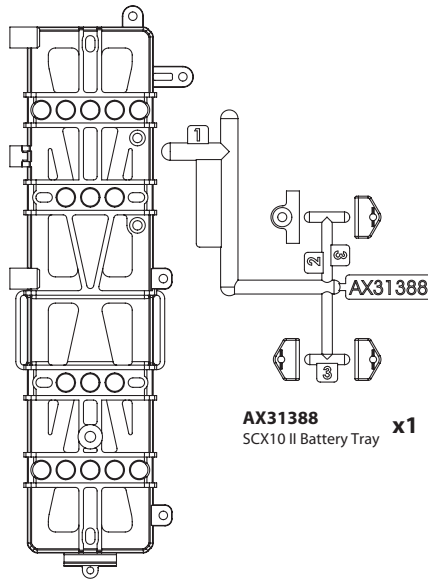



AX31388
SCX10 II Battery Tray **x1**

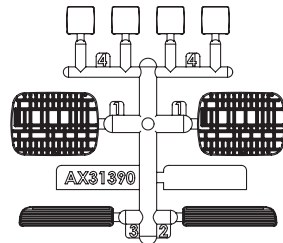


AX31390
Headlight and Turn Signal Lenses **x1**



 
AX31393
JCROffroad Vanguard
Rear Bumper **x1**

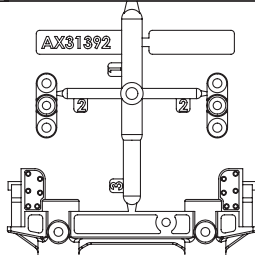


AX31392
JCROffroad Vanguard
Front Bumper **x1**

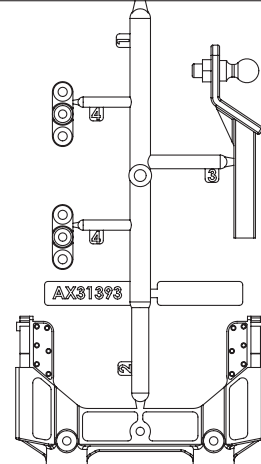


AX31393

 


AX30394
20T Drive Gear **x1**

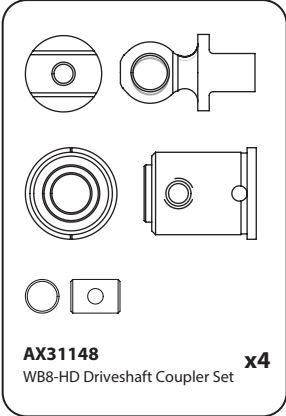

AX31148
WB8-HD Driveshaft Coupler Set **x4**

 


AX31404
AR44 Differential Locker **x2**

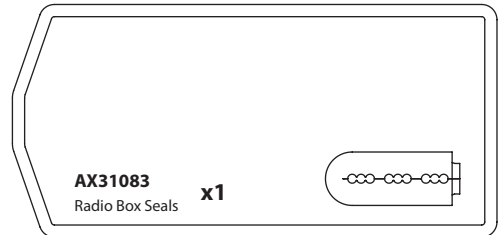


AX31083
Radio Box Seals **x1**



 
AX30413
Slipper spring 8.5x12 **x1**




AX30427
Narrow 12mm Aluminum Hub **x4**

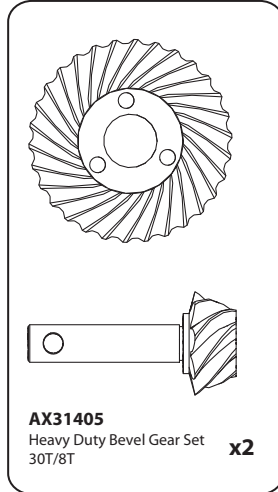


AX31405
Heavy Duty Bevel Gear Set
30T/8T **x2**

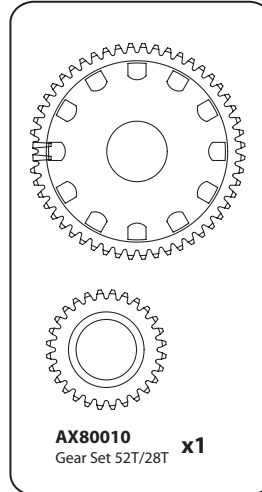


AX80010
Gear Set 52T/28T **x1**

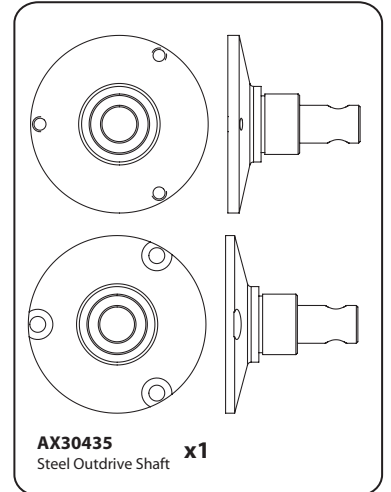


AX30435
Steel Outdrive Shaft **x1**

 


AX31145
Spring 12.5x60mm 2.63 lbs/in - (Yellow) **x2**

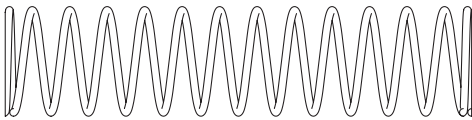


AX31441
Spring 12.5x60mm 1.13 lbs/in - (White) **x2**

 


AX30724
Pinion Gear 32P 13T **x1**

 

AX31180
Aluminum Spur Gear Spacert **x1**

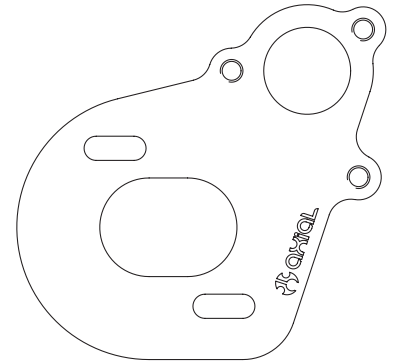

AX30491
AX10 RTR Motor Plate **x1**

 


AX30146
Shock Shaft 3x50mm **x4**




AX31149
Slipper Drive Gear Shaft 5x54.50mm **x1**



 AX31408
AR44 Straight Axle Shaft 5x106mm **x2**



AX31402
AR44 Universal Axle Set **x2**

 

AX31468
M4x80mm Steel Links **x2**



AX31473
M4x92mm Steel Links **x1**



AX31469
M4x103mm Steel Links **x2**




AX31474
M4x114mm Steel Links **x2**




AX31470
M4x124.5mm Steel Link **x2**




 


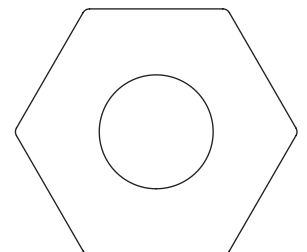



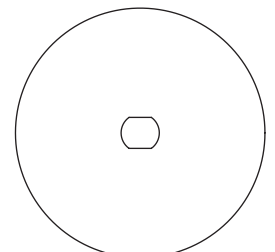






























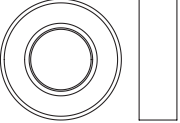







AX31467
M4x128mm Steel Links **x1**



 
AX31068
Slipper Pad **x2**




AX31026
Slipper Plate **x2**

	AXA1179 O-Ring 2.5x1.5mm	x8		AXA0286 Screw Shaft M4x12mm	x12		AX31398 M2.6x12mm Hex Socket Cap Head	x8
	AXA1163 O-Ring 7x1mm	x4		AXA180 M3x3mm Set Screw	x4		AX31399 M2.6x18mm Hex Socket Cap Head	x8
	AXA1070 Washer 3x6x0.5mm	x2		AXA291 M4x4mm Set Screw	x1		AXA083 M3x6mm Hex Socket Cap Head	x2
	AX30162 Pin 1.5x8mm	x1		AX31403 Shoulder Screw M3x4.5x10mm	x4		AXA087 M3x16mm Hex Socket Cap Head	x4
	AX30163 Pin 2x10mm	x4		AX31280 M2.6x6mm Hex Socket Button Head	x4		AXA088 M3x20mm Hex Socket Cap Head	x1
	AX31028 PIN 2.0 x11	x4		AX31373 M2.6x8mm Hex Socket Button Head	x5		AXA088 M3x25mm Hex Socket Cap Head	x3
	AX30190 PIN 2.0 x11	x1		AXA0113 M3x6mm Hex Socket Button Head	x2		AXA0109 M3x10mm Oversized Flat Hex Socket	x10
	AXA1059 6mm Body Clip	x4		AXA114 M3x8mm Hex Socket Button Head	x4		AX31372 M2.6x8mm Hex Socket Flat Head	x1
	AXA1392 E2 e-clip	x8		AXA115 M3x10mm Hex Socket Button Head	x8		AXA143 M3x6mm Hex Socket Flat Head	x1
	AXA1045 M4 Nylon Lock Nut	x5		AXA117 M3x15mm Hex Socket Button Head	x18		AXA144 M3x8mm Hex Socket Flat Head	x4
	AXA1053 M3 Nylon Lock Nut	x2		AXA118 M3x18mm Hex Socket Button Head	x3		AX31120 M3x10mm Hex Socket Flat Head	x6
	AXA1218 Bearing 5x10x4mm	x4		AXA119 M3x20mm Hex Socket Button Head	x1		AXA146 M3x12mm Hex Socket Flat Head	x8
	AXA1221 Bearing 5x11x4mm	x8		AXA120 M3x25mm Hex Socket Button Head	x2		AXA148 M3x18mm Hex Socket Flat Head	x4
	AXA1225 Bearing 8x16x5mm	x2		AXA014 M2x8mm Hex Socket Cap Head	x6		AXA0414 M2.6x10mm Hex Socket Tapping Flat Head	x3
	AXA1230 Bearing 10x15x4mm	x2		AXA013 M2x6mm Hex Socket Cap Head	x9		AXA0437 M3x15mm Hex Socket Tapping Button Head	x2
	AX31406 Bearing 7x14x3.5mm	x4						
	AX31407 Bearing 5x14x5mm	x2						

Front Axle

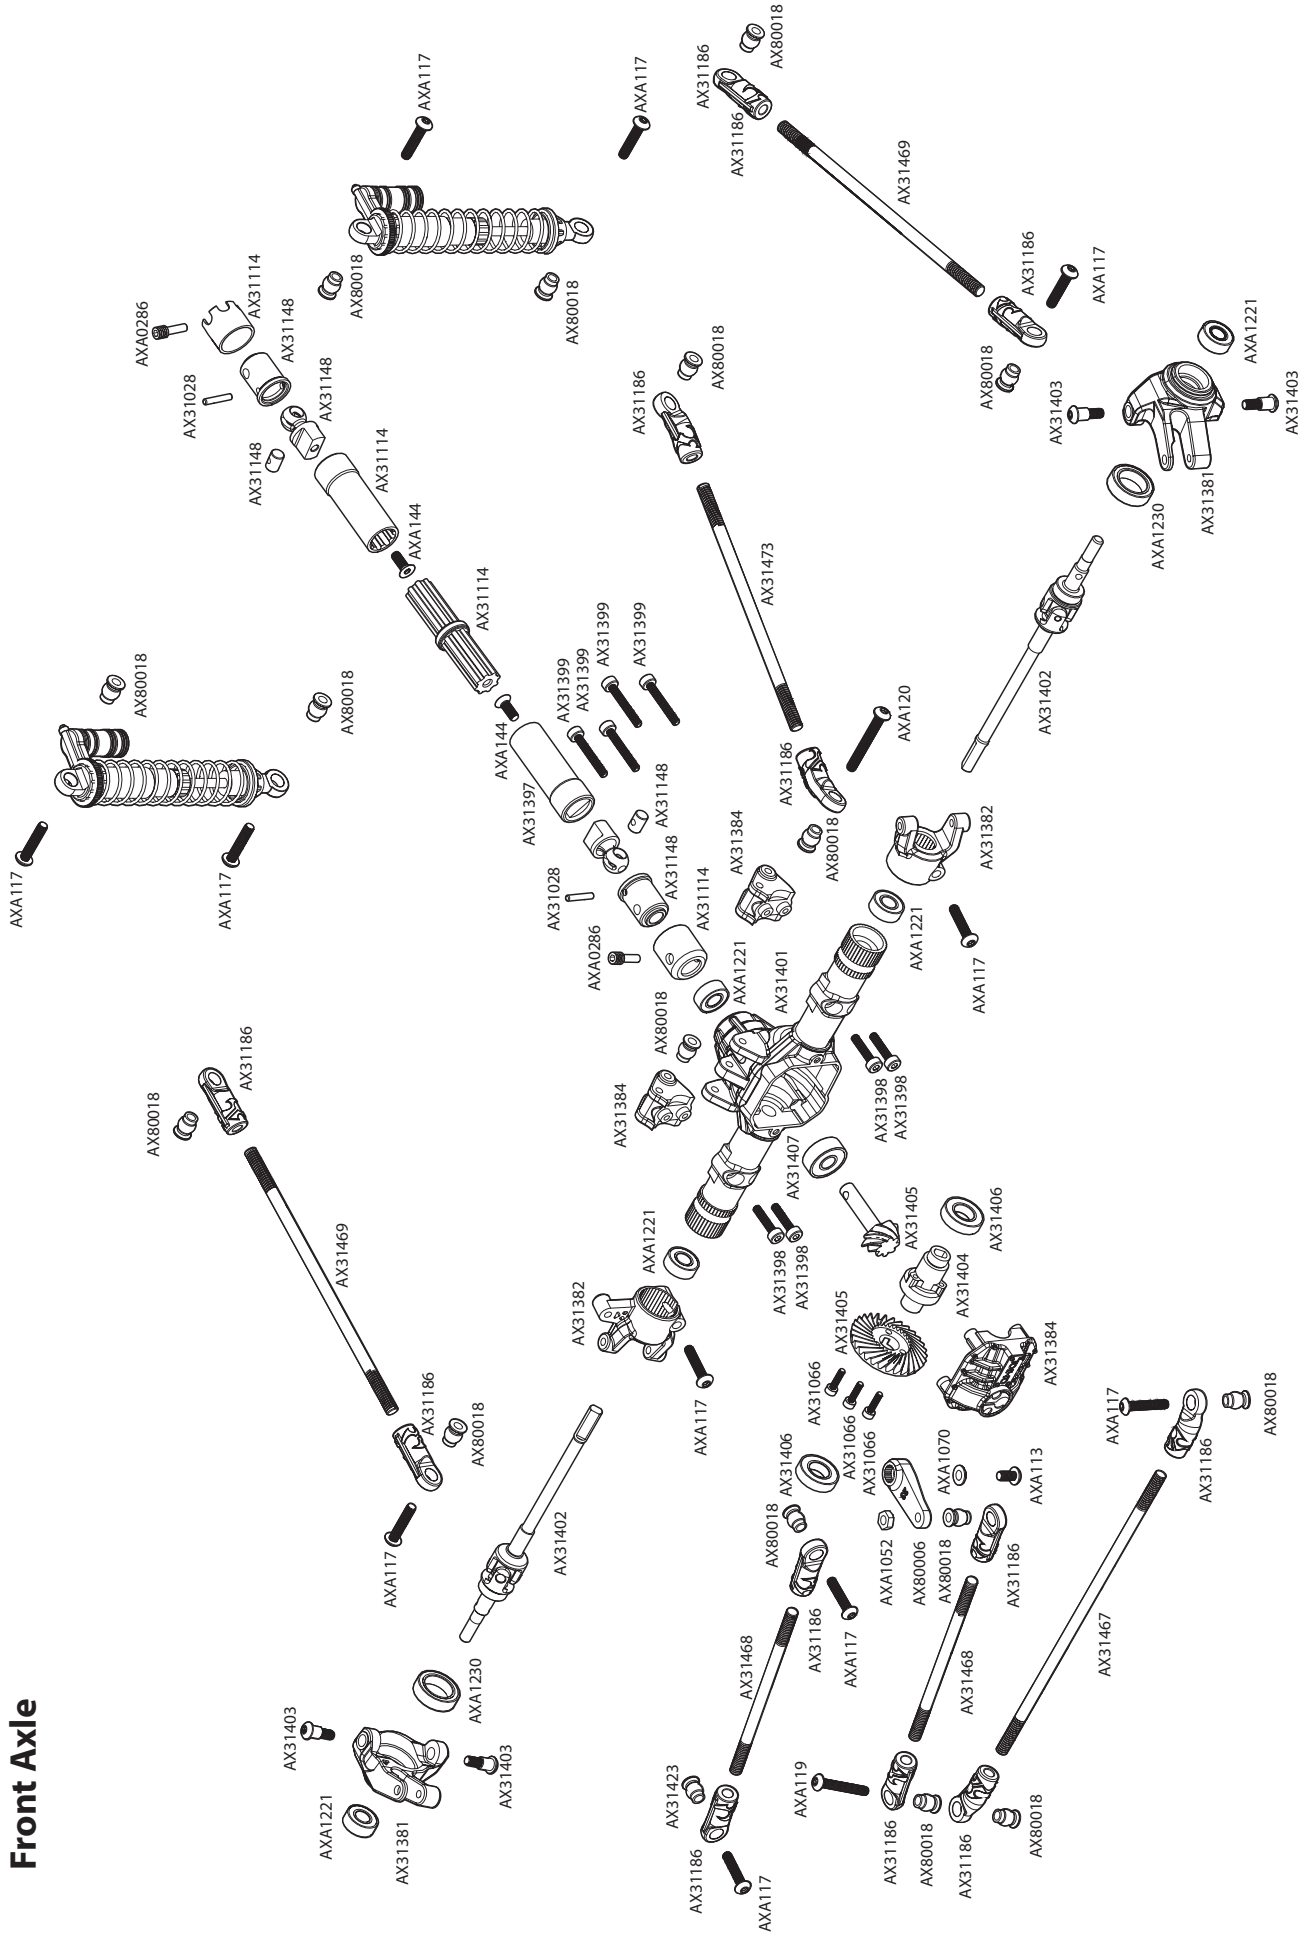

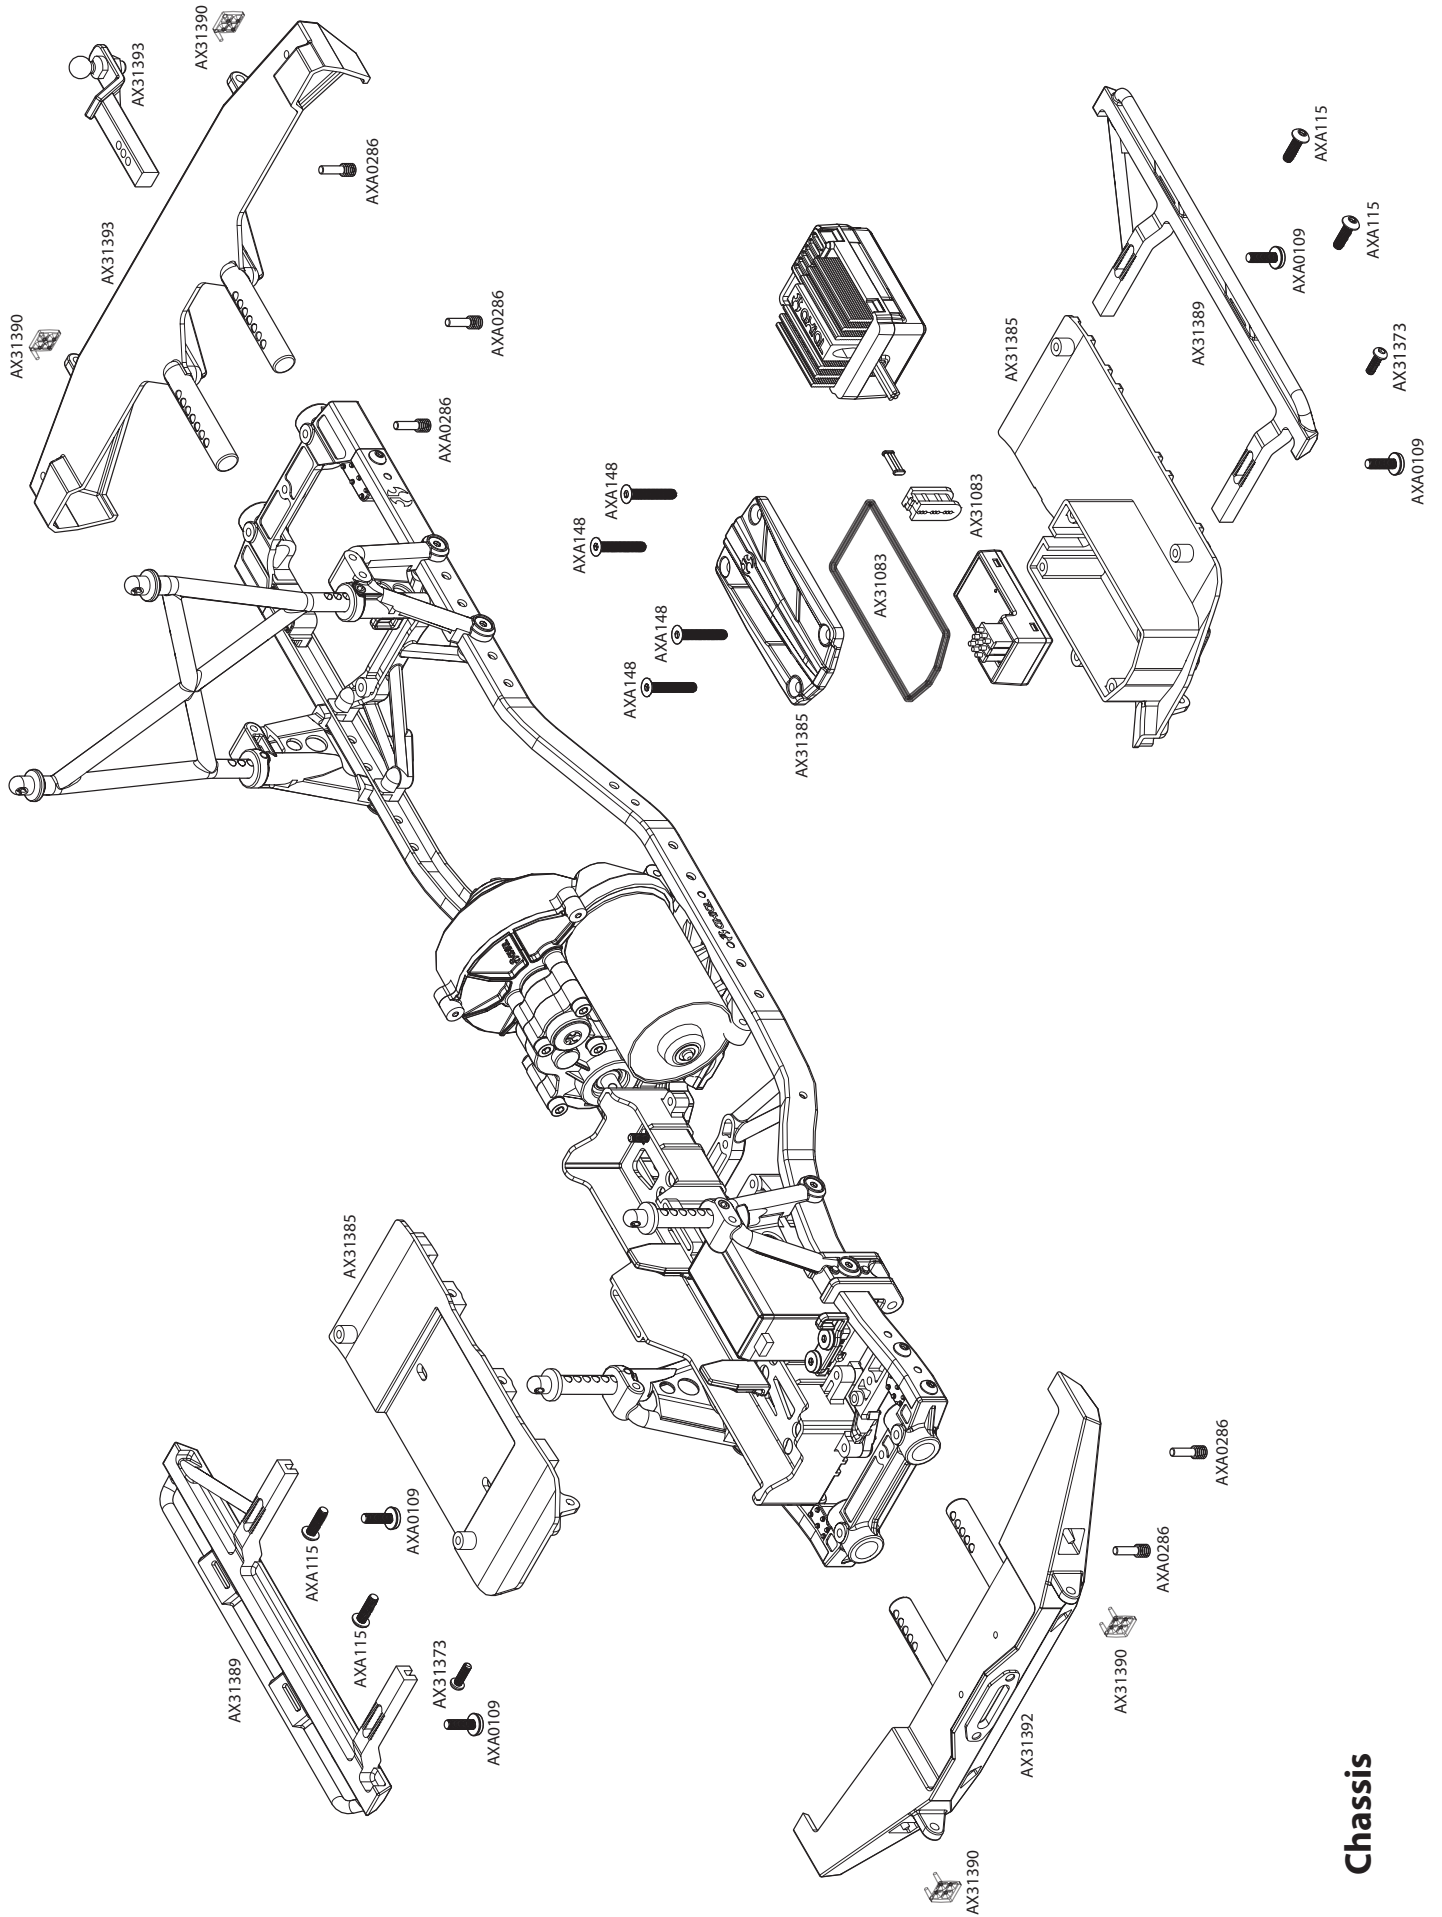

Chassis

Parts List

Part #	Description	Part #	Description
AX24206	2.4GHz Radio System (2 Channel) (AX-3, AR-3)	AX80030	61-90 Shock Body Set
AX30146	Shock Shaft 3x50 (2pcs)	AX80032	Shock Parts
AX30162	Pin 1.5x8mm (6pcs.)	AX80078	Transmission Spur Gear Cover
AX30163	Pin 2.0x10mm (6pcs.)	AX8079	Axial Hub Cover Set - Black (4pcs)
AX30166	Pin 1.5x11mm (6pcs)	AXA0109	M3x10mm Oversized Flat Hex Socket (Black) (10pcs)
AX30190	Shaft 5x18 (2pcs.)	AXA0113	M3x6mm Hex Socket Button Head (Black) (10pcs)
AX30394	20T Drive Gear	AXA013	M2x6 mm Cap Head (Black) (10pcs)
AX30413	Slipper spring 8.5x12 165 lbs/in - Black (2pcs)	AXA0286	Screw Shaft M4x2.5x12mm (6pcs)
AX30427	Axial Narrow 12mm Aluminum Hub - Black (4pcs)	AXA0414	M2.6x10mm Hex Socket Tapping Flat Head (Black) (10pcs)
AX30435	Steel Outdrive Shaft Set (2pcs)	AXA0437	M3x15mm Hex Socket Tapping Button Head (Black) (10pcs)
AX30491	AX10 RTR Motor Plate	AXA083	M3x6mm Cap Head (Black) (10pcs)
AX30724	Pinion Gear 32P 13T (3mm shaft)	AXA087	M3x16mm Cap Head (Black) (10pcs)
AX31026	Slipper Plate Washer 33x5x1.5mm (2pcs)	AXA088	M3x20mm Cap Head (Black) (10pcs)
AX31027	Spur Gear 32P 56T	AXA089	M3x25mm Cap Head (Black) (10pcs)
AX31028	Pin 2.0x11mm (6pcs)	AXA1045	M4 Nylon Lock Nut (Black) (10pcs)
AX31068	Slipper Pad 32.8x15.2x1mm (2pcs)	AXA1053	M3 Nylon Locking Hex Nut (Black) (10pcs)
AX31083	Radio Box Seals	AXA1059	6mm Body clip (Black) (10pcs)
AX31114	WB8-HD Driveshaft	AXA1070	Washer 3x6x0.5 (10pcs)
AX31120	M3x10mm Hex Socket Flat Head (Black) (10pcs)	AXA114	M3x8mm Hex Socket Button Head (Black) (10pcs)
AX31144	AE-5 Waterproof Forward/Reverse ESC w/ Drag Brake	AXA115	M3x10mm Hex Socket Button Head (Black) (10pcs)
AX31145	Spring 12.5x60mm 2.63 lbs/in - Medium (Yellow) (2pcs)	AXA1163	O-Ring 7x1mm (10pcs)
AX31148	WB8-HD Driveshaft Coupler Set	AXA117	M3x15mm Hex Socket Button Head (Black) (10pcs)
AX31149	Slipper Drive Gear Shaft 5x54.50mm	AXA1179	O-Ring 2.5x1.5mm (10pcs)
AX31180	Aluminum Spur Gear Spacer	AXA118	M3x18mm Hex Socket Button Head - Black (10pcs)
AX31186	M4 Rod End Set	AXA119	M3x20mm Hex Socket Button Head (Black) (10pcs)
AX31280	M2.6x6mm Hex Socket Button Head (Black) (10pcs)	AXA120	M3x25mm Hex Socket Button Head (Black) (10pcs)
AX31312	35T Electric Motor	AXA1218	Bearing 5x10x4mm (2pcs)
AX31337	2000 Jeep® Cherokee Body - .040" (Clear) - Body Only	AXA1221	Bearing 5x11x4mm (2pcs)
AX31372	M2.6x8mm Hex Socket Flat Head (Black) (10pcs)	AXA1225	Bearing 8x16x5mm (2pcs)
AX31373	M2.6x8mm Hex Socket Button Head (Black) (10pcs)	AXA1230	Bearing 10x15x4mm
AX31379	SCX10 II Skid Plates	AXA1392	E2 e-clip (10pcs)
AX31380	SCX10 II Shock Hoops	AXA144	M3x8mm Hex Socket Flat Head (Black) (10pcs)
AX31381	AR44 Steering Knuckles	AXA146	M3x12mm Hex Socket Flat Head - Black (10pcs)
AX31382	AR44 Steering Knuckle Carriers	AXA148	M3x18mm Hex Socket Flat Head (Black) (10pcs)
AX31383	AR44 Straight Axle Adapters	AXA180	M3x3mm Set Screw (Black) (10pcs)
AX31384	AR44 Differential Cover and Link Mounts (Red)	AXA291	M4x4mm Set Screw (Black) (6pcs.)
AX31385	SCX10 II Side Plates		
AX31386	SCX10 II Frame Braces		
AX31387	SCX10 II Servo Mounts		
AX31388	SCX10 II Battery Tray		
AX31389	2000 Jeep® Cherokee Exterior Details		
AX31390	Headlight and Turn Signal Lenses		
AX31391	SCX10 II Body Posts		
AX31392	JCROffroad Vanguard Front Bumper		
AX31393	JCROffroad Vanguard Rear Bumper		
AX31397	WB8-HD Shorty Driveshaft		
AX31398	M2.6x12mm Cap Head (Black) (10pcs)		
AX31399	M2.6x18mm Cap Head (Black) (10pcs)		
AX31401	AR44 Axle Housing		
AX31402	AR44 Universal Axle Set (2pcs)		
AX31403	M3x4x10mm Hex Socket Button Head Shoulder Screw (Black) (6pcs)		
AX31404	AR44 Differential Locker		
AX31405	Heavy Duty Bevel Gear Set - 30T/8T		
AX31406	Bearing 7x14x3.5mm (2pcs)		
AX31407	Bearing 5x14x5mm (2pcs)		
AX31408	AR44 Straight Axle Shaft 5x106mm (2pcs)		
AX31412	1.9 BFGoodrich All-Terrain T/A KO2 - R35 Compound (2pcs)		
AX31415	1.9 Method Mesh Wheels - Black (2pcs)		
AX31418	Heavy Duty Bevel Gear Set - 30T/8T		
AX31441	Spring 12.5x60mm 1.13 lbs/in - (White) (2pcs)		
AX31467	M4x128mm Steel Links (2pcs)		
AX31468	M4x80mm Steel Links (2pcs)		
AX31469	M4x103mm Steel Links (2pcs)		
AX31470	M4x124.5mm Steel Links (2pcs)		
AX31473	M4x92mm Steel Links (2pcs)		
AX31474	M4x114mm Steel Links (2pcs)		
AX80006	Servo Set		
AX80009	Transmission Set		
AX80010	Gear Set		
AX80018	Hardware Parts Tree		
AX80029	Shock Cap Parts Tree		

Option Parts

Part #	Description	Part #	Description
AX04032	AX10 Ridgecrest Body - .040" (Clear)	AX4010	Axial Dingo Truck Body - .040" uncut (Clear)
AX04033	2012 Jeep Wrangler Unlimited Rubicon™ Body - .040" (Clear) - Body Only	AX4010R	Axial Dingo Truck Body - .040" uncut (Clear) - Body Only
AX04034	2012 Jeep Wrangler Unlimited Rubicon™ Roof - .040" (Clear)	AX4025	Axial Trail Honcho Truck Body - .040" uncut (Clear) w/Molded Rear Cage
AX04035	2012 Jeep Wrangler Unlimited Rubicon™ Body - .040" (Clear) - Complete	AX4025R	Axial Trail Honcho Truck Body - .040" uncut (Clear) - Body Only
AX04038	Jeep® Wrangler Rock Racer Body - .040" (Clear) - Body Only	AX80037	Interior Details Parts Tree - Black
AX04039	AX10 Deadbolt Body - .040" (Clear) - Body Only	AX80038	Exterior Detail Parts Tree - Black
AX08140	1.9 Walker Evans Street Wheel - Chrome/Black (2pcs)	AX80039B	1/10th Scale Rear Plate Bumper Set
AX12019	1.9 Maxxis Trepador Tires - R35 Compound (2pcs)	AX80040	1/10th Scale Fender Flare Set (2pcs)
AX24003	20T Electric Motor	AX80041	1/10th Scale Rock Rails Set (2pcs)
AX24007	Axial 55T Electric Motor	AX80044	Axial SCX10 Tube Bumper Parts Tree
AX24251	Axial NVS - Night Visions System	AX80045	Axial Light Bucket Set (Black)
AX24252	Axial Double LED Light String (White LED)	AX80047	Interior Details Parts Tree - Chrome
AX24253	Axial Double LED Light String (Red LED)	AX80048	Exterior Detail Parts Tree - Chrome
AX24254	Axial Double LED Light String (Orange LED)	AX80049	Axial LED Lens Set - Yellow/Clear (4pcs)
AX24255	Axial Single LED Light String (White LED)	AX80085	Universal Mount 5 Bucket Light Bar (Black)
AX24256	Axial 5 LED Light String (White LED)	AX80086	Light Bar Lenses (Clear) (5pcs)
AX24257	Simple LED Controller w/LED lights (4 white and 2 Red)	AX80115	Light Bar Lens Grills (Axial, PIAA, Un-Marked)
AX24258	4 LED Light String (White LED)	AX8080	Axial Hub Cover Set - Satin Chrome (4pcs)
AX24259	Axial AE-2 Forward/Reverse ESC w/Drag Brake	AX8087	Axial 1.9 8 Hole Beadlocks - Black (2pcs)
AX24260	AE-3 Vanguard ESC	AX8088	Axial 1.9 8 Hole Beadlocks - Satin Chrome (2pcs)
AX30090	Axial 61-90mm Aluminum Shock Set - 7mm Piston (2pcs)	AX8122	Axial 1.9 Beadlock Ring - Grey (2pcs)
AX30103	Icon 61-90mm Aluminum Shock Set - 7mm piston (2pcs)	AX8127	Axial 1.9 Rock Beadlock Ring - Grey (2pcs)
AX30114	Axial Hard Anodized Aluminum Shock Reservoir (2pcs)	AXA1046	M4 Serrated Nylon Lock Nut (Blue) (4pcs)
AX30115	Axial Hard Anodized Aluminum Pre-load collar (2pcs)	AXA1076	Cap Head Washer M3x10mm (4pcs)
AX30117	Axial Hard Anodized Aluminum Shock Body 10x38mm (2pcs)	AXA1101	Cone Washer 3x6.9x2mm (6pcs)
AX30130	Icon Clear Anodized Aluminum Shock Body 10x38mm (2pcs)	AXA1104	Cone Washer 3x6.9x2mm - Orange (6pcs)
AX30131	Icon Clear Anodized Aluminum Shock Reservoir (2pcs)	AXA1105	Cone Washer 3x6.9x2mm - Grey (6pcs)
AX30132	Machined Shock Piston 7mm - 1.5x3 (4pcs)	AXA1331	Flanged Ball 3x5.8x7mm (6pcs)
AX30200	Spring 12.5x20mm 3.6 lbs/in - Super Soft (Red) - (2pcs)	AXA1412	0.5x6mm Spacer - Grey (6pcs)
AX30201	Spring 12.5x20mm 4.32 lbs/in - Soft (White) - (2pcs)	AXA1413	1x6mm Spacer - Grey (6pcs)
AX30202	Spring 12.5x20mm 5.44 lbs/in - Medium (Green) - (2pcs)	AXA1414	2x6mm Spacer - Grey (6pcs)
AX30203	Spring 12.5x20mm 6.53 lbs/in - Firm (Yellow) - (2pcs)	AXA1415	3x6mm Spacer - Grey (6pcs)
AX30204	Spring 12.5x20mm 7.95 lbs/in - Super Firm (Blue) - (2pcs)	AXA1416	4x6mm Spacer - Grey (6pcs)
AX30205	Spring 12.5x40mm 2.7 lbs/in - Super Soft (Red) - (2pcs)	AXA1417	5x6mm Spacer - Grey (6pcs)
AX30206	Spring 12.5x40mm 3.6 lbs/in - Soft (White) - (2pcs)	AXA1418	6x6mm Spacer - Grey (6pcs)
AX30207	Spring 12.5x40mm 4.08 lbs/in - Medium (Green) - (2pcs)	AXA1419	7x10mm Post - Grey (2pcs)
AX30208	Spring 12.5x40mm 5.44 lbs/in - Firm (Yellow) - (2pcs)	AXA1420	7x15mm Post - Grey (2pcs)
AX30209	Spring 12.5x40mm 6.81 lbs/in - Super Firm (Blue) - (2pcs)	AXA1421	7x20mm Post - Grey (2pcs)
AX30487	AX10 Locked Transmission Set	AXA1422	7x25mm Post - Grey (2pcs)
AX30547	1.9 Internal Wheel Weight Ring 43g/1.5oz (2pcs)	AXA1423	7x30mm Post - Grey (2pcs)
AX30548	1.9 Internal Wheel Weight Insert 9g/0.33oz (4pcs) (for use with AX30547)	AXA1424	7x35mm Post - Grey (2pcs)
AX30709	Universal 5 Bucket Light Bar Set	AXA1425	7x40mm Post - Grey (2pcs)
AX30834	Aluminum Servo Horn 23T	AXA1426	7x45mm Post - Grey (2pcs)
AX30835	Aluminum Servo Horn 24T	AXA1427	7x50mm Post - Grey (2pcs)
AX30836	Aluminum Servo Horn 25T	AXA1428	7x55mm Post - Grey (2pcs)
AX31047	Brushless 3150KV Electric Motor	AXA1429	7x60mm Post - Grey (2pcs)
AX31093	1.9 BFGoodrich Krawler T/A - R35 Compound (2pcs)	AXA1430	7x65mm Post - Grey (2pcs)
AX31094	1.9 Black Rock CRC Wheels - Black (2pcs)	AXA1431	7x70mm Post - Grey (2pcs)
AX31097	3 Port High Output LED Controller		
AX31098	8 LED Light String (White LED)		
AX31143	1.9 Falken Wildpeak M/T - R35 Compound (2pcs)		
AX31176	Spawn Body - .040" (Clear)		
AX31250	M4 Serrated Nylon Lock Nut (Black) (10pcs)		
AX31267	Jeep® NuKizer 715 Body - .040" (Clear)		
AX31268	Jeep® Mighty FC Body - .040" (Clear)		
AX31312	35T Electric Motor		
AX31314	Aluminum Shock Body 12x47.5mm (Clear Anodized) (2pcs)		
AX31329	35T Trail Breaker Electric Motor (Rebuildable)		
AX31330	55T Trail Breaker Electric Motor (Rebuildable)		
AX31338	Trail Breaker Electric Motor Rebuild Kit		
AX31394	JCROffroad Vanguard Spare Tire Carrier		
AX31396	Winch Spool and Servo Mounts		
AX31437	AR44 Differential Cover and Link Mounts (Black)		
AX31438	AR44 Locked Axle Set (Front or Rear) (Complete)		
AX31439	SCX10 Transmission Set (Complete)		
AX31440	SCX10 Transmission 2-Speed Gear Set		
AX31442	Spring 12.5x60mm 3.03 lbs/in - (Blue) (2pcs)		
AX31443	Spring 12.5x60mm 1.70 lbs/in - (Green) (2pcs)		
AX31444	Spring 12.5x60mm 0.70 lbs/in - (Red) (2pcs)		
AX31465	SCX10 II Front Links Set (Aluminum)		
AX31466	SCX10 II Rear Links Set (80mm, 94mm, 101.5mm) (Aluminum)		

OFFICIALLY LICENSED TECHNICAL PARTNERS:



EXPLORE

facebook.com/axialinc | instagram.com/axialracing | twitter.com/axialrc
youtube.com/axialvideos | flickr.com/axialrc



Jeep, the Jeep grille and related logos, vehicle model names and trade dress are trademarks of FCA US LLC and used under license by Axial Inc. © 2016 FCA US LLC.

BFGoodrich® Tires and All-Terrain T/A® KO2 Trademarks are used under License from Michelin

©2016 Axial R/C, Inc. A subsidiary of Hobbico, Inc. All Rights Reserved.

AX90047-1001