



HOW TO DRAIN YOUR INFLATABLE HOT TUB

PLEASE ALLOW 2HRS PRIOR TO COLLECTION FOR THE DRAINING PROCESS



1. Switch off the Heater & Filter button on the pump



2. Unscrew The Filter Housing & Remove this from the Hot Tub



3. Unscrew the 3 connectors on the pump (Where the pump attaches to the hot tub)

4. Move the pump back slightly from the hot tub. The water will drain out and disperse on to the surrounding area, the equipment is fully waterproof, you can also pull the plug on the hot tub floor this will help drain a little faster. if you prefer to drain via the hose please let us know during set up- please note you will need to allow extra draining time.

If you need any help please contact us on using our direct phone numbers on your receipt provided to you upon installation.

NEED HELP? CONTACT US