



Illuminated Push Button Switches, Ip65
Joystick Switch

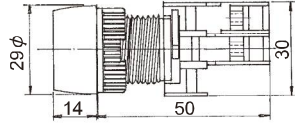


LBF22-1/O Illuminated
LBF22-1/C



EPFL22-10/C
Push ON-Push OFF Illuminated

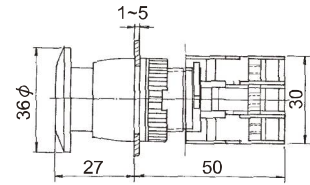


LBF22-10/C Illuminated

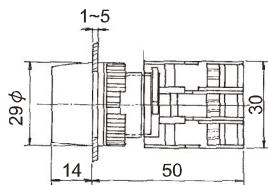

EBL22-1/O
EBL22-1/C




EBL22-10/C Illuminated

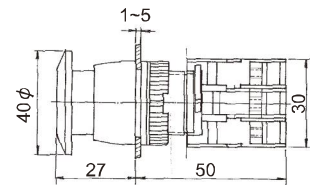


LBL22-1/O
LBL22-1/C





LBL22-10/C Illuminated

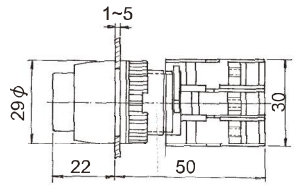

PFL22-10/C
Push ON-Push OFF Illuminated

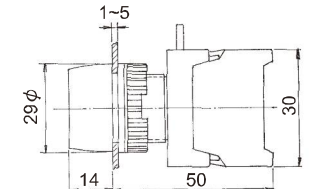

Monolever switch (Joystick Switch)

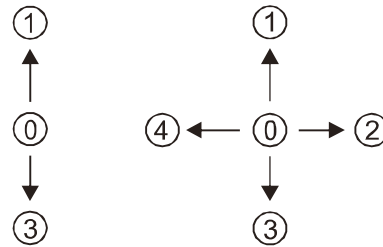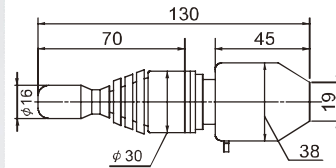

Position	1, UP	4, Left	Center	2, Right	3, Down
	23O O24 13O O14 21O O22 11O O12	23O O24 13O O14 21O O22 11O O12	23O O24 13O O14 21O O22 11O O12	23O O24 13O O14 21O O22 11O O12	23O O24 13O O14 21O O22 11O O12
	23O O24 13O O14 21O O22 11O O12		23O O24 13O O14 21O O22 11O O12		23O O24 13O O14 21O O22 11O O12

MS	22	4	A	4O
Type	Mounting	Position	Function	Contact
MS: Joystick switch	22 : 22φ 25 : 25φ	2 Position 4 Position	A: Auto return M: Maintain	2O : 2N/O 4O : 4N/O