

PahaQue Wilderness - Little Guy ScreenRoom Mini™ PN - SR10B SETUP INSTRUCTIONS



- **SET-UP---**Your tent can be easily set-up in 5 minutes or less, if you follow the basic sequence detailed below. If time allows, we would recommend that you read through these instructions in their entirety & do a practice set-up at home before taking the tent into the wilderness. Then you can be sure all components are present and functional, and step through the set-up sequence at a leisurely pace to learn the most efficient techniques.
- **TAKE DOWN ---** For the take down, simply reverse the set-up sequence.
- **LONG TERM STORAGE ---** Your tent is more likely to be damaged by mold, mildew or bacteria during storage than by elements while properly set up and in use. Make sure that all food or other organic are removed and that your tent is thoroughly dry before packing into the stuff bag. If you have to pack up and leave the campsite while your tent is damp, set it up later at home and allow it thoroughly dry prior to long-term storage.
- **POLE SET ---** Take care in handling the poles during set-up and take down when they are most vulnerable to accidental damage. Never use the poles for anything other than to support the tent.
 - **Fiberglass Arch Roof Poles -- 2 ea.**




- **Steel Corner Poles -- 4 ea.**



- **Steel Awning Poles – 2 ea.**



To set up the LittleGuy ScreenRoom Mini:

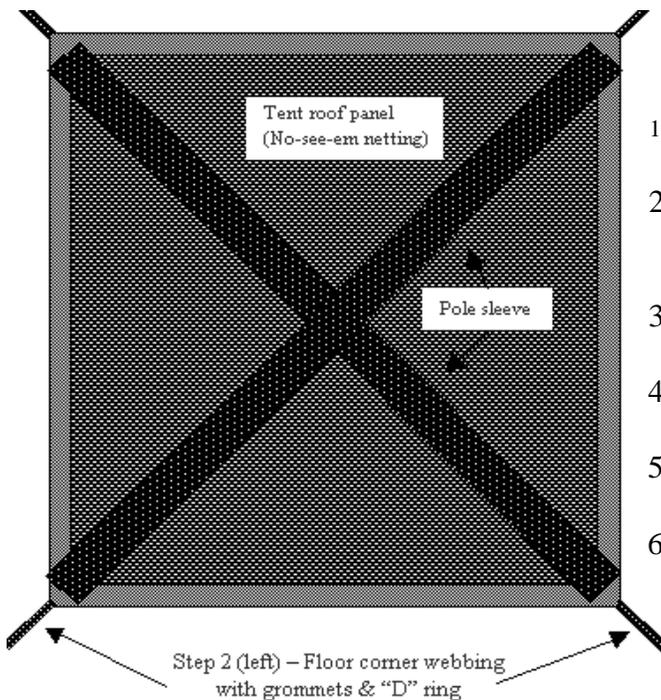

1. Unpack the tent & lay out the floor (black) facing down on a flat, level site on the ground.
2. Locate the 4 floor corners webbing. Stretch and stake the floor corners to the ground using the ground stakes provided.
3. Unfold and assemble the 6 main poles (2 roof, 4 corner poles). Be sure sections are fully engaged.
4. Locate the 2 mesh pole sleeves sewn into the mesh roof. The sleeves cross at the center of the roof.
5. Insert the 2 long fiberglass "arch" poles through the roof pole sleeves.
6. With the tent remaining on the ground, insert the end of the roof poles into the connectors located at all 4 corners of the roof. Be sure the sections are fully engaged. Your tent roof will now have a dome shape.

7. Starting at one corner, insert the steel corner pole into the connector at the roof corner, and then insert the pin located at the bottom corner of the tent into the bottom of the corner pole. Repeat this step at the remaining three corners. Now your tent is fully erected.

NOTE: The small hole in each of the four corner poles should be closest to the roof. These are used to install the rainfly.

8. Once the tent is erect, it can be repositioned & the floor re-staked to smooth out wrinkles.

9. To install the rainfly, simply pull the fly over the roof of the tent and secure by inserting the hooks on the four corners of the fly into the holes in the corner poles.

10. Always be sure to use the provided guylines and ground stakes to secure your Green Mountain tent to the ground.

11. To use the front door as an awning, extend the awning out, and insert the tips of the two awning poles into the grommets on the outer corners of the awning. Attach guylines, and secure to the ground using ground stakes provided. Adjust guylines as needed to adjust awning pitch and slope.

When used and cared for correctly, your new **LittleGuy ScreenRoom Mini** will provide years of reliable service in any conditions. Thanks for being a PahaQue customer!

NOTE: Register your purchase, download additional copies of these instructions and more at www.pahaque.com

****Avoid prolonged exposure to the sun! UV damage is considered normal wear and tear, and is not covered by your lifetime warranty.***

Attaching the Little Guy ScreenRoom to your Trailer:

NOTE: Beginning in 2013, Little Guy is installing a gutter rail above and below the trailer door (see photo at right), for use in attaching the ScreenRoom to the Trailer. If you have an older model Little Guy trailer, you will need to purchase LGSR10A Mounting Kit in order for your ScreenRoom to attach to your trailer. You can call us toll-free at 888.700.TENT (8368) or visit www.pahaquecustom.com for further information.



Gutter Rail installed above and below trailer door

On the latest version of the Little Guy ScreenRoom, there have been a number of improvements, such as the use of a separating door collar which simplifies attachment of the ScreenRoom to your trailer, and provides a very strong connection.

Steps for attaching the ScreenRoom to the Trailer:

1. Locate the door collar sleeve that is included with your ScreenRoom. You will notice that one edge of the collar has two drawstrings, the other has a zipper.
2. Start by slightly tightening both drawstrings. This will make attaching the collar to the door gutter mount a bit easier.
3. Place the door collar onto the trailer by placing the drawstring edge into the gutter around the trailer door perimeter. *ALSO, make sure the zipper starting point is positioned at the top. This will position the drawstrings on either side of the door, NOT at the top and bottom.*
4. Once the collar is properly positioned, tighten both drawstrings until the collar is securely in place in the gutter around the door.
5. Now you can slide your ScreenRoom next to the trailer, and position it so that the door opening on the tent body correctly aligns with the trailer door and tent collar.
6. From the inside, use the zipper to attach the tent body to the collar connector.
7. That's it! Your Little Guy ScreenRoom Mini by PahaQue is now securely attached to your Little Guy trailer.



Collar installed on trailer gutter rail. Note drawstrings are on both sides.

**You can also view a video of this set-up procedure by visiting the PahaQue YouTube channel at www.youtube.com/PahaQueCamping*