

PahaQue Wilderness, Inc
T@G Clamshell Tent
SETUP INSTRUCTIONS



Thank you for purchasing the T@G Clamshell Tent, another quality product built in the USA by PahaQue Custom Shop. This product is backed by our Limited Lifetime Warranty against any and all defects in materials and workmanship. When used and cared for properly, this product will provide many years of reliable service.

A FEW QUICK NOTES:

- **SET-UP**---Your Tent can be easily set-up in 10 minutes or less by one or two people, if you follow the basic sequence detailed below. If time allows, we would recommend that you read through these instructions in their entirety and do a practice set-up at home before heading into the wilderness. Then you can be sure all components are present & functional, and proceed through the set-up sequence at a leisurely pace to learn the most efficient techniques.
- **TAKE DOWN** --- For the take down, simply reverse the set-up sequence.
- **LONG TERM STORAGE** --- Your T@G Clamshell Tent is more likely to be damaged by mold, mildew or bacteria during storage than by elements while set up and in use. Make sure that all food or other organic material is removed, and that your tent is thoroughly dry before packing into the stuff bag. If you have to pack up and leave the campsite while your tent is damp, set it up later at home & allow it to dry thoroughly for long-term storage.

1. **Locate** the following parts included with your T@G Clamshell Tent:

- Tent body
- Velcro strip
- 2 Fiberglass Roof poles (118")
- 2 Aluminum corner poles (78")
- 2 white keder rail (Totaling roughly 60")
- Ground stakes (6)
- Corner protectors (2)
- 1 Middle Lateral Fiberglass roof pole (65")

USEFUL TIPS:

- If you have difficulty sliding the keder cord through the rail, a little dish soap will help without damaging the Tent.
- While taking care not to over-tighten the adjustable webbing straps, it is important to not allow the Tent to sag where water could collect during a rain storm.
- Do not store your Tent while wet for any extended period; always dry completely prior to long-term storage.

You can register your product online by visiting www.pahaque.com, or by calling us toll-free at **1.888.700.TENT** (8368).

How to install your T@G Clamshell Tent by PahaQue

1. First, locate the keder rails and remove adhesive covering. Placement of keder rails should be 3” above hatch hinge, but below the antenna. (Surface must be clean and dry. Use rubbing alcohol or window cleaner.) Line up keder rails so that they form 1 continuous channel across trailer roof. Affix and press firmly. It’s best if keder rails are left overnight to fully set before attaching tent.

2. Locate corner protectors and affix them to corners of clamshell hatch as pictured. This is to protect the roof of the tent from the sharp corners of the hatch.



2. Next, insert keder cord on tent body into keder rail.

Photo A



3. Next, locate and assemble both roof poles and insert into roof sleeves. Beginning at the front, right side of tent (opposite the trailer) Make sure leading edge of pole is fully seated into roof pole sleeve. Next, insert trailing end of roof pole into plastic elbow connector. Repeat for other roof pole.



4. Next, locate and assemble both aluminum corner poles. Insert open ends into elbow connectors from Step 3 and pegs into grommets near ground. Photo D



5. Exact placement of the Velcro on the floor of the trailer for the skirt varies and is at the users’ discretion. The skirt shouldn’t be too tight to that it doesn’t pull of the Velcro when standing near it. Remove adhesive backing from Velcro and affix to trailer floor as shown.



6. Next, secure “C” clips to corner poles. Photo E

7. Locate and assemble lateral Fiberglass roof pole. This inserts into the 2 webbing pockets in the ceiling of tent near the edge of the Clamshell hatch. Insert pole into pocket with Velcro opening last. Photo F.



8. Lastly, using the included ground stakes, secure tent to ground using all ground stake-down points along outside bottom edge of tent.

!CAUTION!

The effects of wind and rain on the Tent are unpredictable. Damage to the trailer and/or Tent may result. Please remove the Tent in heavy wind or rain. Damage due to weather is not covered by your warranty.