

KALORIK
MAXX
AIR FRYER OVEN GRILL

CHARCOALIN'

The honeycomb activated charcoal filter prevents smoke and food odors from releasing into your home when cooking with the MAXX Air Fryer Oven Grill.

SET INCLUDES:

3 activated charcoal filters

USE AND CARE INSTRUCTIONS

INSTALLATION:

1. Locate the air exhaust on the back of the unit.
2. Take the filter out of its bag.
3. With two hands, grab filter on both sides and place above the filter slots.
4. Once aligned, slide down pushing in from the sides.

Enjoy your smoke and odor free cooking!

CARE:

Gently wipe down on the side of the filter to remove dust. Do not touch the inside of the honeycomb filter as it would damage it. Cracking of the honeycomb filter is normal wear and tear.

Replace the filter after 2 months of regular use.

CONTACT US:

Your satisfaction is very important to us. If you have any questions or concerns, or are unhappy with your product, please reach out to SERIVCE@KALORIK.COM, or by phone at our toll free number: +1 888- KALORIK.