

**KALORIK**  
**[ MAX ]<sup>x</sup>**  
**AIR FRYER OVEN**

**RIDE OR DRY**  
**FOOD DEHYDRATOR SET**

Preserve your harvest or make your own delicious beef jerky! The Kalorik MAXX Air Fryer Oven "Ride or Dry" 7-piece Food Dehydrator Set includes:

- 3 Dehydrator racks
- 1 Pair of Tongs
- 1 Silicone mat
- 2 Oven mitts

**USE AND CARE INSTRUCTIONS**

**USE INSTRUCTIONS:** Use the dehydrator racks to dehydrate your favorite fruits and vegetables, or make homemade beef jerky. Start by flipping the 2-in-1 steak and dehydrator tray that comes with your MAXX upside down. Insert tray into level 5, the dehydrator slot. Place food on dehydrator racks in a single layer, and slide racks into the levels below. Select the DEHYDRATE function and press Start/Stop. Place silicone mat on countertop to rest hot accessories during cooking. For more info on the Dehydrate function, refer to page 13 of the Kalorik MAXX Air Fryer Oven user manual.

**CARE INSTRUCTIONS:** Soak dehydrator racks with soapy water or wash in the dishwasher. Do not use abrasive sponges. Oven mitts can be cleaned in the washing machine, or scrubbed with detergent and rinsed thoroughly under cold water until suds are gone. Gently cleanse silicone mat with soap and water. Do not place mat in dishwasher.

ACCESSORIES WILL BE HOT. ALWAYS WEAR HEAT-RESISTANT OVEN MITTS. USE CAUTION WHEN HANDLING.

**CONTACT US:** We hope you're enjoying your "Ride or Dry" Food Dehydrator Set. If you have any questions or concerns, or are unhappy with your product, please reach out to us at [SERVICE@KALORIK.COM](mailto:SERVICE@KALORIK.COM), or by phone at our toll free number: +1 888-KALORIK.