



SPARROW MK4 OWNERS MANUAL

- INSTALLATION**
- COMMISSIONING OF UNIT**
- MAINTENANCE**
- SPECIFICATIONS**
- OPERATING INSTRUCTIONS**
- SPARE PARTS**
- WIRING DIAGRAM**

WARRANTY OF REFRIGERATED AIRCONDITIONING**Warranty within Australia**

We undertake by this warranty to rectify, free of charge, at our nearest authorised service agent, any fault due to faulty workmanship or replacement of any faulty components within 12 months **from the date of the first retail purchase thereof**. This undertaking is conditional upon the appliance being installed and operated in accordance with our instructions, and does not apply to consumable components such as filters, or to adjustments necessary due to misuse of airconditioner. Normal user maintenance, setting of controls and transit damage are also excluded. No other person, firm or corporation is authorised by us to offer or give on our behalf any other or greater warranty than that given by us under this warranty. The benefits conferred by this warranty are in favour of the original retail purchaser and any other person deriving title to the goods through or under such person and are intended to be separate from the additional to all other rights and remedies which they may have in law in respect of the goods. Warranty is void if used on commercial applications, including trucks, prime movers, locomotives & machinery

1. In the event that warranty service is required, the purchaser **must** contact Aircommand Australia for service approval.
Contact information: phone +61 8 8345 8444, fax 08 8243 0628, or email sales@aircommand.com.au
2. Warranty repairs will only to be carried out by the **manufacturer's authorised service repairer**.
3. It is the purchaser's responsibility to **deliver** unit to the manufacturers nearest authorised Service Centre.
The manufacturer will not bear any costs involved in Service Agent's travelling expenses or delivery charges.

Warranty outside Australia

1. Aircommand products are covered by 12 months warranty from date of first retail purchase.
2. For warranty enquiries outside Australia, please contact your national supplier.
** The warranty card must be completed and returned to the manufacturer for registration, or to the distributor in country of purchase. Online warranty registration is available at www.aircommand.com.au/registration.html*

GARANTIE FÜR KLIMAGERÄT MIT KÜHLFUNKTION**Garantie innerhalb Australiens**

Wir verpflichten uns mit dieser Garantie, innerhalb von 12 Monaten **ab Datum des ersten Einzelhandelskaufs**, über unseren nächsten Vertragshändler jeden durch fehlerhafte Verarbeitung entstandenen Defekt kostenlos zu beheben oder alle defekten Teile kostenlos auszutauschen. Diese Verpflichtung gilt unter dem Vorbehalt, dass das Gerät im Einklang mit unseren Anleitungen installiert und betrieben wird, und gilt nicht für Verschleißteile wie z.B. Filter oder für Korrekturarbeiten, die durch den Missbrauch des Klimageräts bedingt sind. Normale Wartung durch den Benutzer, die Einstellung der Bedienelemente und Transportschäden sind ebenfalls ausgeschlossen. Wir haben keine anderen Personen, Firmen oder Unternehmen bevollmächtigt, in unserem Namen irgendeine andere oder weiter reichende Garantie anzubieten oder zu geben als die von uns im Rahmen dieser Garantie erteilte. Die mittels dieser Garantie gewährten Leistungen gelten zu Gunsten des ursprünglichen Einzelhandelskäufers oder jeder anderen Person, die ihren Anspruch auf die Waren durch oder von dieser Person ableitet, und sind dazu gedacht, getrennt von allen zusätzlichen Rechten und Behelfen zu gelten, die ihnen kraft Gesetzes hinsichtlich dieser Waren zustehen..

1. Für den Fall, dass eine Garantieleistung erforderlich wird, muss sich der Käufer mit Aircommand Australia zur Genehmigung der Leistung in Verbindung setzen. Kontaktinfo: Tel. +61 8 8345 8444, Fax: 08 8243 0628 oder E-Mail: sales@aircommand.com.au
2. Unter die Garantie fallende Reparaturen werden nur durch den **Vertragsreparaturdienst des Herstellers** ausgeführt.
3. Die **Lieferung** des Geräts an das nächstliegende Service Centre des Herstellers ist Aufgabe des Käufers.
Der Hersteller deckt keine der durch die Anfahrtkosten des Vertragsdienstes oder Lieferkosten entstandenen Ausgaben.

Garantie außerhalb Australiens

1. Für die Produkte von Aircommand gilt eine 12-monatige Garantie ab Datum des ersten Einzelhandelskaufs.
2. Für Garantieanfragen außerhalb Australiens wenden Sie sich bitte an Ihren inländischen Händler.
** Die Garantiekarte ist auszufüllen und dem Hersteller, bzw. dem Vertriebshändler im Einkaufsland, zur Registrierung zuzuschicken. Die Garantie kann online unter der folgenden Adresse registriert werden: www.aircommand.com.au/registration.html*

GARANTIE DE CLIMATISATION RÉFRIGÉRÉE**Garantie pour l'Australie**

Nous nous engageons par cette garantie à faire rectifier gratuitement par notre agent de service tout défaut résultant d'un défaut de fabrication ou de remplacer tout composant défectueux dans les 12 mois suivant la date du premier achat de l'appareil au détail. Cet engagement est conditionnel à l'installation et à l'exploitation de l'appareil conformément à nos instructions, et ne s'applique pas aux composants consommables tels que les filtres, ou à un réglage attribuable à la mauvaise utilisation du climatiseur. L'entretien, les réglages des commandes et les dommages en transit sont également exclus. Aucune autre personne, firme ou entreprise n'est autorisée par nous à offrir ou à donner en notre nom toute autre garantie ou une garantie supérieure à celle donnée par nous en vertu de cette garantie. Les avantages conférés par cette garantie reviennent à l'acquéreur au détail original ou à toute autre personne qui deviendra propriétaire de l'appareil par le biais de cette personne ou avec son autorisation et sont censés être supplémentaires à tous les autres droits et recours dont il pourra disposer légalement en ce qui concerne l'appareil.

1. Au cas où un service de garantie serait nécessaire, l'acquéreur doit contacter Aircommand Australia pour obtenir une autorisation de service.
Coordonnées: téléphone +61 8 8345 8444, fax 08 8243 0628, ou email sales@aircommand.com.au
2. Les réparations sous garantie seront effectuées exclusivement par le **réparateur autorisé du fabricant**.
3. La responsabilité incombe à l'acquéreur de livrer l'appareil au Centre de service autorisé le plus proche du fabricant.
Le fabricant ne subira pas les frais de déplacement ou de livraison de l'agent de service.

Garantie en dehors de l'Australie

1. Les produits Aircommand sont couverts par une garantie de 12 mois à compter de la date du premier achat au détail.
2. Pour toute demande de renseignements en dehors de l'Australie, veuillez contacter votre fournisseur national.
** La carte de garantie doit être remplie et renvoyée au fabricant pour être enregistrée, ou au distributeur dans le pays de l'achat. Un enregistrement de garantie en ligne est disponible sur www.aircommand.com.au/registration.html*

GARANTÍA DEL ACONDICIONADOR DE AIRE REFRIGERADO**Garantía en Australia**

Nos comprometemos por medio de esta garantía a rectificar, sin cargo, en nuestra agencia de servicio autorizado, cualquier fallo causado por un componente defectuoso dentro de los 12 meses contados **a partir de la primera fecha de compra**. Este compromiso es condicional a que el aparato haya sido instalado y operado de acuerdo con nuestras instrucciones y no cubre componentes de consumo tales como filtros, o cualquier ajuste necesario debido al uso incorrecto del acondicionador de aire. Se excluyen también las tareas de mantenimiento normales, el ajuste de los controles y cualquier daño ocurrido durante su transporte. Ninguna otra persona, firma o corporación está autorizada a ofrecer o dar en nuestro nombre una garantía más extensa o diferente a la otorgada por esta garantía. Los beneficios conferidos por esta garantía son a favor del comprador original y cualquier otra persona que tenga derecho al título de la mercadería a través o bajo dicha persona y está separada de otros derechos adicionales o soluciones a las que puedan tener derecho, según la ley, respecto a las mercaderías.

1. En el caso que se necesite hacer uso del servicio de garantía, el comprador **debe** ponerse en contacto con Aircommand Australia para la aprobación del servicio. Información de contacto: Teléfono: +61 8 8345 8444, fax 08 8243 0628 o Email sales@aircommand.com.au
2. Las reparaciones cubiertas por la garantía deberán ser llevadas a cabo por el **servicio de reparaciones autorizado por el fabricante**.
3. **La entrega** de la unidad al Centro de Servicio más cercano autorizado por el fabricante es responsabilidad del comprador
El fabricante no se hará responsable de ninguno de los costes involucrados por gastos de viaje o cargos de entrega por parte del agente proveedor del servicio

Garantía fuera de Australia

1. Los productos de Aircommand están cubiertos por 12 meses de garantía a partir de la primera fecha de compra.
2. Por cualquier información respecto a la garantía fuera de Australia, sírvase ponerse en contacto con su proveedor nacional.
** Esta tarjeta de garantía debe ser completada y enviada al fabricante para su debida registración o alternativamente al distribuidor en el país de compra. La registración de la garantía puede hacerse también online en: www.aircommand.com.au/registration.html*




HEAD OFFICE
Aircommand
Australia Pty Ltd
954-956 Port Road
Albert Park, SA 5014
ACN 164 415 445

For warranty claims, sales
enquires or customer
service

Call:(08) 8345 8444

Fax:(08) 8243 0628

INSTALLATION & OPERATING INSTRUCTIONS FOR Sparrow MK4 ROOFTOP AIRCONDITIONER

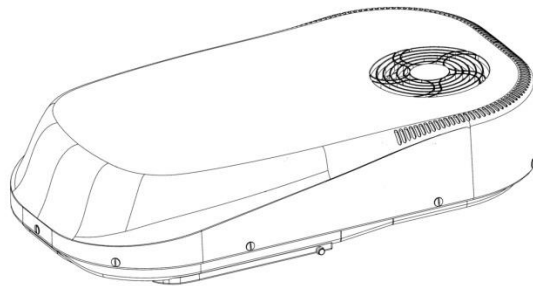

Model Number: 5860001

Serial Number: _____.

Date Purchased: _____.

WARNING

It is important that this installation manual is properly read and understood before installation. The unit must be installed by a qualified service technician. Failure to properly install the unit or attempting to modify it in any way can be extremely hazardous and may result in property damage and personal injury.

**Aircommand will not be held responsible for problems relating to incorrect
or improper installation methods.**

GENERAL SPARROW UNIT INFORMATION

I. PURPOSE

The Aircommand Sparrow air conditioning unit is designed for installation on the roof of a caravan or recreation vehicle to provide reverse cycle heating and cooling.

- The roof must be capable of supporting the weight of the unit (29kg).
- The mechanisms for raising pop-top roofs must be capable of operating with the added weight of this air-conditioning unit.
- The absolute *minimum* thickness of the roof must not be less than 25mm.
- The *maximum* thickness of the roof must not exceed 125mm.
- Trimming of the ductwork will be necessary depending on the roof thickness. You will need to supply longer M8 hold down bolts if your roof thickness exceeds 85mm.

It is important that the unit is installed properly and according to the recommended guidelines.

Aircommand will not be held responsible for problems relating to incorrect or improper installation methods.

II. ENSURING EFFECTIVE OPERATION

The effectiveness of the air conditioner is dependent on several factors that contribute to the total heat load on the van. When an Aircommand unit is installed in a van or motorhome Aircommand assumes that the vehicle manufacturer or owner has properly assessed the potential heat load and selected the appropriate capacity air-conditioning unit.

The following actions can be taken to reduce peak heat load and help the air-conditioner deliver the most comfort:

- Closing all doors, hatches, windows and blinds. Extend all annexes.
- Position the vehicle so that the annex will face the sun and protect the windows from direct radiation.
- Turning off unneeded appliances that might increase the heat load inside the van.
- Cook outside if possible.
- Park the caravan/RV in a shaded position if possible.

In periods of extreme high temperature it is recommended to start the air conditioner earlier in the morning to greatly improve its ability to cope with the expected peak heat load.

III. CONDENSATION

In areas of high humidity, the humid air within the van will cause “sweating” or condensation in parts of the unit as the humid, warm air contacts the colder air discharge system. If this occurs please ensure the following:

- Close all doors, hatches, windows and blinds to limit the ingress of warm humid air.

Avoid running the inside fan on LOW or AUTO in humid conditions. Running the fan on HIGH fan speed will result in higher airflow and reduce the tendency to have condensation form.

Aircommand will not be held responsible for damage caused by condensation.

IV. GENERATORS


The Sparrow Mk4 is designed to run using mains power, however many owners may want to use portable generators to run them when in remote locations. Any generator used should deliver high quality, pure sine wave, alternating current at 50Hz, and be able to handle the compressor start up demand. Given the vast range in quantity and quality of generators on the market, Aircommand cannot recommend a specific model or brand. Discuss your specific requirements with the generator supplier directly and consider their recommendations.

Aircommand will not be held responsible for damages due to the use of improper generators and such use may void your warranty.

INSTALLATION PARTS LIST


MAIN COMPONENTS

- 1) Sparrow Mk4 Rooftop Air conditioner
- 2) Weather collar assembly
- 3) Circular duct
- 4) Combined duct & brace
- 5) Plenum Filters x2
- 6) Plenum cover

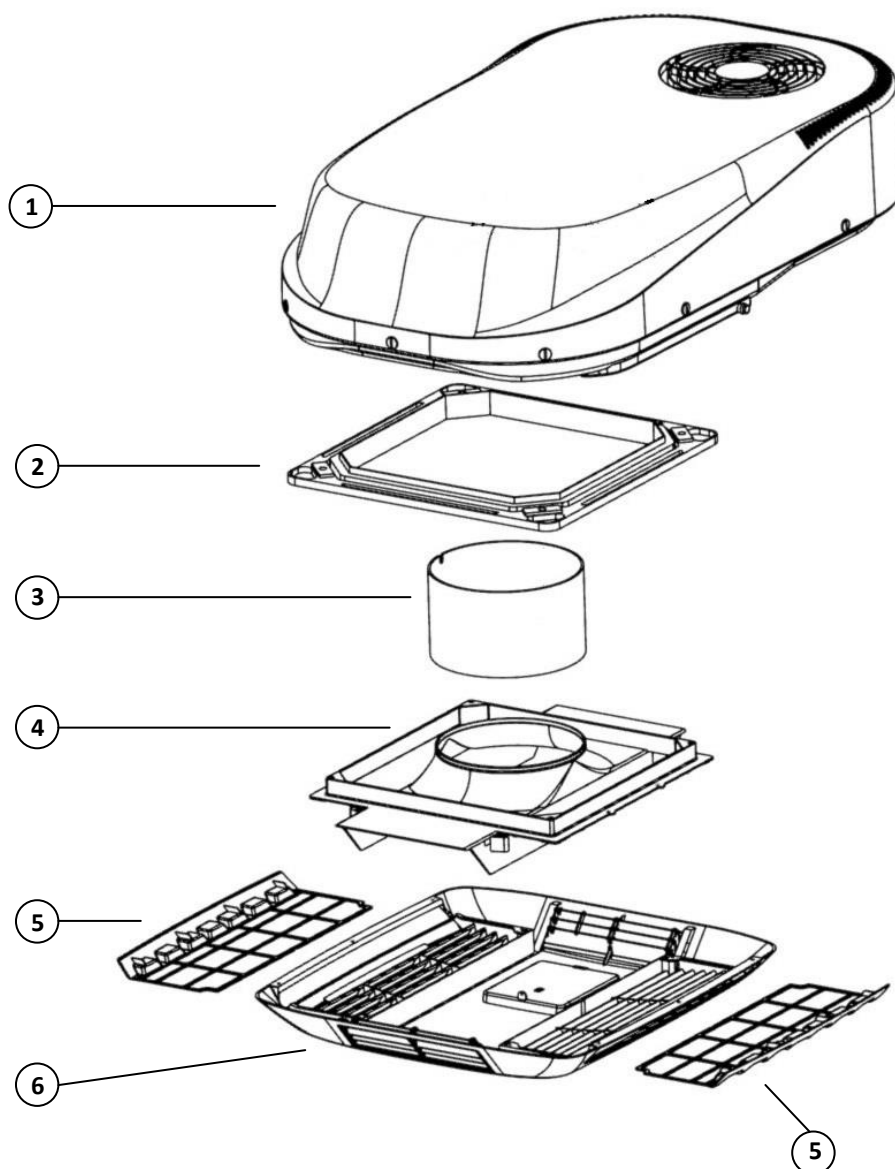

FITTINGS & FIXTURES

- 7) M8x120mm bolts x 4
- 8) Hold down bars x 4
- 9) Plenum cover screws x 4
- 10) Self tapping screws x 6

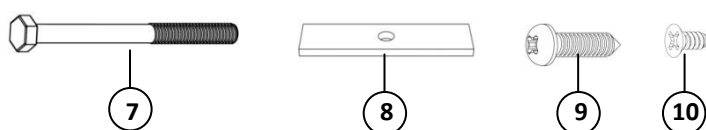

BEFORE INSTALLATION

Ensure that the installation instructions have been properly read and understood.

Installation must confirm to nation wiring regulations and in particular AS3001 – 2008.

DO NOT attempt to modify or add components to the installation procedure.

This equipment must only be serviced by a licensed refrigeration mechanic.

If your installation varies from the method outlined please contact Aircommand for specialty advice.

WARNING

Failure to properly install the unit or attempting to modify it in any way can be extremely hazardous and may result in property damage and/or personal injury.

Aircommand will not be held responsible for issues arising from incorrect or improper installation methods.

1. INSTALLATION POSITION

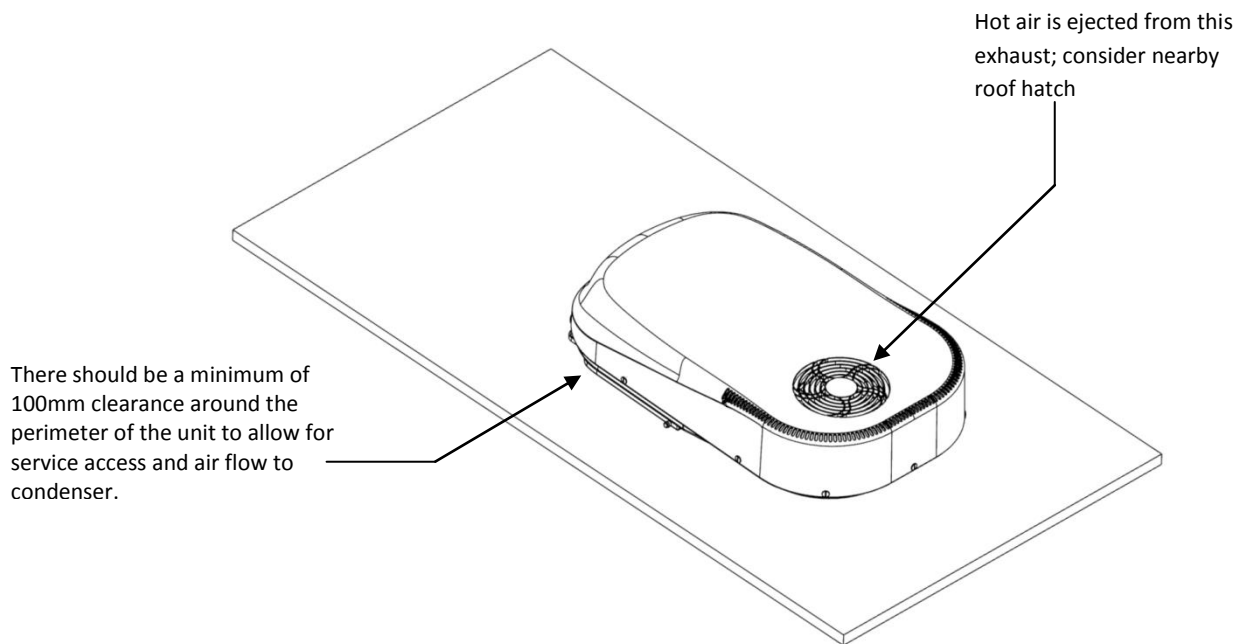


Fig 1: Sparrow Mk4 clearances required around roof top unit

Before beginning, mark out the position of the unit considering the following important requirements:

- The air conditioner should be situated as centrally as possible on the van, to ensure even air distribution.
- The Sparrow Mk4 may be oriented in any direction to the normal direction of travel.
- When considering the installation position remember to check for clearance around the plenum inside the van.
- Avoid an installation position where a bulkhead, cupboard or light fitting could interfere with the discharge air flow from the plenum.
- **Avoid an installation where a roof joining seam crosses through the 14" square installation cut out.**



It is important that the unit is never more than 5° from the horizontal and the rear of the unit should never be higher than the front when in use.

Contact Aircommand if your installation differs significantly.

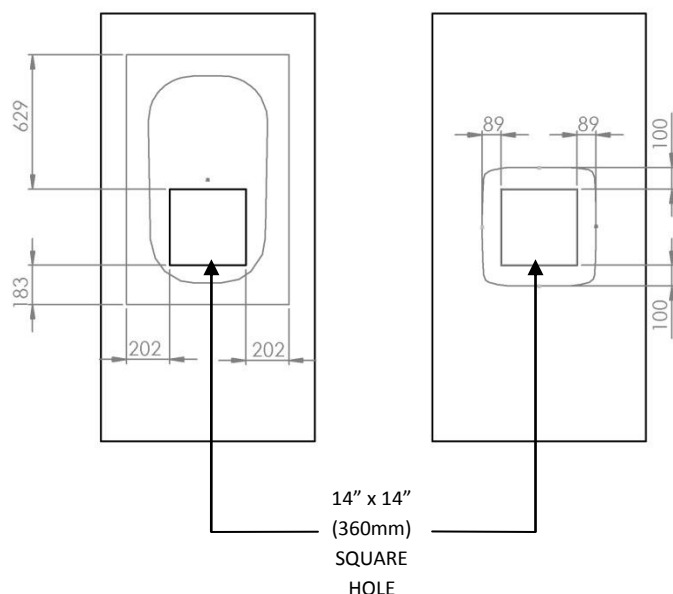


Fig 2: The footprint of the rooftop unit, and the plenum, measured from the hole.

- The above outline on the left shows the minimum clearance required around the Sparrow Mk4 unit on the roof of the vehicle, distances shown are calculated from a 14" square hole (360 x 360mm).

- The above outline on the right shows the minimum clearance required around the 14" square hole (360 x 360mm) in order to accommodate the plenum.

2. ASSESS ROOF STRENGTH

- The roof members **MUST** be strong enough to support the weight of the unit without any roof deflection that will cause “pooling” of water around the unit. Contact your caravan manufacturer to confirm the max load the roof is able to handle.
- If the roof does not have an existing hole one must be cut. Cut through the roof then use the roof hole as a guide to cut through the ceiling. Contact your caravan manufacturer for the best method to cut through the roof.
- The square hole in the roof (360 x 360mm, 14” x 14”) **MUST** be boxed up with minimum 20mm square timber to provide a structure strong enough to withstand the compression of the installation bolts. This is also to ensure that air is not drawn from the roof cavity (Fig 3 & 4). Remember to leave access for wiring.
- Longitudinals **MUST** be fixed securely to the transverse roof members to transfer load (see Fig 3 & 4).

WARNING

There may be electrical wiring located between the roof and ceiling. Ensure that power is properly disconnected at the supply (mains and/or battery). Failure to do so may result in personal injury or death.

TIP: Always use crawl boards across the roof to avoid damage.

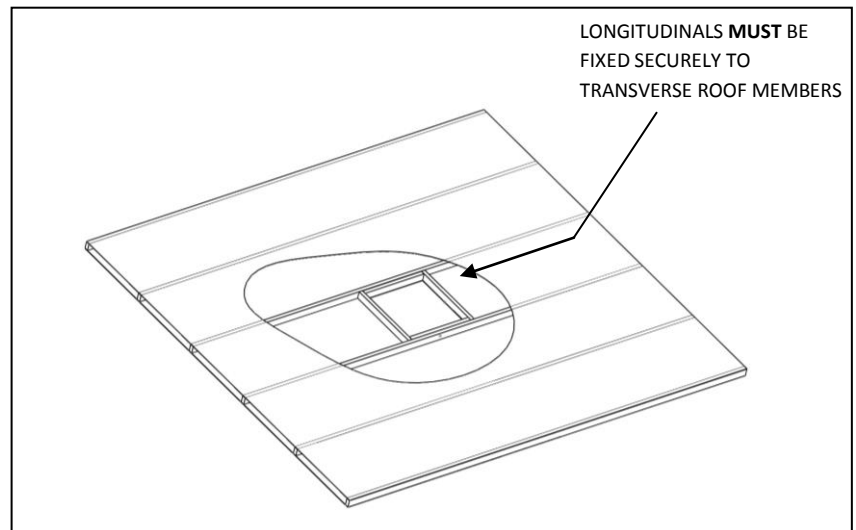


Fig 3: Shows an ideal roof structure with strong longitudinals and a 14' hole boxed

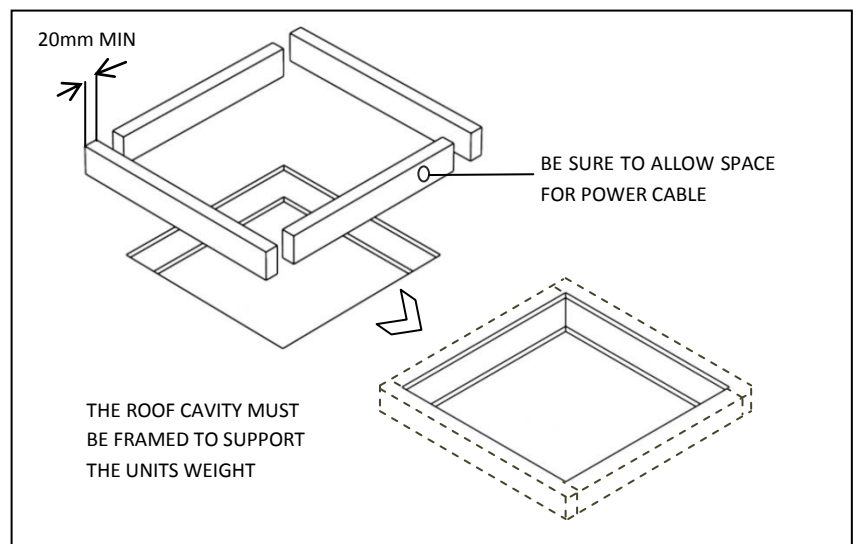


Fig 4: The roof cavity **MUST** be boxed with timber to provide a solid structure

3. INSTALLING WEATHER COLLAR

Ensure that the roof is clean, dry and free from grease or oil & that there are no roof seams running through the installation area.

IMPORTANT

The weather collar must be assembled to the roof top the right way up. **Check orientation of the part. Look for the 'THIS SIDE UP' STICKER'.**

- Apply silicone sealant to underside face of collar (Fig 5 – left hand picture).
- Turn collar over, make sure 'THIS SIDE UP' sticker is facing up and apply the collar to the 14” hole.
- Push down on collar and remove excess sealant from around the edges.

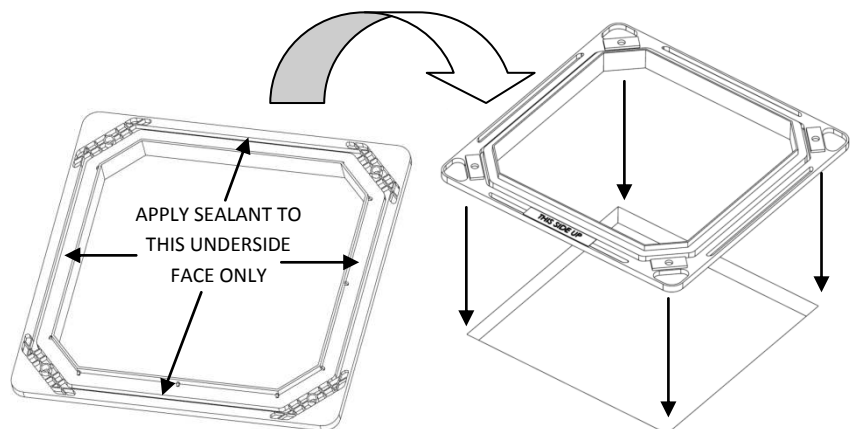


Fig 5: Left hand picture shows underside of weather collar – apply sealant across this entire face. Right hand picture shows 'THIS SIDE UP' sticker. Keep this side up when applying to roof.

4. POSITION SPARROW ON ROOF

- Remove the air conditioner from the carton and move to installation position.
- Put a circle of sealant around each bolt hole in the weather collar.
- Position the unit over the weather collar. The unit will engage with the collar and self-align (Fig 6).



The unit weights approximately 28kg. Ensure a two person lift or use a mechanical hoist to avoid the risk of injury.

- DO NOT** slide the unit on the roof, this may damage the weather collar and result in leaks.
- Four M8 mounting holes on the chassis underneath the air conditioner will line up with the corresponding holes on the weather collar.

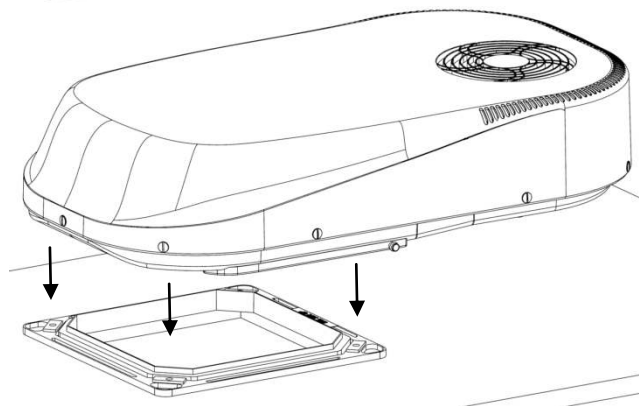
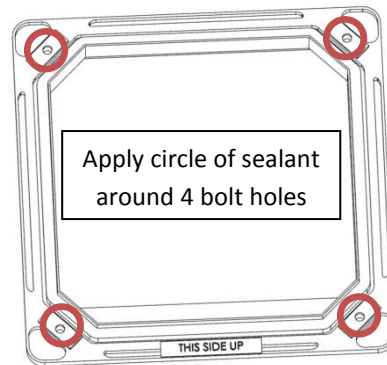


Fig 6: Apply sealant around bolt holes and then position unit over the weather collar and set down gently.

5. CONNECT ELECTRICAL SUPPLY

- This unit **MUST** be installed in accordance with SAA Wiring regulations and in particular AS3001 – 2008.
- Refer Fig 7 for position of terminal block.
- Connect electrical supply to terminal strip. Note position of active, neutral and ground wires (Fig 8).

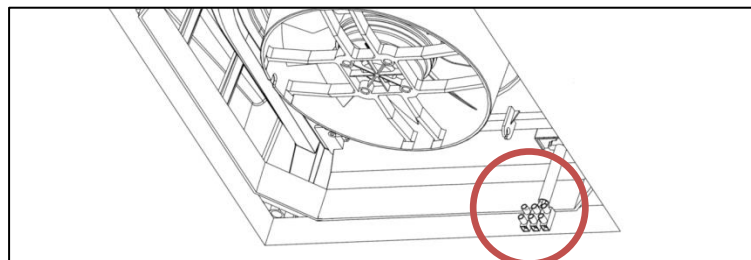


Fig 7: Highlights the position of the terminal strip underneath the unit



WARNING

This work should only be performed by a licenced electrical tradesperson. Ensure that power is properly disconnected at the supply (mains and/or battery)

When connecting wires into terminal strip apply suitable clamping pressure to ensure wire is secure while taking care not to over tighten and damage the exposed wire ends.


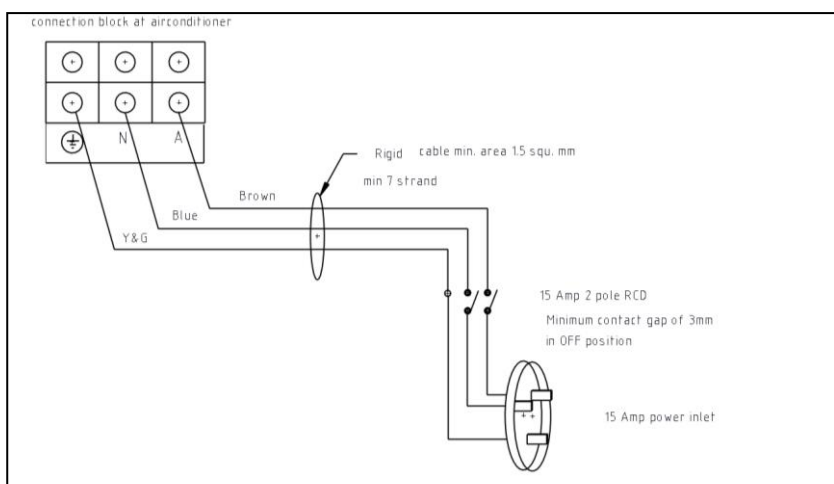


Fig 8: Wiring diagram of power connection from external supply to air conditioner

6. ASSESS ROOF THICKNESS

- Measure the roof thickness and consult the table across to check if adjustments to the duct length are required.
- NOTE:** If the duct length needs to be adjusted then cut the excess from the un-notched end.

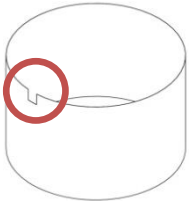

Roof thickness (mm)	Comment	Duct length (mm)	Bolt length
25	Absolute minimum – ring must be removed from top of plenum ducting.	60	Standard
30	Use plenum duct as provided	65	Standard
40	"	75	Standard
50	"	85	Standard
60	"	95	Standard
85	"	120	Limit of std bolt
115	Absolute maximum	150	Installer to provide
General rule	Roof less than 30mm – remove duct ring. 30mm or thicker leave duct as supplied	Duct length = Roof thickness + 35mm	Roof greater than 85mm thick will require installer to provide longer bolts

7. ASSEMBLE DUCT

- Thread a hold down bar onto the M8 bolt and push the bolt almost all the way into the hole in each corner of the brace (Fig 9).
- Leave a 10mm gap between the hold down bar and the recess in the plastic brace. This will allow for easier engagement with the four corresponding threaded holes in the unit.
- Turn the assembly over and add the black plastic duct work to the top of the assembly with the notch upwards (Fig 10). The notch is shown circled below.
- Align the notch with the inside fans power cable.

Note: Some installers find it easier to attach the duct to the roof top unit first and then insert the brace assembly.



When attaching the duct to the unit take care to ensure it forms a tight, unbroken seal that doesn't allow cold air to escape.

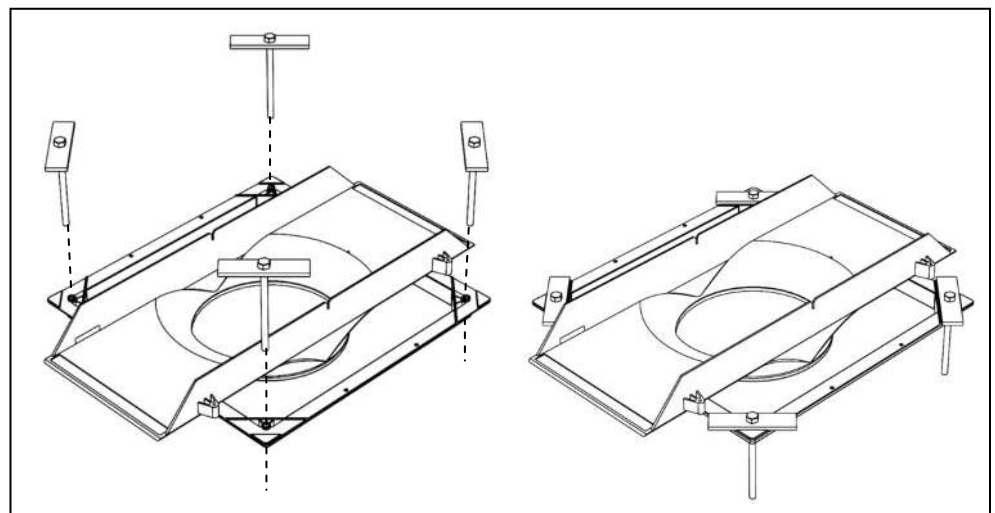


Fig 9: Insert the four M8 bolts and hold down bars into the corners of the brace

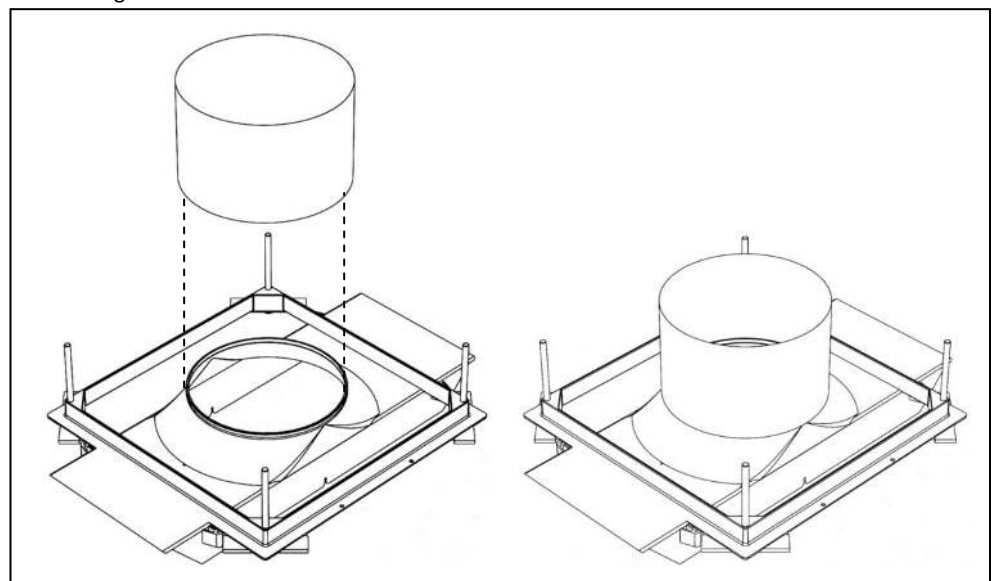


Fig 10: Fit the black plastic duct onto the brace assembly ensuring a tight, sealed fit

8. ATTACH DUCT TO UNIT

- Raise the brace assembly and slip the black plastic duct over the outside of the fan outlet underneath the rooftop unit. Ensure that the notch cut in the plastic ductwork aligns with the fans power cable (Fig 12).



When attaching the duct to the unit take care to ensure it forms a tight, unbroken seal that doesn't allow cold air to escape.

- Engage and tighten the four M8 bolts with the threaded inserts in the rooftop unit.
- Recommended tightening torque of the bolts is 7 N.m (5.2 lbf-ft).
- As the bolts are tightened ensure that the hold down bars slot into their recesses in the brace (Fig 11).

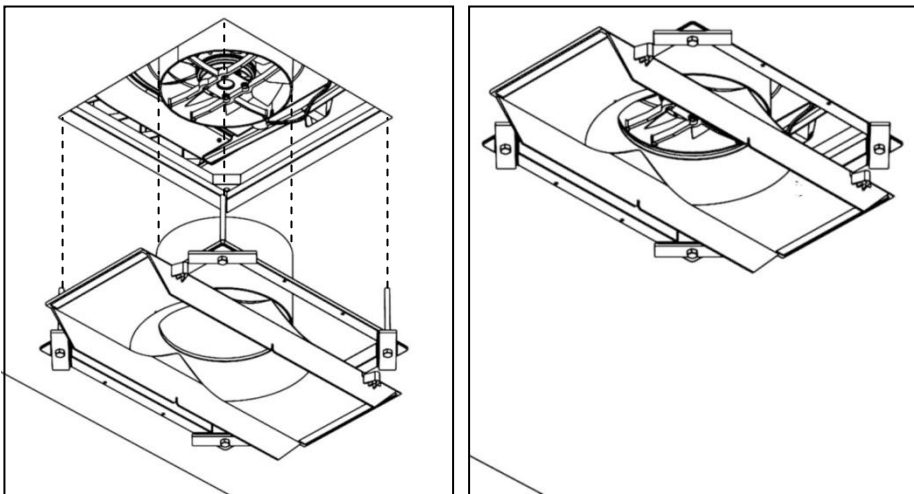


Fig 11: Raise the duct assembly up to the roof hole, ensuring the black plastic duct work forms a tight fit around the evaporator fan underneath the unit. Then engage the four M8 bolts, taking care to ensure the hold down bars slot into their recesses

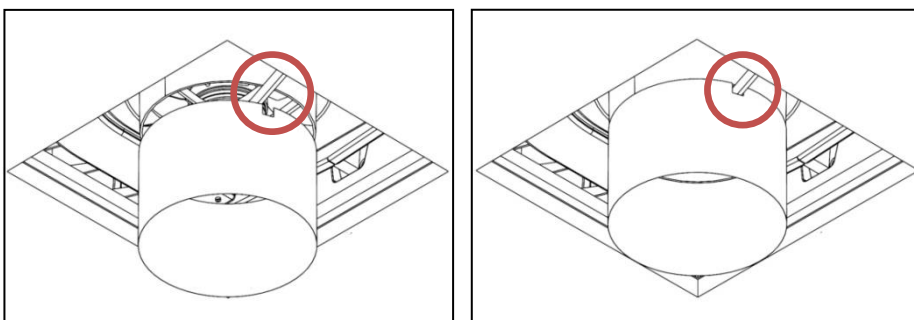


Fig 12: Highlights how the notch on the plastic duct slots over the wire from the inside fan

9. ATTACH PLENUM COVER

Connect the main cover of the plenum to the duct by attaching the blue suspension cord to the lug on the inside of the cover (Fig 13).

- This will allow you to use two hands to connect the control cable (see Fig 14 on next page).
- Connect the key pad control cables together (see below). Be sure that the plug joins the corresponding wire colours together (yellow to yellow, red to red etc.)



Failure to properly plug the control cables together correctly will result in loss of power to display


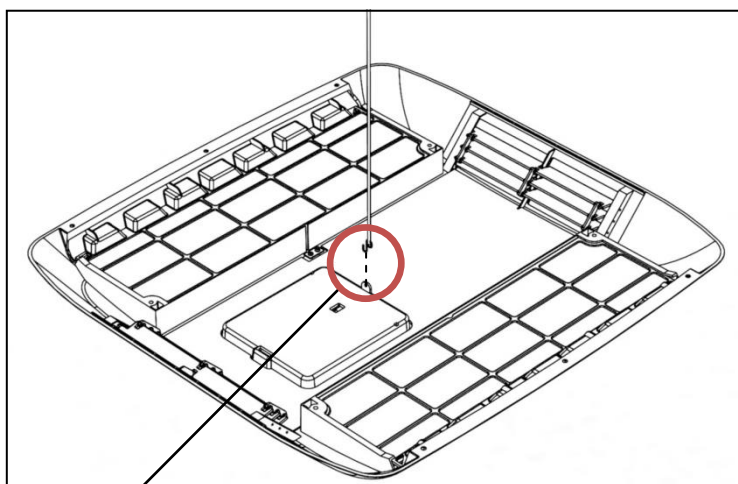


Fig 13: Shows the positioning of the lug inside the plenum cover

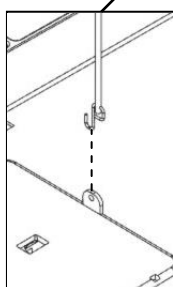

Pull the suspension cord down from inside the unit and hook it through the lug shown inside the plenum housing. This will allow two free hands to connect the control cables together.

9. ATTACH PLENUM COVER

- Secure the main plenum cover to the duct assembly with the 4 screws provided (Fig 15).

TIP: Tip: Remove the filters to make hole alignment easier. See Fig 16.

- It is important that these screws are not over tightened otherwise the plenum may crack.
- Remove the filter elements by pulling them out of the plenum, and use the six self tapping counter sunk screws to secure the cover's edges to the caravan ceiling (Fig 16). In some instances a very small pilot hole may need to be drilled to guide the screws into place.
- Replace the filters by sliding them into the plenum until they click into place.

INSTALLATION IS NOW COMPLETE – PROCEED TO COMMISSIONING

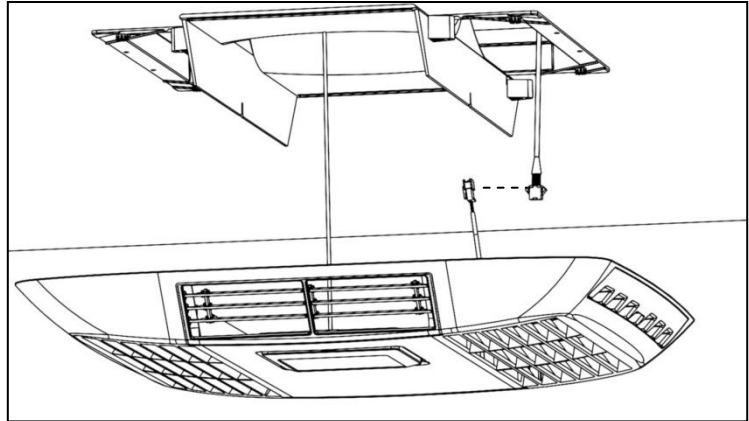


Fig 14: Attaching the suspension cable will allow two hands free to plug in the control cable

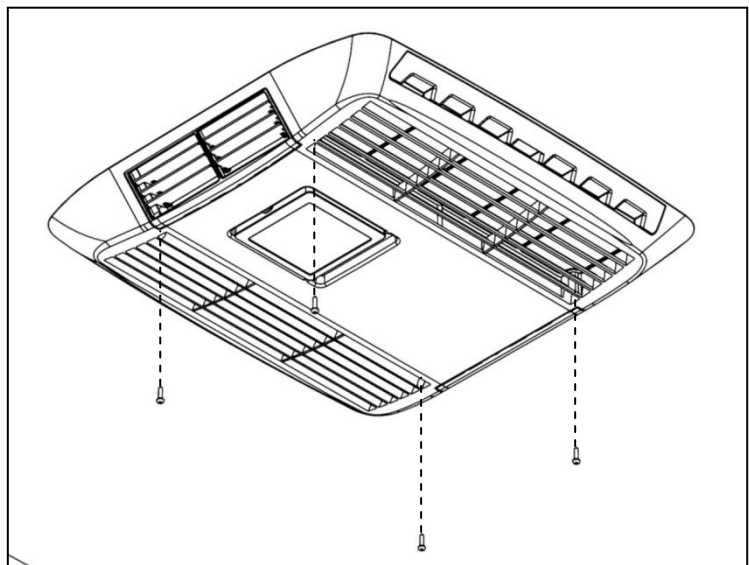


Fig 15: Secure the main plenum cover to the duct assembly with the four screws provided

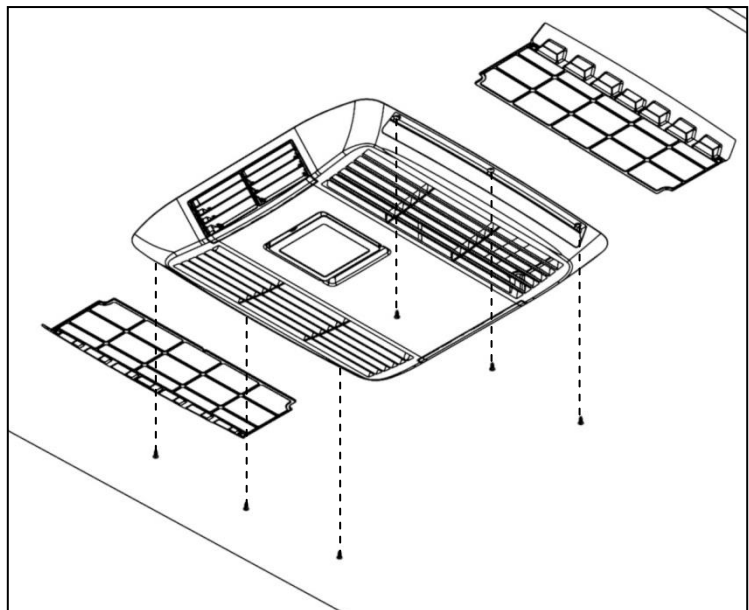


Fig 16: Remove the plenum filters and use the six self tapping screws to secure the plenum over to the ceiling of the caravan. Be sure not to over tighten.

COMMISSIONING OF THE UNIT

1. Turn the power on at the circuit breaker
2. Press the ON/OFF button and press the MODE button to select FAN
3. Cycle through the LOW, MED and HIGH fan speeds checking that all speeds run.
4. Set mode to COOL, adjust temperature via up/down buttons to 4°C **below** the display temp (i.e. room temp) compressor will start within three minutes.
5. Set mode to HEAT, similarly set temperature to 4°C **above** the display temperature. Compressor will start within three minutes. After a few minutes the fan will start and warm air will be apparent.

Note: Regardless of the mode selected there will always be at least a 3 minute delay before the compressor starts. If the unit is turned off it is important that the compressor be given at least 3 minutes before being re-activated

MAINTENANCE

I. Plenum Filters

The plenum filters are the only parts that require routine maintenance. They must be cleaned periodically to ensure that they do not become clogged with dust and other particles.

Blocked filters must be cleaned frequently to maintain cooling & heating performance

To clean the two plenum filters, first remove them both from the plenum by pulling them out of the assembly.

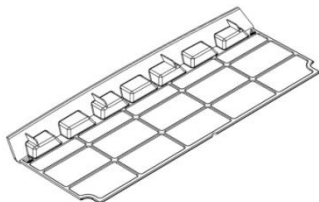


Fig 17 plenum filter when removed

The state of the filters can be ascertained from its appearance, if they appear clogged then they should be cleaned. Generally the filters can be cleaned sufficiently by tapping them together to shake loose the dust and particles trapped inside.



WARNING

Airborne particles can pose a health risk, particularly to young children and the elderly. Ensure that filters are cleaned in a safe and well ventilated area

If a more thorough clean is required then the filters can be washed out using warm soapy water. Care must be taken to avoid ripping the fabric.

The filters should be cleaned every two weeks or more when in use. Prolonged use, higher concentrations of airborne particles and various other factors may result in the filters needing to be cleaned more often.

Replacement filters can be ordered directly from Aircommand.

II. Mounting bolts

Aircommand suggests that the hold down bolts are initially checked for tightness within the first 3 months of installation, and thereafter every 12 months if the van is in constant use.

III. Compressor mounts

Ensure that the rubber mounts on the compressor are checked every 12 months and more often with frequent travelling. If the top mount looks very worn or there is no rubber left between the top washer and the compressor foot (metal on metal contact possible) then the rubbers need replacing.

IV. Storage

The air conditioner should be run on a routine basis to ensure the components remain in working order.

If the van is in storage or is to remain unoccupied for an extended length of time it is recommended that the air conditioner is allowed to run uninterrupted for 20-30min once every six months.

V. Warranty claims

The unit comes with a one year manufacturer's warranty from date of purchase. It is **IMPORTANT** that you read and understand the conditions of the warranty agreement which are included with the unit.

If you have a claim please contact Aircommand directly on (08) 8345 8444, alternatively you can fax (08) 8243 0628 or email service@aircommand.com.au
Please have your unit serial number ready.

GENERAL SPECIFICATIONS

Air – Conditioner

Installed Height -	205mm
Width -	560mm
Length -	975mm
Weight -	26.6kg

Air Discharge Plenum

Height -	65mm
Width -	535mm
Length -	555mm
Weight -	2.4kg

AIRCOMMAND AUSTRALIA PTY LTD

SPARROW MK4

MODEL NO. 5860001

240V 50HZ

REFRIGERANT 407C 450G

RATED CAPACITY COOLING 2000W

HEATING 2150W

POWER INPUT COOLING 920 W

HEATING 930 W

RATED CURRENT COOLING 3.9A

HEATING 4.0A

MAX INPUT 1020W

MAX CURRENT 4.4A

DESIGN SYSTEM PRESSURE

HI 2900 kPa

LOW 1840 kPa

MAX OPERATING PRESSURE 2400 kPa

Inside Air Delivery Maximum: 110 l/s

Total Installed Weight: 29.0kg

OPERATING INSTRUCTIONS



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. **Children should be supervised to ensure that they do not play with the appliance.**

OPERATION

- Turn the unit on by pressing the ON/OFF button once.
- Press the MODE button to cycle through options Cool, Dry, Heat and Fan.
- Turn the unit off by pressing the ON/OFF button once more.

COOLING

- Cycle mode button to highlight COOL.
- You may select High, Med, Low or Auto fan speeds by pressing the fan button. It is recommended that you choose Auto.
- Now select the desired room temperature (herein referred to as SETPOINT) by pressing the TEMP up or down keys, the readout will flash the set point temperature. Keep pressing the button until it flashes your desired set point. In approx. 5 seconds the display will resume reading the actual room temperature. The compressor will have a delayed start usually 3 minutes before unit starts to cool.

Note: Any interruption to the power supply will cause the unit to delay compressor start up.

- For simply recirculating air, choose the FAN mode. Choose any of the three fan speeds by pressing FAN.

Note: Temperature button is invalid in Fan only mode.

HEAT

- To heat, press MODE button to highlight HEAT.
- Select desired set point temperature by pressing TEMP buttons up or down. It is recommended that AUTO fan speed by selected.
- After the delay, the compressor will start. Air will not flow until warm enough. This is to prevent cold draughts.

DRY

- The DRY mode is used when the room temperature is close to comfortable but you wish to dehumidify.
- Press MODE button to highlight DRY.
- Set the temperature to desired set point. *Note: the fan speed is locked in LOW.*
- The compressor will cycle on and off at approximate intervals of 6 minutes to extract moisture from the air.

SLEEP

- With the unit operating in cool mode, press SLEEP button to highlight the sleep light. The unit over the next hour will automatically raise the set point by 1 °C. Conversely in heat mode, the set point will be lowered 1°C.
- The TIMER may be used to turn off the unit in the future (up to 24 hours) OR may be used to turn on the unit up to 24 hours in the future.
- Press TIMER button once and the display will flash. Within 3 seconds, press the timer button until you have set desired time (in hours) into the future to turn unit off. A subsequent press of the timer button will allow the time to start the unit to be programmed.


LOCKING

- This provides a means of locking in the mode and fan settings. To lock, press TEMP DOWN key simultaneously with MODE button. Hold for 3 seconds and the lock indicator will light. To unlock, repeat above procedure.

DISPLAY SETTING

- To change readout from °C to °F or vice versa: Press TEMP DOWN key simultaneously with the FAN key.

5860001 - Sparrow Mk4 Roof top airconditioner Spare Part Kits

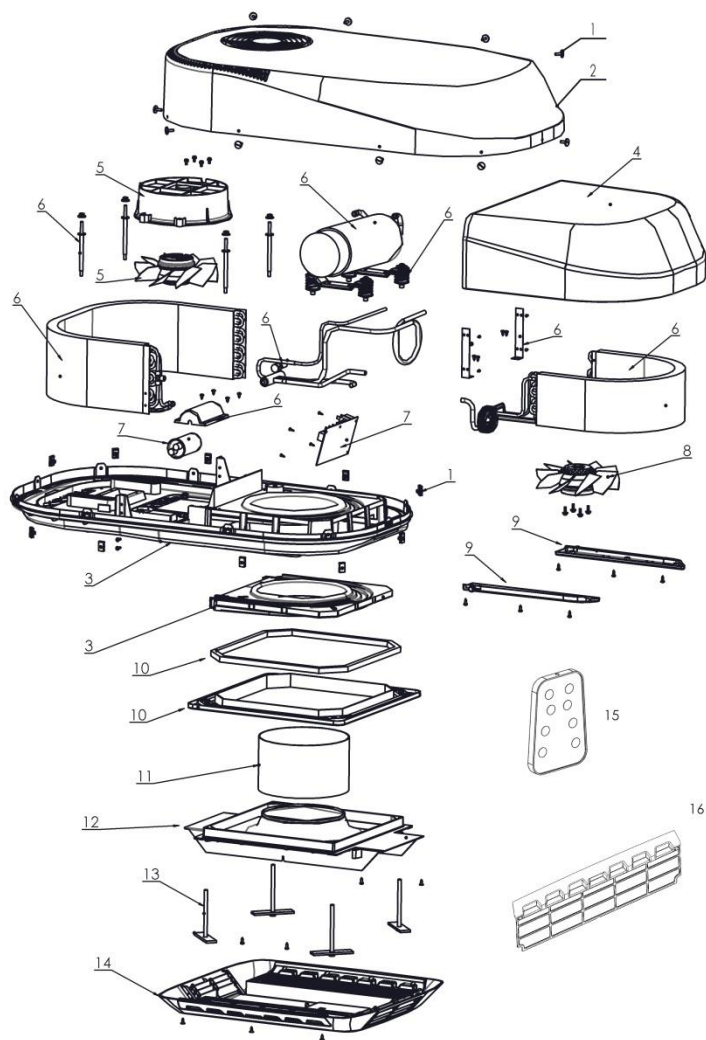

Item	Spare part kit reference	Spare part kit description
1	5862022	Top housing fitting kit
2	5862001	Top housing
3	5862033	Bottom housing
4	5862015	Inside fan EPS housing
5	5861010	Outside fan assembly
6		Refer to Aircommand service
7	5861006	Electrical kit
8	5862010	Inside fan assembly
9	5861002	Consensate collector set
10	5861001	Weather collar assembly
11	8001012	Circular Duct
12	8002031	Combined Buct & Brace
13	8002037	Installation Fittings kit
14	5852006	Sparrow Plenum assembly
15	5601051	Remote control
16	8002044	Plenum filters, pair

Sales/General Enquiries: sales@aircommand.com.au

Service Department Enquiries: service@aircommand.com.au

Spare Parts Enquiries: parts@aircommand.com.au

Phone: (08) 8345 8444 (Int. +61 8 8345 8444)

Fax: (08) 8243 0628 (Int. +61 8 8243 0628)

Post:
954-956 Port Road
Albert Park
South Australia 5014

