




Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.
The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1

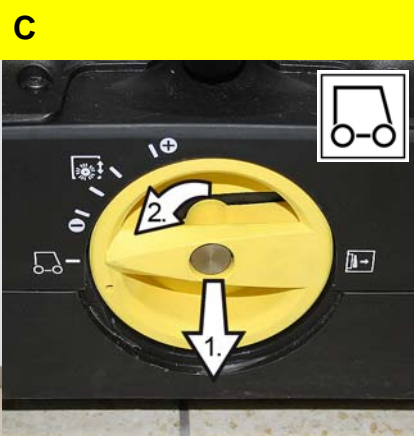

Caution

Risk of damage. Only use the recommended detergents. With respect to different detergents the operator bears the increased risk regarding the operational safety, accident risk and reduced product life of the appliance. Only use detergents that are free from solvents, hydrochloric acid and hydrofluoric acid.

Follow the safety instructions for using detergents.

Note


Do not use highly foaming detergents. Observe the dosing notes.

- A Open the cover of the fresh water reservoir. Pour in water/detergent mixture. Maximum temperature of the liquid 50 °C. Close the cover of the fresh water reservoir.

Short distances on level grounds

- B Place the slider vertically.
- C Pull out the rotary handle for the brush contact pressure and set it to the drive position. Use the pushing handle to push the appliance to the place of use.

2

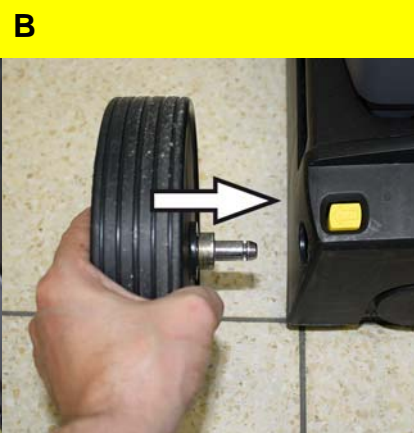

Long distances, uneven grounds

- A Place the slider vertically and tilt the lock up.
- B Install the transport wheels.



Caution

Danger of damage due to leaking water. Remove the waste water and fresh water reservoirs before tilting the appliance.



- C Remove the filled waste and fresh water reservoirs from the appliance and transport them separately.
- D Tilt the appliance to the side and drive it to the place of use on its transport wheels.

If the transport wheels hinder the use of the appliance:

- E Press the transport wheel release button and pull the transport wheel out.
- F Insert the transport wheels into their holder until they stop.

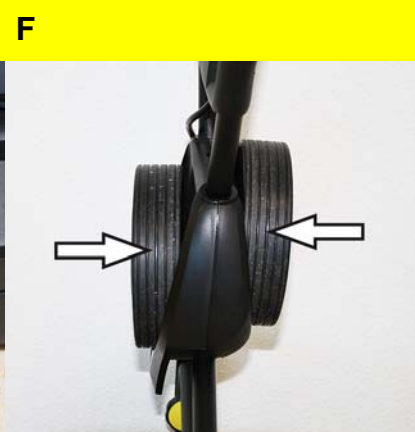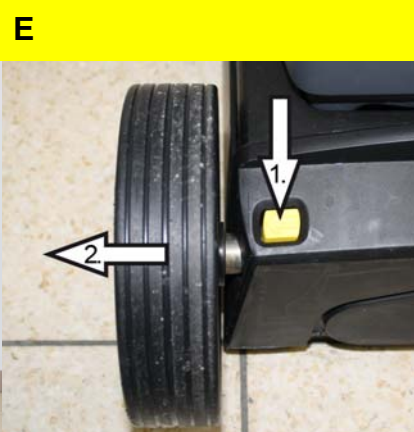

3

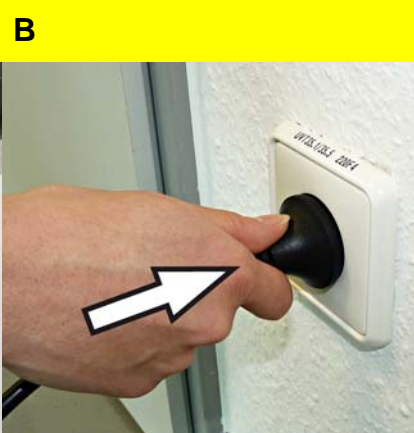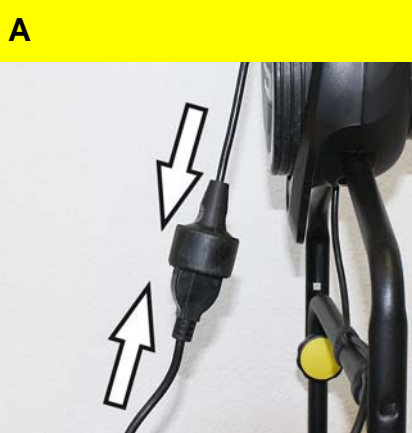

- A Connect an extension cable with a sufficient cross section.

Always unwind extension cord completely. Insert the end of the extension cable as a loop in the strain relief clamp.

- B Plug in the main plug.

Operation

1



Adjust the brush contact pressure


- A Place the slider vertically.
Pull out the rotary handle of the brush contact pressure and set it to the desired value.

Note

Carry out the initial cleaning attempts with less contact pressure. Increase contact pressure step-by-step until the desired cleaning result is achieved. The correct setting of the contact pressure reduces the wear and tear of the brushes. The brush drive is switched off when there is overload.

When cleaning with microfibre rollers, the contact pressure must not be adjusted higher than the position mentioned below. With a higher contact pressure, there is a danger of destroying the microfibre rollers.

2

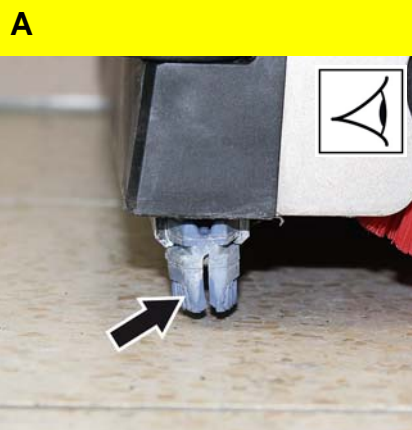

Cleaning

⚠ Danger

Risk of injury on account of electric shock caused by a damaged mains cable. Do not let the mains cable come in contact with the rotating brushes or pads.

Caution



Risk of damage. When cleaning close to a wall, position the appliance so that the deflection rollers point towards the wall.

- A If the detergent solution is to be vacuumed off after the cleaning process:
Check that all vacuum bars are inserted into the appliance
- B Press the pedal to lower the vacuum bar.
Place the slider vertically.
- C Turn on the brush irrigation by using the switch for the detergent solution.
Turn on the brushes by using the switch for the brush drive.
- D Swivel the slider toward the operator - the chassis is retracted and the brushes touch the floor.
Move the appliance over the surface to be processed by the slider.

Caution

Risk of damage to the floor covering.
Do not operate the appliance on the spot.

3

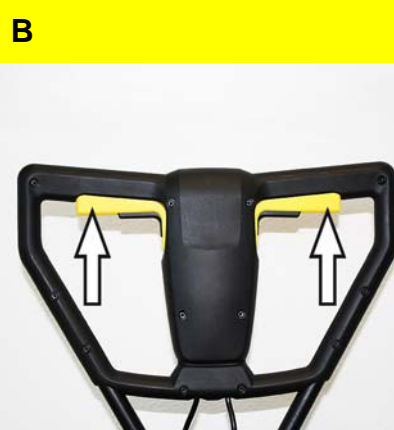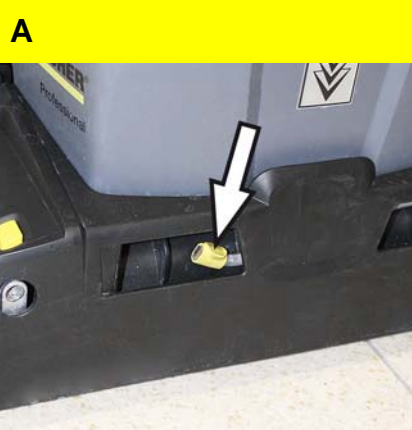

Polishing

- A Press the push-button for the vacuum bar change toward the inside - the vacuum bar will release.
Remove both vacuum bars from the appliance.
Place the slider vertically.
- B Turn on the brushes by using the switch for the brush drive.
Swivel the slider toward the operator - the chassis is retracted and the brushes touch the floor.
Move the appliance over the surface to be processed by the slider.

Caution


Risk of damage to the floor covering.
Do not operate the appliance on the spot.

Note

To polish underneath furniture, the fresh water and wastewater reservoirs can be removed.

Finish operation

1

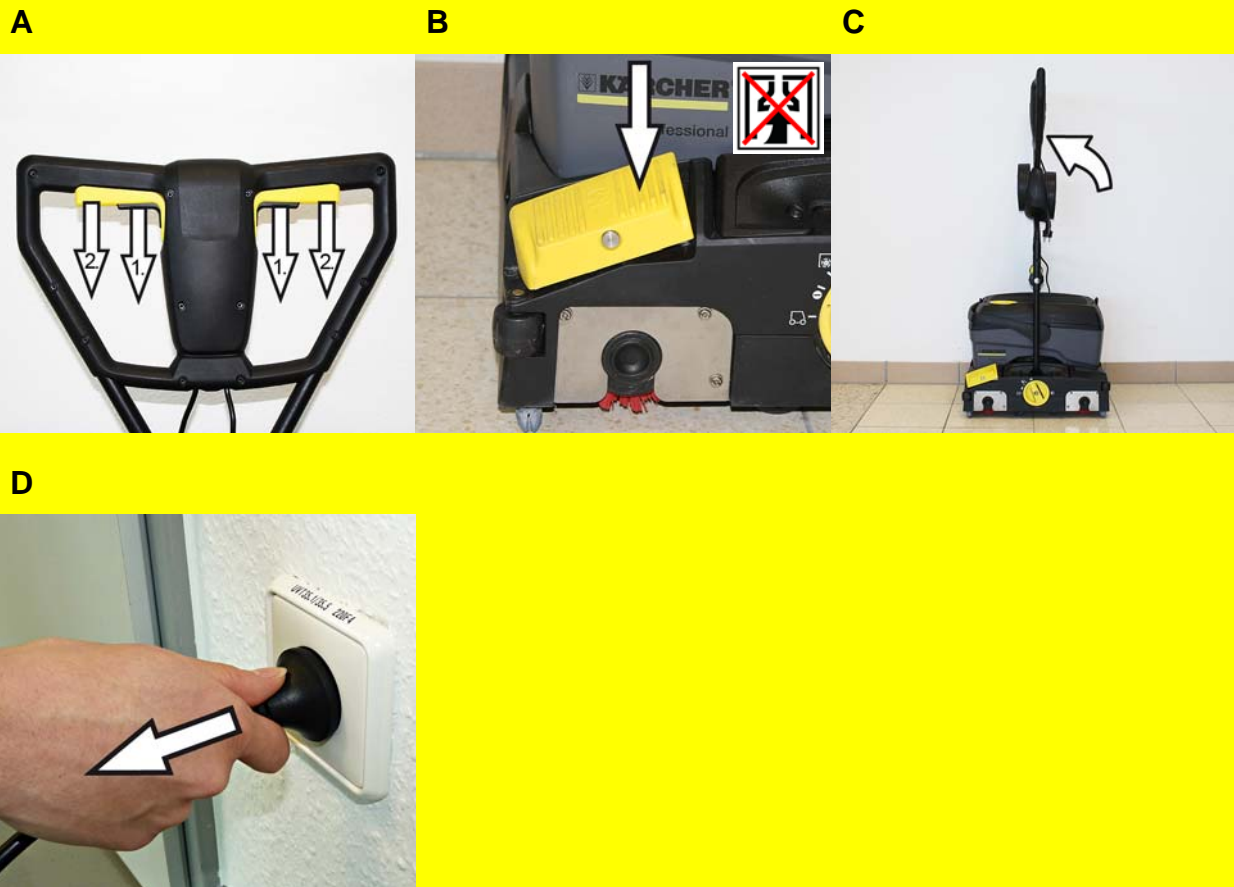


Shutting Down the Appliance

- A Release the switch for detergent solution. Push the appliance forward for another 1-2 m to draw off residual water. Release the brush drive button.
- B Press the pedal to lower the vacuum bar.
- C Place the slider vertically - the brushes are elevated.
- D Pull out the mains plug.

Caution

Danger of deforming the brushes. When switching off the appliance, take the load off the appliance by placing the slider vertically.

2

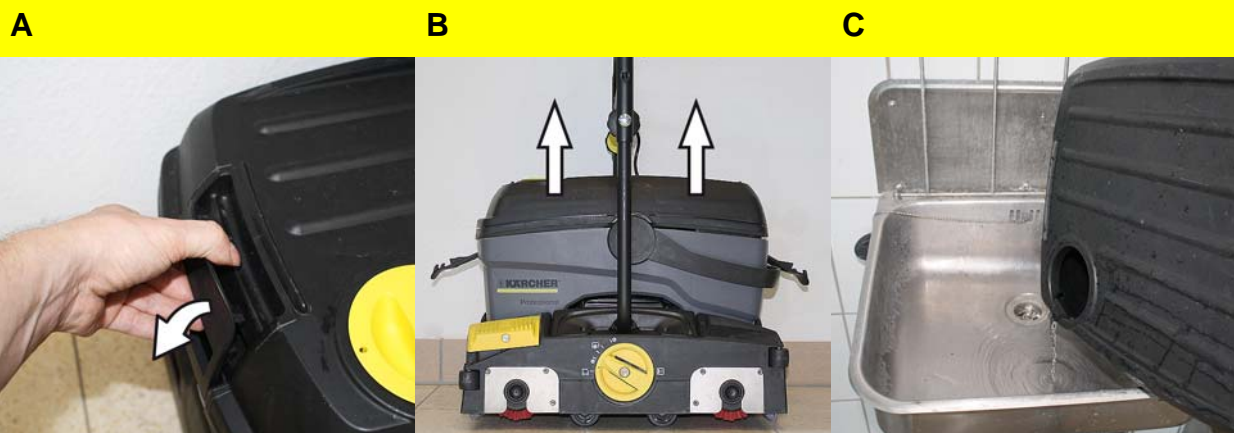

Emptying the Fresh Water Tank

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Open the locks for the fresh water reservoir.
- B Tilt the carrying handle for the wastewater reservoir towards the side. Lift up the fresh water reservoir and carry it to the disposal site.
- C Remove the cover of the fresh water reservoir and pour out the liquid via the notch. Rinse the fresh water tank with clear water.

3



Emptying the Dirt Water Reservoir

Note

If the dirt water reservoir is full the float closes the suction channel. The suction operation is interrupted. Empty the dirt water reservoir.

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Remove the fresh water reservoir from the appliance.
- B Lift up the wastewater reservoir and carry it to the disposal site. Pour out dirty water. Rinse the dirty water tank with clear water.


Maintenance and care

daily

monthly


Kärcher Customer Service

1

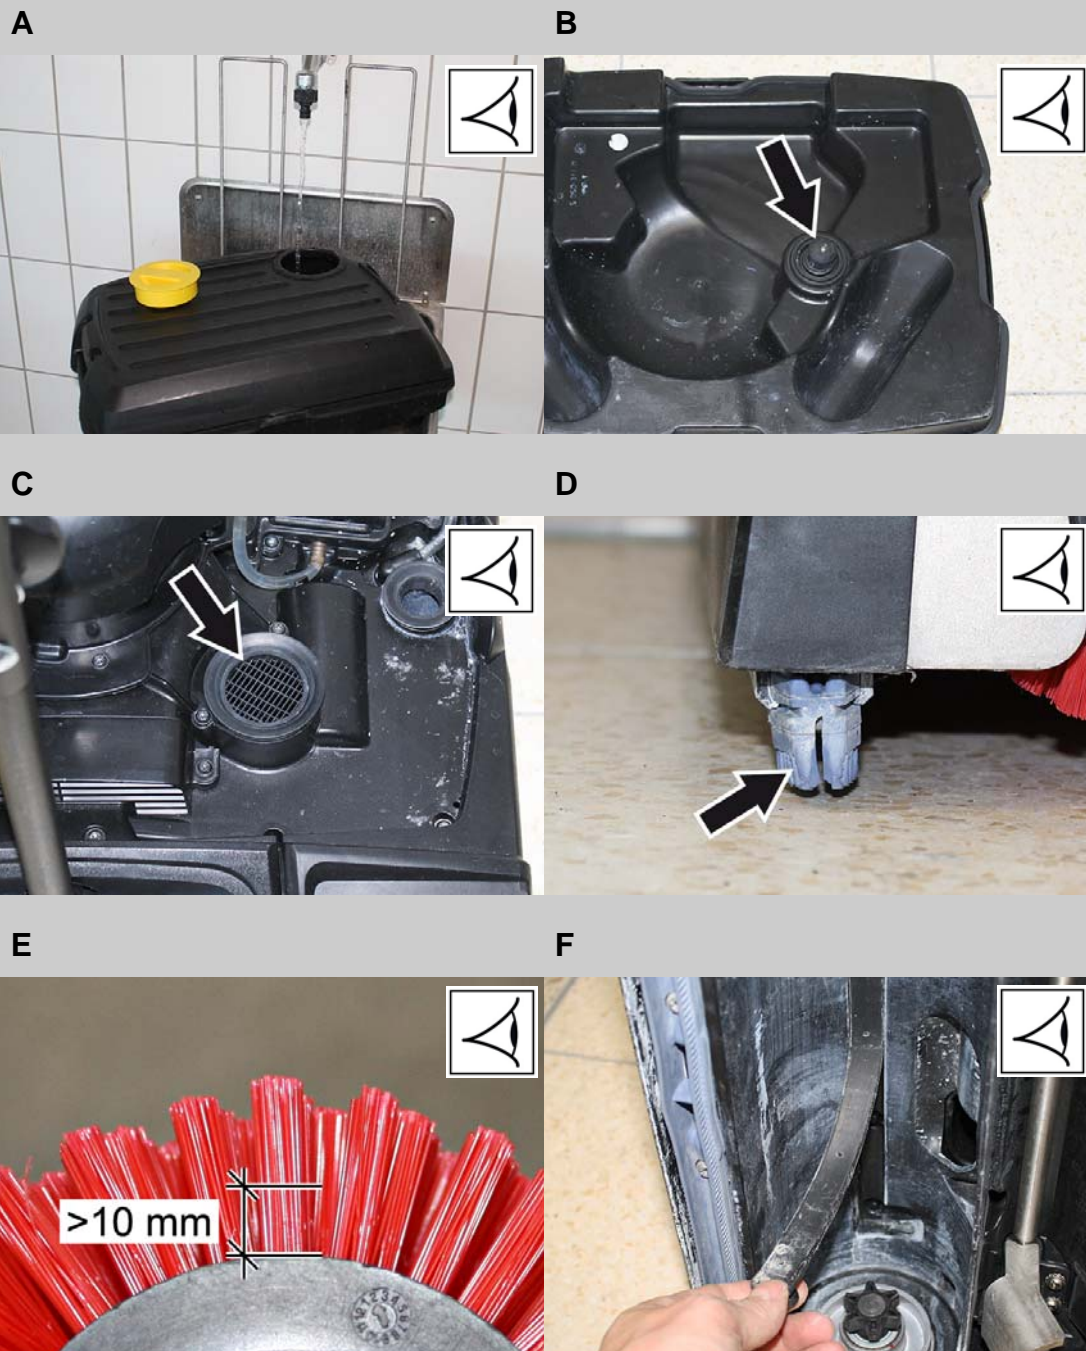

- A Fill the fresh water tank with clear water and rinse the appliance to avoid residue buildup.
- B Check the seal in the ball valve in the fresh water reservoir.
- C Check the fluff filter, clean if required.
- D Clean the vacuum lips, check for wear and replace the vacuum bar if required.
- E Check the brushes for wear, replace if required.
- F Clean the water distribution bars above the brushes, remove if necessary and flush with water.
- G Let the reservoirs dry prior to closing them to prevent odor creation.
- H Clean the outside of the appliance with a damp cloth which has been soaked in mild detergent.

2

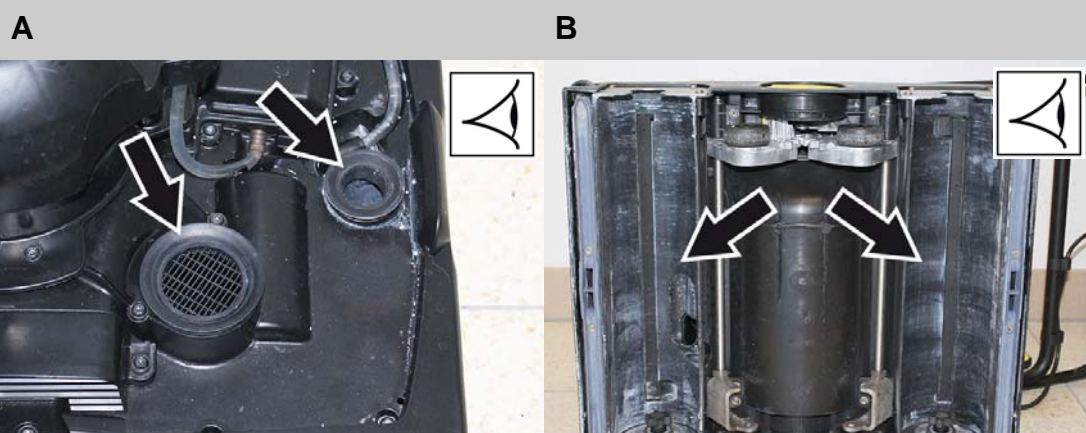

- A Check the condition of the seals between the appliance and the wastewater reservoir; replace if required.
- B Clean the brush tunnel.

3

Have annual customer service work performed.