Use and Maintenance SC401 B

ATTENTION! Do not use the machine before you have read and understood the machine's Operators Manual



1. Disconnect the on board battery charger cable from the electrical outlet.



2. Fill solution tank with clean water (do not exceed 40 °C / 104°F). Ensure the solution valve under the machine is in the open position.



3. For machines equipped with the detergent mixing system, fill the bottle with a suitable detergent and attach the hose. For machines without this option, add the manufactures recommend dosage to the solution tank.



4. For detergent system option, select the percentage of detergent by pressing and holding the solution button for 2 seconds, than toggle to the desired setting by pushing the solution button.



5. Install the squeegee and fasten it with the fly wheel. Lower the squeegee by pressing the pedal.



6. Place the appropriate brush or the padholder under the deck. Lower the deck by pressing the pedal.



7. If machine has a ignition key first set it to"I", press the main button once to activate the machine. Battery indicator will turn on.



8. Press the main button again (with LED on) to start the machine, press the vacuum button and the main button simultaneously for 1 second to engage the brush "click on" to the deck.



9. For sensitive floors the brush/pad can be made "pre-wet" with solution before starting to avoid marks. Press the main button and the solution button simultaneously for 10 to 20 seconds before starting to scrub.



10. Begin scrubbing by placing hands on the touch sensors on the handlebar.



11. For drive models, adjust the maximum speed with the speed adjustment dial. To reverse, press the red button on the handle together with one hand on any of the touch sensors.



12. Press the solution button to adjust the solution flow to the cleaning needs. When the LEDs are off, the solution flow is off. If necessary press the Quiet mode button for extra low sound level (LED will flash).



13. Lift the squeegee and press the main button to turn machine off. Lift the brush deck by pressing the pedal. To disengage the brush, press the vacuum button and the main button simultaneously for 1 second.



14. Empty the recovery tank with the flex hose. Then empty the solution tank using the transparent hose.



15. Empty the debris catch cage and wash the recovery tank with clean water.



16. Clean the filter: A) Close the solution valve under the machine. B) Remove the transparent cover and the gasket, then remove and clean the filter inside. C) Reassemble the filter.



17. Remove, rinse, and inspect squeegee and blades.



18. Take a clean damp cloth and wipe down 19. Charge the batteries: Connect the the exterior of the machine.



battery charger cable to the electrical socket.



20. Park the machine with the recovery tank cover in the open position for ventilation.

Once the machine has been used and only the first LED light on the left side of the battery level indicator is lit, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE THE CHARGER IS ALWAYS CONNECTED TO THE BATTERIES EVEN IF NOT USED FOR EXTENDED PERIODS OF TIME TO PREVENT DAMAGE TO THE BATTERY DUE TO LOW VOLTAGE.