




VU500 How To

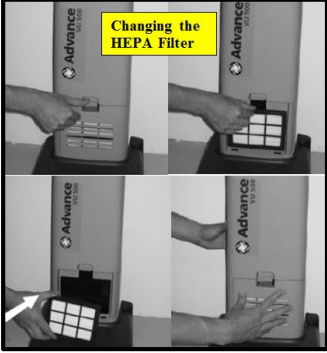
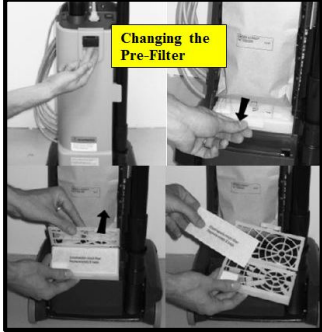

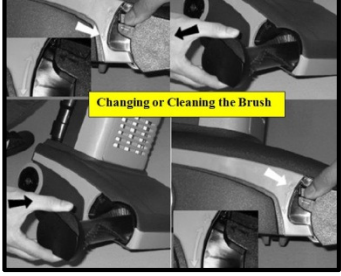



Prepare for Use

<p>1</p>  <p>Engage the carabine function to release the cord. Loop cord then lock in restraint clip.</p>	<p>2</p>  <p>Plug machine into an appropriate electrical outlet. Turn on main power switch.</p>	<p>3</p>  <p>Step on the pedal then tilt the vacuum handle backwards to begin vacuuming.</p>
---	--	--

Clearing a Clog

<p>1</p>  <p>Restricted airflow light indicator comes on, please check the following things.</p>	<p>2</p>  <p>Check to see if bag is full or if the tube, hose or nozzle is blocked. Replace bag if needed.</p>	<p>3</p>  <p>Remove the upper hose and wand to inspect for clogged debris. Detach the wand receptacle.</p>
<p>4</p>  <p>Release and remove the brush cover by unlocking the bearing lock then pull brush out.</p>	<p>5</p>  <p>Inspect lower hose by looking through the wand receptacle to the brush housing area. <i>(You should have a clear view. If not, there is a clog)</i></p>	<p>6</p>  <p>Remove debris by pushing it forward via the brush opening <i>(use a long narrow object if needed)</i>. Reinstall brush and brush cover. Reattach wand receptacle.</p>

VU500 How To Maintenance

<p>1</p>	 <p>Changing the HEPA Filter</p> <p>Disconnect power cord, open cover latch, remove and replace the HEPA-filter then reinstall the filter cover.</p>	<p>2</p>	 <p>Changing the Pre-Filter</p> <p>Disconnect power cord, open dust lid compartment and remove the dirty pre-filter. Wash with warm water (<i>let dry</i>) or install a new pre-filter then close the lid.</p>	<p>3</p>	 <p>Placement Holder for Deodorizer Pad</p> <p>Replace the deodorizer pad (<i>found in the pre-filter holder</i>), put the filter holder back in the bag housing then close the cover.</p>
<p>4</p>	 <p>Changing or Cleaning the Brush</p> <p>Unlock the bearing block, remove brush (clean or replace), slide brush into the bearing block then lock by turning clockwise.</p>	<p>5</p>	 <p>Changing the paper dust bag</p> <p>Remove dust lid. Gently remove the bag. Insert new (<i>unfolded</i>) bag in the bag housing. Install back cover.</p>	<p>6</p>	 <p>Emptying the cloth dust bag</p> <p>Remove dust lid. Gently remove the bag clip (<i>shake out bag contents</i>). Insert cleaned/new bag. Install back cover.</p>
<p>7</p>	 <p>Wrap cord and store on the hook. Check the brushes and remove debris then store the machine in a clean, dry place (<i>indoors</i>).</p>	<p>Filter Maintenance →</p>	<p>HEPA-filter</p> <ul style="list-style-type: none"> • The HEPA-filter <i>can not</i> be cleaned or washed. • Must be replaced when the HEPA-filter is clogged. • Replace 1-2 times per year (<i>depending on use</i>). 		<p>Pre-filter</p> <ul style="list-style-type: none"> • Replace the motor pre-filter after every fifth dust bag change (<i>more often if needed</i>).