

**CROSLEY**

## BLUETOOTH INPUT

The Bluetooth input feature is meant to be a simple convenience for anyone wanting to connect their device to play through the Crosley. Here are some common tips to try if you are unable to connect to Bluetooth:

- Completely forget the turntable and reconnect as if it was the first time.
- Try a different device (i.e. phone, MP3)
- Ensure the device (i.e. phone, MP3) is charged and not low on battery, that will affect connectivity.
- Wifi signals can interfere with Bluetooth connectivity. Try to disable Wifi and attempt to connect to Bluetooth.


### STEP 1

Turn the function switch to Bluetooth mode, you will hear an activation sound from the unit.



### STEP 2

Turn on the Bluetooth feature of your audio device, search for your Crosley model number (i.e. "Crosley CR8005") and pair.

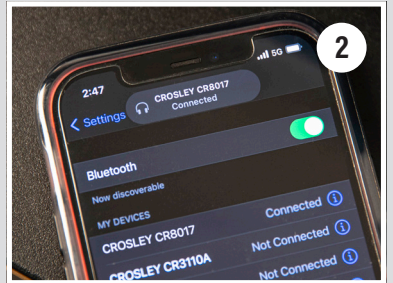

### STEP 3

Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.



### STEP 4

Play and stream music from your device to the unit.

