



BLUETOOTH OUTPUT

The Bluetooth output feature is meant to transmit audio from the turntable to another Bluetooth device such as wireless Bluetooth headphones, speakers, or other receiving devices. Here are some common tips to try if you are unable to connect to Bluetooth:

- Turntable will attempt to pair for 2 minutes to the closest available Bluetooth device. If not successful it will deactivate Bluetooth search function automatically. To start the search process again, turn the unit OFF for 20 seconds or more, then back ON.
- Ensure third party device (i.e., speaker, phone, tablet) is not paired/connected to another Bluetooth device.
- Wifi signals can interfere with Bluetooth connectivity. Try to disable Wifi then attempt to connect to Bluetooth.
- Try connecting a different device.
- Try forgetting from third party device and reset the Crosley by unplugging from power source for at least 1 hour.

STEP 1

Set the function switch to Bluetooth output mode.



STEP 2

Set the device you would like to connect to pairing mode.



STEP 3

Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.



STEP 4

Play music from your turntable to the device.

