

TOURING ITEMS  
**TYPES**<sup>®</sup>

# 4K ULTRA HD DASH CAM

with APP Controlled

ITM. / ART. 1658573  
WP ITM. BT533004  
Care & Use Instructions



**Important, retain for future reference:  
Read carefully**

# TABLE OF CONTENTS

1. Introduction .....	1
2. Package Contents .....	2
3. Product Specifications .....	3
4. Product Dimension .....	3
5. Product Overview .....	4
6. Button Configuration .....	5
7. Before You Start.....	6
8. Installation .....	6
9. Initial Setup .....	8
10. Configuration & Menu Settings.....	9
11. Camera Status & LED Indicators .....	16
12. Recording Time .....	16
13. Time-lapse Recording Logic .....	17
14. Technical Specifications .....	17
15. Downloading the APP .....	18
16. APP Setup .....	19
17. APP Settings .....	21
18. Viewing and Managing Media Files Using A Computer .....	25
19. Safety Information .....	26
20. Maintenance & Warranty .....	28
21. General Information .....	31

# 1. INTRODUCTION

Please read all of the installation instructions carefully before installing the product. Improper installation will void the manufacturer's warranty. The installation instructions do not apply to all types of vehicles, and are written as guidelines to assist in installing the system.



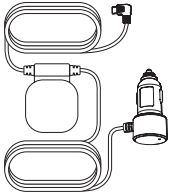



 

Consult an experienced technician if you are not comfortable installing the product. You can also contact TYPE S at **866.294.9244** to speak to one of our installation specialists if you have any specific questions regarding the 4K Ultra HD Dash Cam.

**BEFORE using the 4K Ultra HD Dash Cam, please read the safety information provided in this user manual. ALWAYS use the product as outlined in this user manual.**

Please make sure to read and understand all local laws and regulations regarding cameras and their use in a vehicle. Laws vary by state.

## 2. PACKAGE CONTENTS

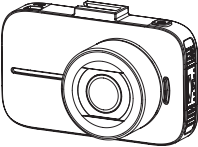
1. 1 x 4K Ultra HD Dash Cam
2. 1 x 12 / 24V DC Power Adapter w/ GPS Receiver
3. 1 x Windshield Mount
4. 1 x 16GB MicroSD Card
5. 1 x 3M VHB™ Double Sided Tape
6. 1 x Instruction Manual
7. 1 x Quick Install Guide
8. 1 x Warranty Card

<p>1.</p> 	<p>5.</p> 
<p>2.</p> 	<p>6.</p> 
<p>3.</p> 	<p>7.</p> 
<p>4.</p> 	<p>8.</p> 

### 3. PRODUCT SPECIFICATIONS


<b>Screen:</b>	3" IPS
<b>Resolution:</b>	4K UHD - Ultra High Definition (3840 x 2160p)
<b>Frequency:</b>	2.4 GHz
<b>Operating Voltage:</b>	DC 12V / 24V - Cigarette Lighter Adapter (CLA)
<b>Operating Temperature:</b>	14°F~140°F (-10°C~60°C)
<b>Viewing Angle:</b>	131° Diagonal
<b>Image Sensor:</b>	5MP
<b>Maximum Signal Range:</b>	9.84 Feet/3 Meters (without interference or obstruction)

### 4. PRODUCT DIMENSION

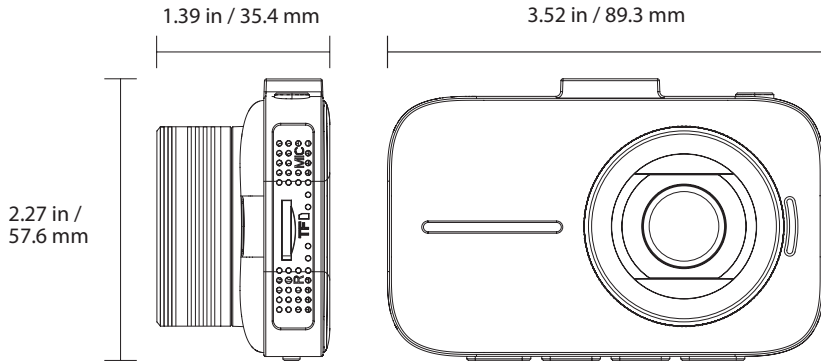


## 5. PRODUCT OVERVIEW

### FRONT

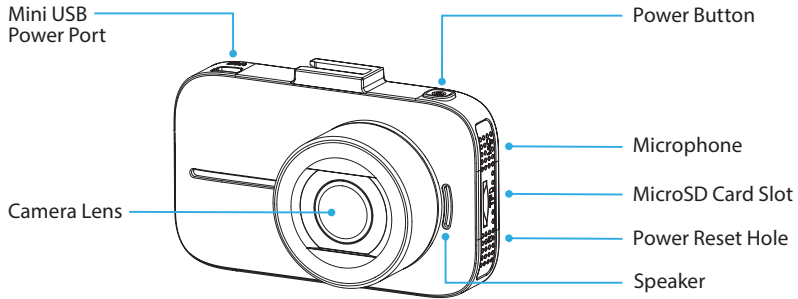

### BACK

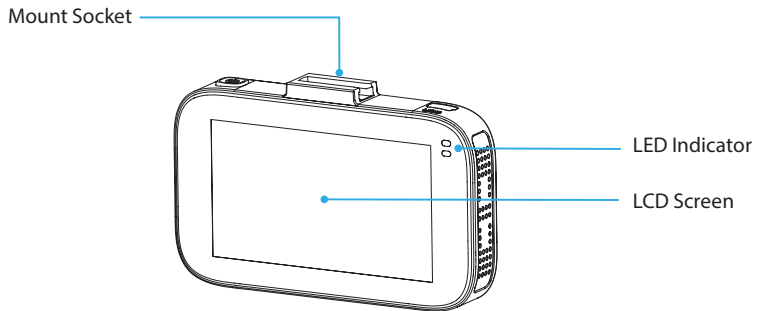

## 6. BUTTON CONFIGURATION

### 1. Power Button

Press and hold for 3 seconds to turn the camera ON/OFF. Press once to switch between live view and digital clock.

### 2. ▲ Up Button

Press to navigate up within the menus.

### 3. OK / Record Button

Press to confirm selection when in menus.  
Press to start / stop recording in Video Mode.



### 4. ▼ Down Button

Press to navigate down within the menus.

### 5. M Menu Button

Press to open the menu  
or go back to the previous screen.

Apply configuration and settings to the Dash Cam using the 4 function buttons. Refer to the screen display below for the buttons and their corresponding functions.

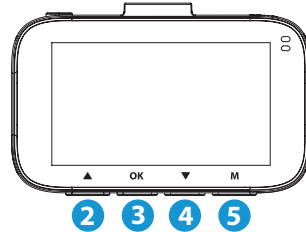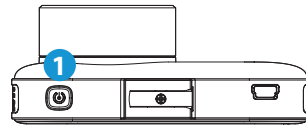


- a. Photo Resolution
- b. Burst Photo
- c. Photo Count
- d. Video Resolution
- e. WiFi
- f. Lock Video
- g. Motion Detection
- h. Loop Record
- i. G-Sensor
- j. Microphone
- k. GPS
- l. Recording Time
- m. Date
- n. Time




## 7. BEFORE YOU START

Please power ON, configure the Initial Settings (Section 9), connect with the TYPE S Drive APP (Section 16) and test before installing in your vehicle. Please use this document for detailed instructions and product information. As always, please feel free to contact our Customer Care team for further assistance toll-free (866) 294-9244.

## 8. INSTALLATION

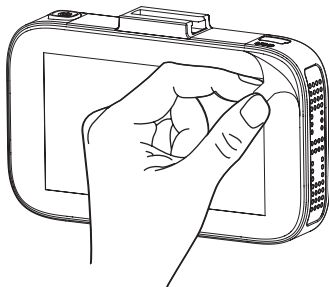


- 1 Peel off the protective film.

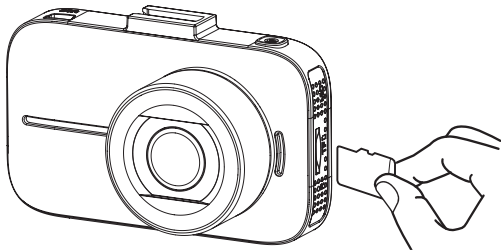


- 2 Make sure the MicroSD Card is inserted.

- 3 Attach the Windshield Mount onto the Dash Cam and slide to the left.

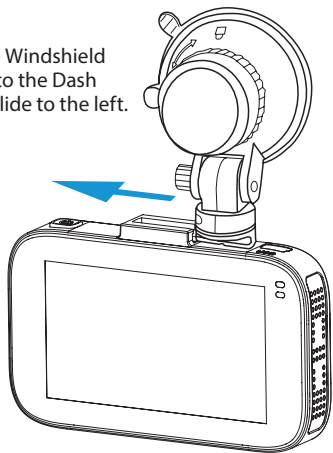




- 4 Plug the Mini USB power cable into the DC input port.

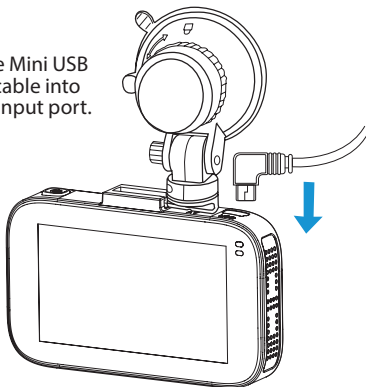


- 5 Adjust the Windshield Mount to get the best angle.

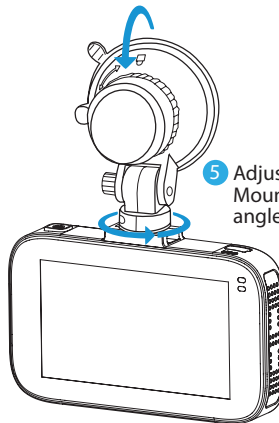


- 6 Check the live screen in TYPE S Drive APP and determine the most suitable mounting position. (See page 19 on using the APP.)

**Warning:** Do not install the product in a location where it can obstruct the driver's field of vision.

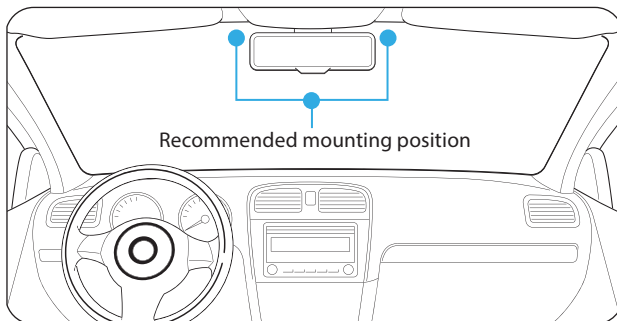


- 7 Route and hide the power cable in the headliner and pillars in your vehicle.

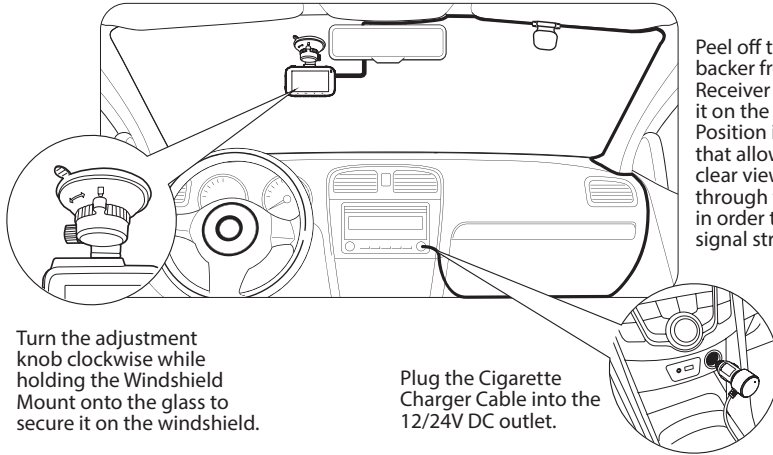




Peel off the 3M tape backer from the GPS Receiver and mount it on the windshield. Position it on a surface that allows it to get a clear view of the sky through the windshield in order to get the best signal strength.

## 9. INITIAL SETUP

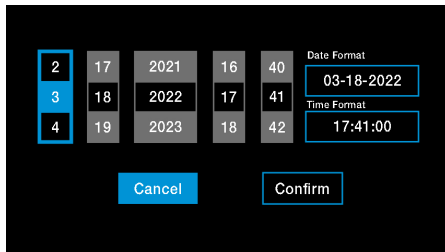

Set the date & time before installing and using the dash cam. This date & time is the time stamp for all recorded media files and the digital clock.

## 10. CONFIGURATION & MENU SETTINGS

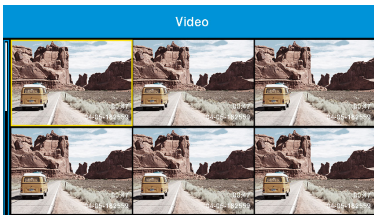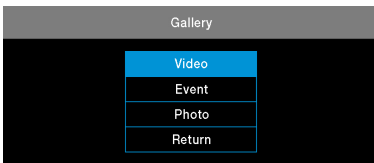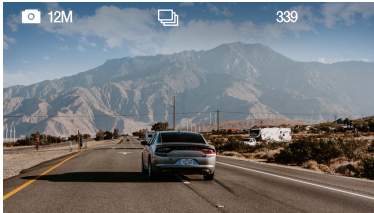

### Switching Modes

- Recording must be paused manually in order to switch between modes. Press **OK** to stop recording.
- Press **M** to cycle through Video Mode, Camera Mode and Gallery Mode.

### Video Mode

- This is the default recording setting. The Dash Cam will start recording automatically once it is powered on.
- Stop loop video: press **OK** once to pause or resume recording.
- Lock video: press **M** during recording to lock that recorded file.

### Camera Mode


- Press **OK** once to take a photo.

### Gallery Mode

- Press **▲** and **▼** to cycle through the video folder, event video folder and photo folder, and press **OK** to enter that folder.

### Gallery Mode - Video, Event Video

- Press **▲** and **▼** to scroll through the recorded video files and press **OK** to playback and pause. Press **▲** and **▼** when the video is playing to rewind and fast forward.
- Press and hold **M** to choose to delete the highlighted video file or all video files. Press **OK** and then choose Confirm to proceed.
- Press **M** to go back to the folder selection screen.

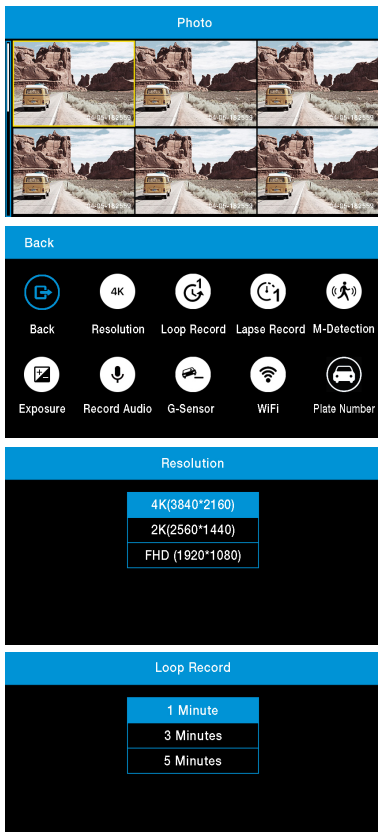

### Gallery Mode - Photo

- Press ▲ and ▼ to scroll through the previews and press **OK** show it in full size.
- Press and hold **M** to choose to delete the highlighted photo or all photos. Press **OK** and then choose Confirm to proceed.
- Press **M** to go back to the folder selection screen.

### Video Settings Screen


- The Video Settings Screen can only be accessed from Video Mode.
- Recording must be paused manually to access the Video Settings Screen.
- Press and hold **M** to enter the Video Settings Screen.
- Press ▲ and ▼ to scroll through all the settings and press **OK** to choose the highlighted setting.

### Resolution

- 4K (3840 x 2160P), 2K (2560 x 1440P) or FHD (1920 x 1080P).

### Loop Record

- 1 minute, 3 minutes or 5 minutes.

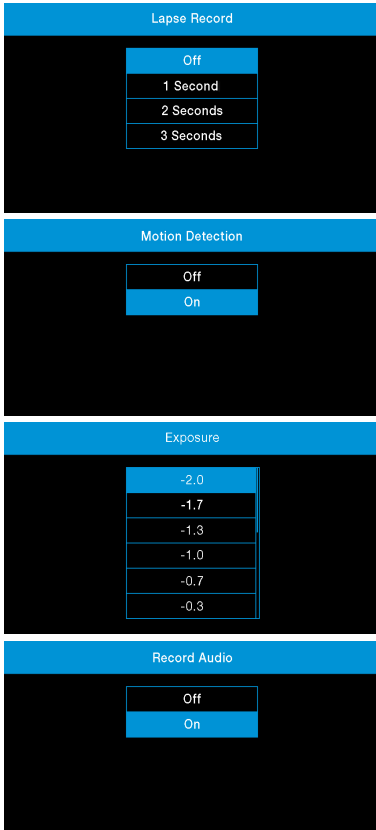

### **Lapse Record**

- 1 second, 2 seconds, 3 seconds or OFF.

### **Motion Detection**


- ON or OFF.

### **Exposure**

- -2.0, -1.7, -1.3, -1.0, -0.7, -0.3, 0, +0.3, +0.7, +1.0, +1.3, +1.7, or +2.0


### **Record Audio**

- ON or OFF.

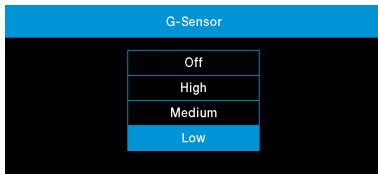


### **G-Sensor**

- High, Medium, Low or OFF.

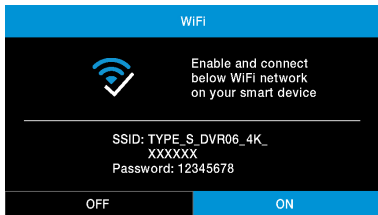


### **WiFi**

- ON or OFF.

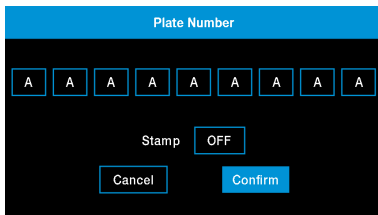


### **Plate Number**

- Enter your vehicle license plate number here.

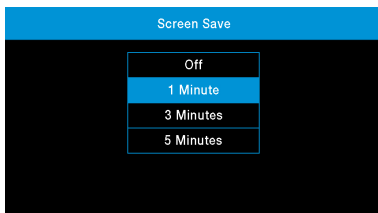


### **Screen Save**

- 1 minute, 3 minutes, 5 minutes or OFF.  
(Screen will dim to a digital clock interface after the specified time you select.)

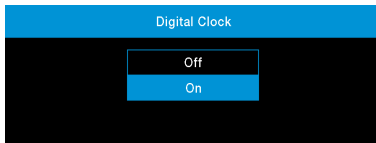


### **Digital Clock**

- ON or OFF.

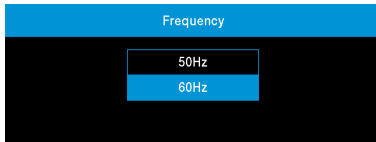


### **Frequency**

- 50Hz or 60Hz.

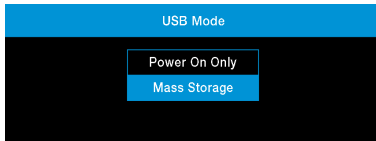


### **USB Mode**

- Power On Only or Mass Storage.

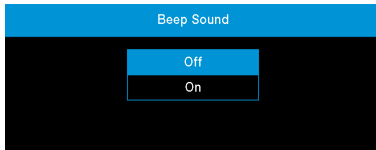

### **Beep Sound**

- ON or OFF.

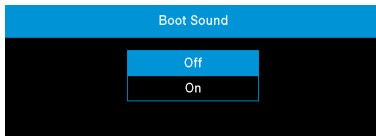


### **Boot Sound**

- ON or OFF.



### **Language**

- Supports English only.

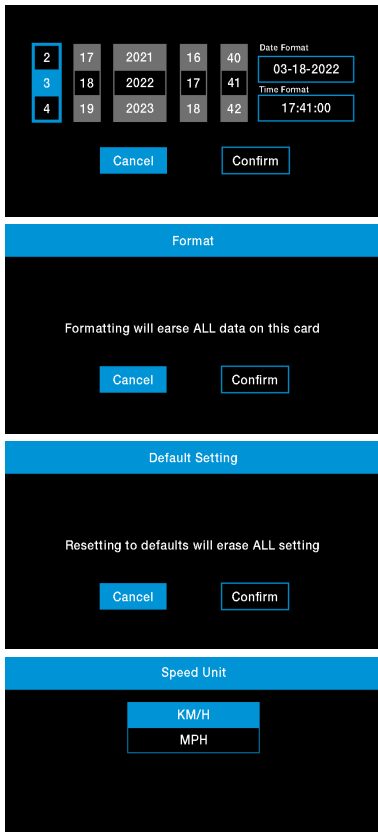

### **Date/Time**

- Set the date and time.

### **Format**

- Select to erase all data on your MicroSD card.


### **Default Setting**

- Reset to default settings.

### **Speed Unit**

- KM/H or MPH.



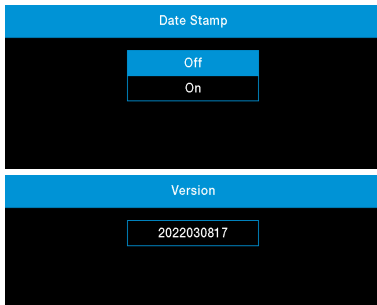


### Date Stamp

- ON or OFF.

### Version

- Firmware version.

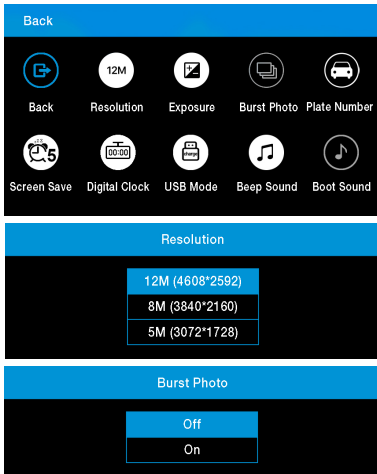

### Camera Settings Screen

- The Camera Settings Screen can only be accessed from Camera Mode.
- Press and hold **M** to enter the Camera Settings Screen.
- Press **▲** and **▼** to scroll through all the settings and press **OK** to choose the highlighted setting.

### Resolution

- 12M (4608x2592), 8M (3840x2160) or 5M (3072x1728).

### Burst Photo

- ON or OFF.
- For the rest of the camera settings please refer to the Video Settings Screen.

## 11. CAMERA STATUS & LED INDICATORS

Power / Mode Status	LED Indicators
<b>Power On</b> Dash Cam powers ON when the engine is turned on. To manually power ON, press and hold the power button for more than 3 seconds.	Red LED light stays on when Dash Cam is powering on.
<b>Recording</b>	Blue LED light flashing.
<b>Recording Stopped</b>	Red LED light stays on.
<b>Firmware Upgrade</b>	Red LED light stays on for 30 seconds, and then blue LED light flashes.
<b>NOTE:</b> When the LED light appears in purple color that means blue and red light are both on.	

## 12. RECORDING TIME

Memory Card Capacity	Total Recording Time (4K)	Total Recording Time (2K)	Total Recording Time (FHD)
<b>16GB</b>	At least 57 minutes	At least 107 minutes	At least 171 minutes
<b>32GB</b>	At least 119 minutes	At least 224 minutes	At least 359 minutes
<b>64GB</b>	At least 246 minutes	At least 462 minutes	At least 740 minutes
<b>128GB</b>	At least 490 minutes	At least 919 minutes	At least 1471 minutes

**Note:** If you use your own MicroSD card please insert it into the Dash Cam and use the format function under video settings screen (refer to page 14) before first use.

## 13. TIME-LAPSE RECORDING LOGIC

Mode	Behavior
Off	Without time-lapse record, captures 30 frames per 1 second.
1 Second	Time-lapse record, captures 1 frame per 1 second.
2 Seconds	Time-lapse record, captures 1 frame per 2 seconds.
3 Seconds	Time-lapse record, captures 1 frame per 3 seconds.

## 14. TECHNICAL SPECIFICATIONS

### Memory Management

Mode	Resolution	1 Minute Video Size	Loop Period (16GB SD Card)
4K	3840 X 2160	225MB	$12865 / 225 = 57$ Minutes
2K	2560 X 1440	165MB	$12865 / 165 = 77$ Minutes
FHD	1920 X 1080	93MB	$12865 / 93 = 138$ Minutes

Memory Card Capacity	System Reserve	Event & Video	Photo
16GB	0.435GB	12.865GB	1.2GB
32GB	0.870GB	26.930GB	1.2GB
64GB	1.755GB	55.54GB	1.2GB
128GB	3.450GB	110.35GB	1.2GB

## 15. DOWNLOADING THE APP

The 4K Ultra HD Dash Cam auto sync function enables you to control and playback recorded media files using your smartphone with the TYPE S Drive APP. Scan below QR code or search "TYPE S Drive" in the APP Store or Google Play. Download and install the APP.



Compatible with iPhone 4s and higher, iPad3, iPad Mini, iPad Air and higher, and iPod touch 5th Generation and higher.  
Requires iOS 9.0 or higher.



Compatible with phones with Android™ 5.0 or higher.


Once installed, open the APP and begin enjoying your TYPE S Drive APP.

**Note:** The APP is only available on smartphones with Apple iOS 9 or newer, and Android 5.0 or newer. The TYPE S Drive APP is not accessible from tablets, browsers, or PCs.

**Tip:** Check out the installation video at [www.typesauto.com](http://www.typesauto.com) to help familiarize yourself with the installation process before starting.


## Auto sync with the Dash Cam




1. Open the 4K Ultra HD Dash Cam's video settings menu.
2. Go to **WiFi Setting** and turn it on.  
**Note:** Default WiFi is set as On.

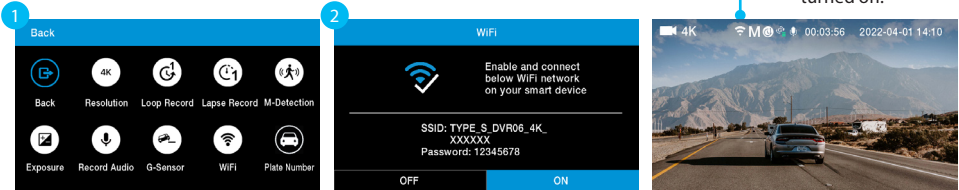

## Android device


3. Open the TYPE S Drive APP and select the Dash Cam category. Select 4K Ultra HD Dash Cam from the list of Dash Cams. Press **Set Up Device**.
4. The APP will search for Dash Cam's SSID TYPE\_S\_DVR06\_4K\_XXXXXX and connects to Dash Cam automatically.
5. You should see the live view of Dash Cam on the main interface if the connection is successful.

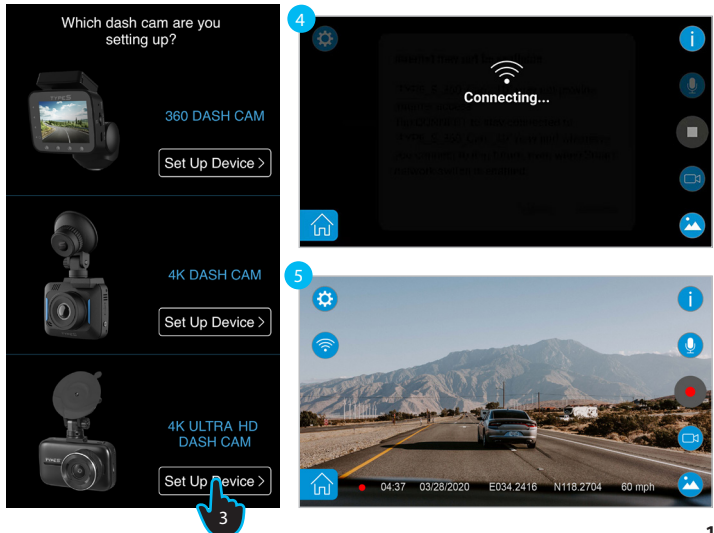

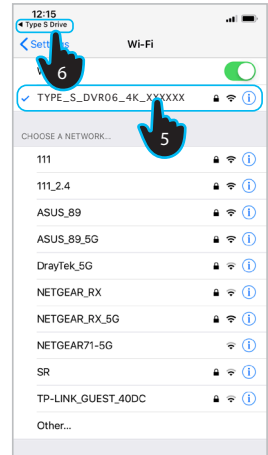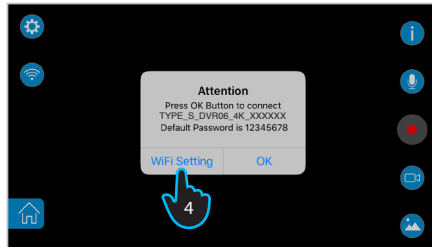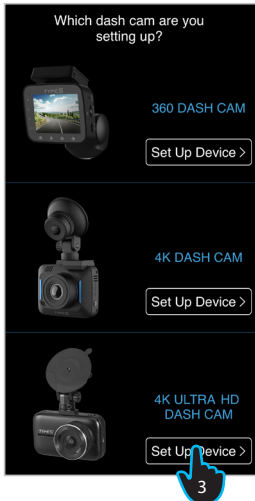



**iOS device** (Follow steps 1 - 2 from previous page's instructions)

3. Open the TYPE S Drive APP and select the Dash Cam category. Select 4K Ultra HD Dash Cam from the list of Dash Cams. Press **Set Up Device**.
4. Press **WiFi Setting** on the main interface when it prompts you to go to the WiFi setting page.
5. On the WiFi setting page choose SSID "TYPE\_S\_DVR06\_4K\_XXXXXX" and enter password "12345678".
6. Press TYPE S Drive icon to return to the APP.
7. You should see the live view of the Dash Cam on the main interface.

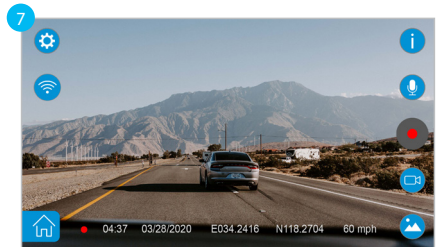


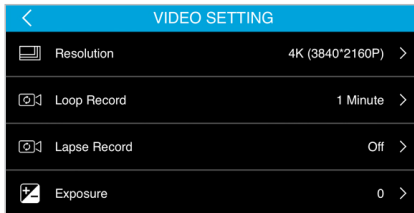
## 17. APP SETTINGS

### Main Interface

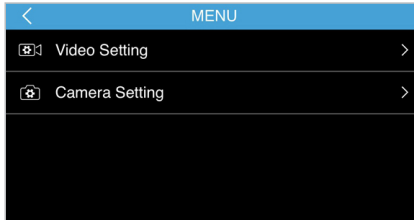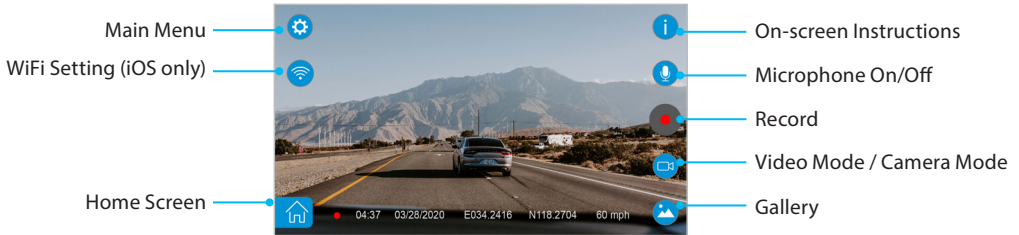

#### Main Menu


The default settings of the 4K Ultra HD Dash Cam will allow you to use it without the need to change any settings. However, you can still customize the Dash Cam any to your own preferences. Press the  icon to enter the Main Menu.



#### Video Setting (Video Mode)

- Resolution - Select the resolution of each recorded footage.
- Loop Record - Select the duration of each recorded footage.
- Lapse Record - Select between normal video or time-lapse video.


(**Note:** Refer to page 17 about time-lapse recording.)

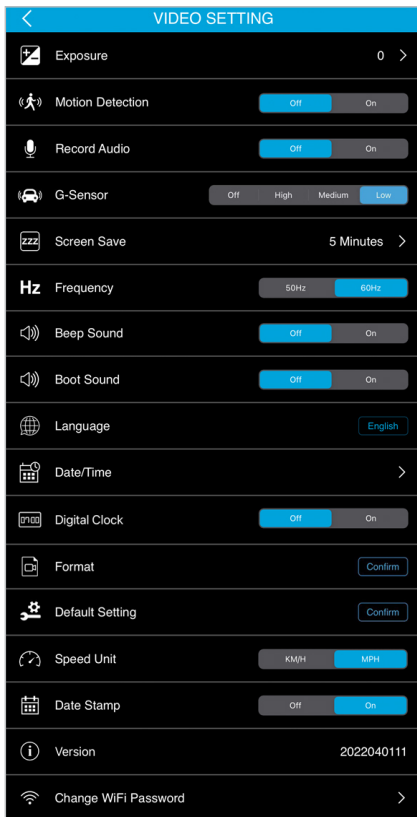

## Video Setting (Video Mode)


- **Exposure** - Adjust the overall brightness or darkness during recording.
- **Motion Detection** - Select to turn the motion detection function On/Off.
- **Record Audio** - Select to turn the record audio function On/Off.
- **G-Sensor** - Select the level of sensitivity for the G-Sensor.
- **Screen Save** - Screen will dim to a digital clock interface after the specified time is selected.
- **Frequency** - Adjust this setting to prevent the flickering of lights by selecting the frequency according to your local regulations.
- **Beep Sound** - Turn the Beep Sound On/Off.
- **Boot Sound** - The camera will play a sound when it is turned on and off. Choose this option to turn On/Off the sound.
- **Language** - Default language is English.
- **Date & Time** - Set up the date and time of the Dash Cam.
- **Digital Clock** - Turn the Digital Clock On/Off.
- **Format** - Erase everything on the MicroSD card.
- **Default Setting** - Reset settings to their defaults.
- **Speed Unit** - Select your desired Speed Unit.
- **Date Stamp** - Turn the Date Stamp On/Off.
- **Version** - Shows the Dash Cam's current firmware version.
- **Change WiFi Password** - Change the Dash Cam's WiFi password.



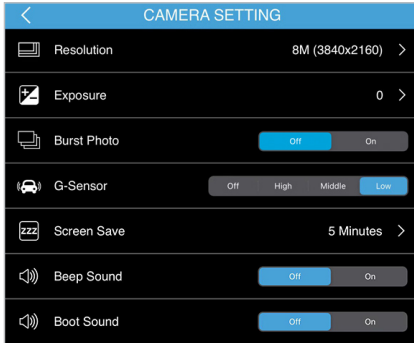


### Camera Setting (Camera Mode)

- Resolution - Select the resolution of captured images.
- Burst Photo - Select to turn the burst photo function On/Off.
- For the rest of the camera settings please refer to the Video Settings Screen.

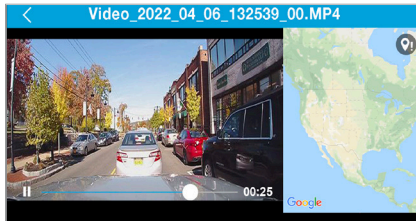


### GPS Signal Status 1

This status indicates GPS receiver is waiting for GPS signal when the footage is recording. GPS trip data will resume once it picks up the signal. If this status appeared repeatedly please call our technical support to assist in troubleshooting.

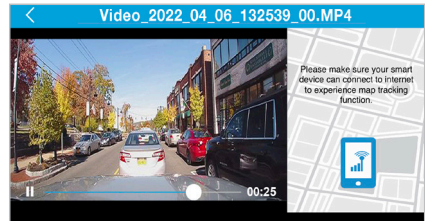


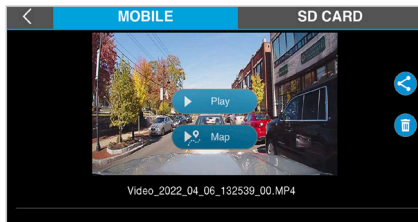
### GPS Signal Status 2

This status indicates map tracking is not working. Mobile data must be turned on for map tracking to process.

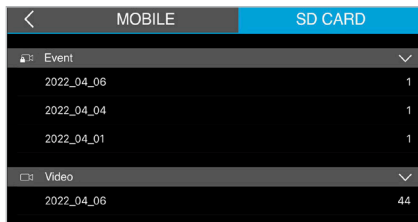




## Gallery

Press the  icon on the main interface to enter the media gallery. Press the **SD CARD** tap to access the media files stored in the MicroSD card. Scroll down the list to select the file arranging from newest to oldest.





## MOBILE tap

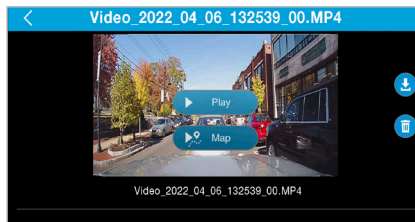
Press the **MOBILE** tap to access the downloaded files in your smartphone. You can manage files even if your phone is not auto sync with the Dash Cam. Press the  icon to share the selected file, or press the  icon to delete the file.





## SD CARD tap

Press the  icon to download the selected file into your smartphone, or press the  icon to delete the file from the MicroSD card.


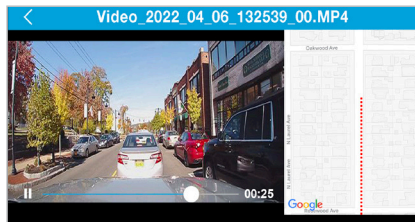
**NOTE:** 4K video capacity is large and takes longer to transfer from the Dash Cam's SD card to the APP. Please refer to page 25 for faster transferring of files using the mass storage function.



## GPS Information

You can press  to play the footage or press  to show GPS location while the footage is playing back.


## 18. VIEWING AND MANAGING MEDIA FILES USING A COMPUTER

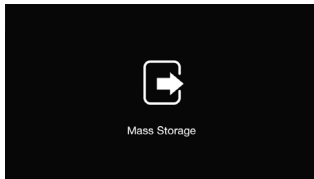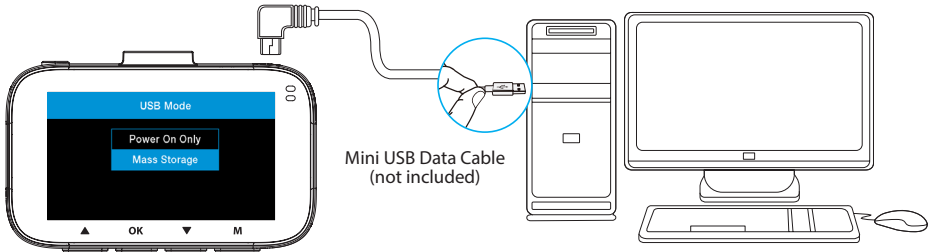

**Note:** The 4K Ultra HD Dash Cam will stop recording when it is connected to a computer.

Once the 4K Ultra HD Dash Cam is connected to a computer with the Mini USB data cable (not included), the screen on the left will show up on the Dash Cam.

Choose the Mass Storage option, the 4K Ultra HD Dash Cam will function as a card reader for the computer, and it will appear as a new USB drive. The user can manage files in the MicroSD card directly from the computer.

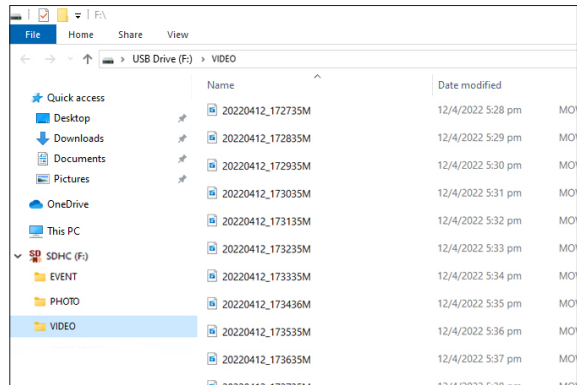

## 19. SAFETY INFORMATION

### IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS– This manual contains important safety and operating instructions of 12V Car charger for Model BT533004.
2. Before using the product, read all instructions and cautionary markings.
3. Do not expose car charger to rain, moisture, or snow.
4. Use of an attachment not recommended or sold by the product manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting car charger.
6. Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
7. Do not operate the car charger with a damaged cord or cigarette lighter connector – replace the damaged items with new factory replacement items immediately.
8. Do not operate the car charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceperson.
9. Do not disassemble the car charger; take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
10. To reduce risk of electric shock, unplug the charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.

**WARNING:** A failure to read and follow these warnings and instructions may result in a serious accident, including damaged property or a serious injury, including loss of life.

- The 4K Ultra HD Dash Cam is designed as an aid to the driver in recording incident in driving. However, you, the driver, must use it safely and properly. Use of the 4K Ultra HD Dash Cam is not a substitute for safe, proper and legal driving.
- Never depend on the 4K Ultra HD Dash Cam entirely when driving. The image on the screen is different from actual conditions.
- Always check behind and all around the vehicle visually with mirrors before proceeding.
- The area displayed by the 4K Ultra HD Dash Cam is limited. The 4K Ultra HD Dash Cam does not display objects that are out of the camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions.

- Be sure to check the Camera's position and mounting angle before each use.
- Do not strike the 4K Ultra HD Dash Cam. It is a precision instrument. Otherwise, it may malfunction or cause damage resulting in a fire or an electric shock.
- This product will only provide images of items that are within the field of view of the 4K Ultra HD Dash Cam. Thus, it is imperative that the 4K Ultra HD Dash Cam should be kept clean and unobstructed.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Never allow children to play with the device. Small parts may be a choking hazard.
- If the temperature changes rapidly, the system may not operate normally.
- When strong light directly enters a camera, objects may not be displayed clearly.
- The screen may flicker under fluorescent light.
- The colors of objects on the monitor may differ somewhat from those of the actual object.
- Do not use alcohol, benzene or thinner to clean the Camera. This will cause discoloration. To clean the Camera, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

## **SAFETY AROUND AND BEHIND OTHER VEHICLES**

Many preventable injuries and deaths occur in driveways or parking lots when drivers do not see children, pets, or others near their vehicles. Here are a few safety tips that will help you to avoid a back-over accident:

- Walk completely around your vehicle before getting in. Check for kids, toys, and pets before entering the vehicle and starting the engine.
- Know where children are. Have children stand in a place where they are in full view.
- Be aware of young children. Young children are small and hard to see.
- Parents, caregivers and all adults need to be vigilant in supervising children, especially when children are in the yard, driveway or parking lot playing near parked cars.
- Roll down your window so you will be able to hear what is happening outside your vehicle.
- Owners of SUVs, trucks, and vans need to take extra care to avoid hitting or running over a child.
- Teach children to move away from a vehicle whenever it is started.

## 20. MAINTENANCE & WARRANTY

### CLEANING

- If dirt, lint, or just is on the Camera, the Monitor may not clearly display objects. Rinse with water and wipe with a dry cloth.
- Do not use alcohol, benzene or thinner to clean the Camera. This will cause discoloration. To clean the Camera, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

### WARRANTY

#### • TYPE S

##### LIMITED WARRANTY

TYPE S warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, TYPE S liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and TYPE S makes no other warranty of any kind aside from the limited express warranty stated above.

**Note:** Warranty only applies for North American customers of purchases made in North America.

##### CONDITIONS OF WARRANTY

If during the 1 year warranty period your new product is found to be defective, TYPE S will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by TYPE S.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.

5. Repair or replacement parts supplied by TYPE S under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a “repair or replace” warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

**OWNER’S RESPONSIBILITIES:**

TYPE S will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM.

**Note:** Toll Free # is for North America Customers ONLY. See Customer service section for customer contact numbers for other regions/offices.

For customer service and technical support, please call us at 1.866.294.9244. If at that time it is determined that a replacement unit is needed, the support representative will issue a Return Authorization and instruct on how to get a new unit. TYPE S makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE 4K ULTRA HD DASH CAM. EXCEPT AS EXPRESSLY SET FORTH HEREIN, TYPE S AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TYPE S and/or its affiliates do not guarantee or promise that the user of 4K Ultra HD Dash Cam will not be in an accident or otherwise not collide with an object and/or person. Our 4K Ultra HD Dash Cam is not intended in any way to be a substitute for careful and cautious driving or for the consistent adherence to all applicable traffic laws and motor vehicle safety regulations.

The 4K Ultra HD Dash Cam is not intended to be a substitute for rearview mirrors or for any other motor vehicle equipment mandated by law. Even when properly installed, our 4K Ultra HD Dash Cam has a limited field of vision and does not provide a comprehensive view of the rear area of the vehicle.

TYPE S and/or its affiliates are not responsible for a user's intended or actual use of the 4K Ultra HD Dash Cam. In no event shall TYPE S and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the 4K Ultra HD Dash Cam, including but not limited to damaged property, personal injury and/or loss of life. Neither shall TYPE S and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the 4K Ultra HD Dash Cam, or for any delays, inaccuracies and /or errors in connection with the 4K Ultra HD Dash Cam and its functioning.

TYPE S and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents occurring with vehicles having the installed, and TYPE S and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.



## 21. GENERAL INFORMATION

### CUSTOMER SERVICE/CONTACT

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT TYPE S DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/ EXCHANGE THE PRODUCT.

FCC Compliance Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

4K Ultra HD Dash Cam  
with APP-Controlled  
BT533004

Responsible Party:

TYPE S

2975 Red Hill Ave., Ste. 100,  
Costa Mesa, CA 92626, U.S.A.

Tel: 1-866-294-9244

Android is a trademark of Google Inc.

iPhone, iPad, Mac and iPod touch are trademarks of Apple Inc.

3M VHB™ is a trademark of 3M Company.





A Horizon Brands Company

2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, U.S.A.

1.866.294.9244 | [info@typesauto.com](mailto:info@typesauto.com)

©2022 TYPE S. All rights reserved.

[www.typesauto.com](http://www.typesauto.com)

ML-533004\_V1