

TOURING ITEMS
TYPES[®]

Y400

4K Mirror Dashcam

WP ITM. BT532783
Care & Use Instructions



**Important, retain for future reference:
Read carefully**

TABLE OF CONTENTS

| | |
|---|----|
| 1. Introduction | 3 |
| 2. Package Contents | 4 |
| 3. Product Specifications | 5 |
| 4. Product Dimension | 5 |
| 5. Product Overview | 6 |
| 6. Before you Start | 7 |
| 7. Installation | 7 |
| 8. Initial Setup | 9 |
| 9. Button Configuration | 9 |
| 10. Settings & Operation | 11 |
| 11. Recording Time..... | 18 |
| 12. Time-lapse Recording Logic | 18 |
| 13. Technical Specifications | 19 |
| 14. Download and use the TYPE S Drive App | 20 |
| 15. App Setup | 21 |
| 16. App Settings | 25 |
| 17. Viewing and managing media files using a computer | 29 |
| 18. Safety Information | 30 |
| 19. Maintenance & Warranty | 32 |
| 20. General Information | 35 |

1. INTRODUCTION


Please read all of the installation instructions carefully before installing the product. Improper installation will void the manufacturer's warranty. The installation instructions do not apply to all types of vehicles, and are written as guidelines to assist in installing the product.

Consult an experienced technician if you are not comfortable installing the product. You can also contact TYPE S at **866.294.9244** to speak to one of our installation specialists if you have any specific questions regarding this product.

BEFORE using the Dashcam, please read the safety information provided in this user manual. ALWAYS use the product as outlined in this user manual.

Please make sure to read and understand all local laws and regulations regarding cameras and their use in a vehicle. Laws vary by state.

2. PACKAGE CONTENTS

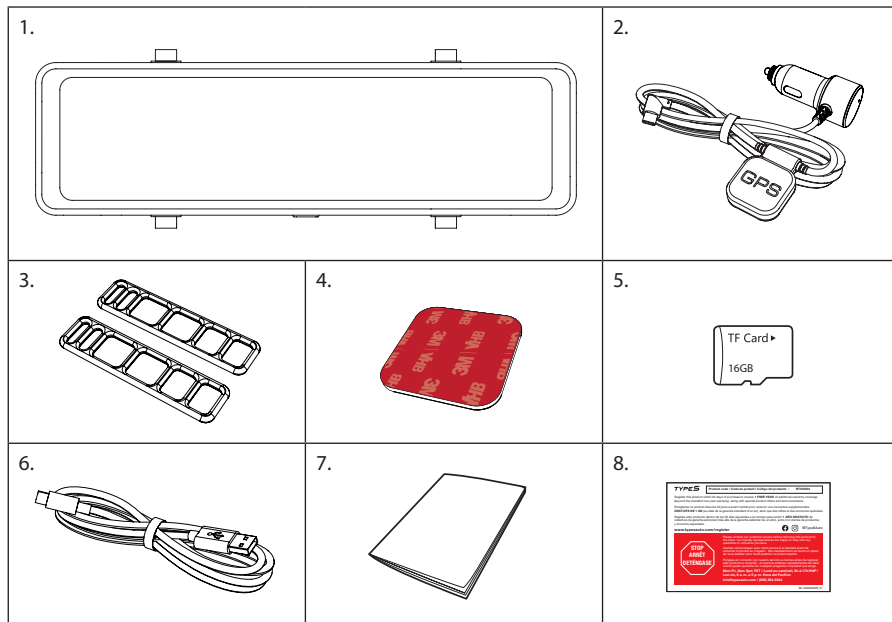

1. 1 x 4K Mirror Dashcam

2. 1 x 12 / 24V DC Power Adapter w/GPS receiver and 3M VHB™ Double Sided Tape

3. 2 x Rubber Straps

4. 1 x 3M VHB™ Double Sided Tape (Spare)

5. 1 x 16GB MicroSD Card

6. 1 x 3.28' / 1m USB-A to USB-C Data Transfer Cable


7. 1 x Instruction Manual

8. 1 x Warranty Card


3. PRODUCT SPECIFICATIONS

| | |
|-------------------------------|---|
| Screen: | 9.4" IPS |
| Resolution: | 4K UHD - Ultra High Definition (3840 x 2160p) |
| Frequency: | 2.4 GHz |
| Operating Voltage: | DC 12V / 24V - Cigarette Lighter Adapter |
| Operating Temperature: | 14°F~140°F (-10°C~60°C) |
| Viewing Angle: | 139.4° (optical diagonal field of view) |
| Image Sensor: | 5MP |
| Battery Capacity: | 500mAh |
| Maximum Signal Range: | 9.84 Feet/3 Meters (without interference or obstruction) |

4. PRODUCT DIMENSION

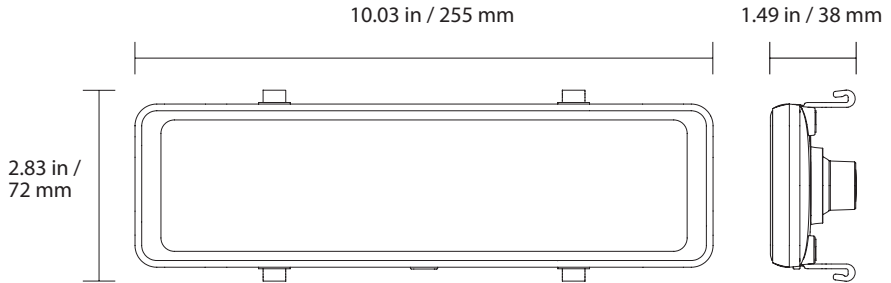

5. PRODUCT OVERVIEW

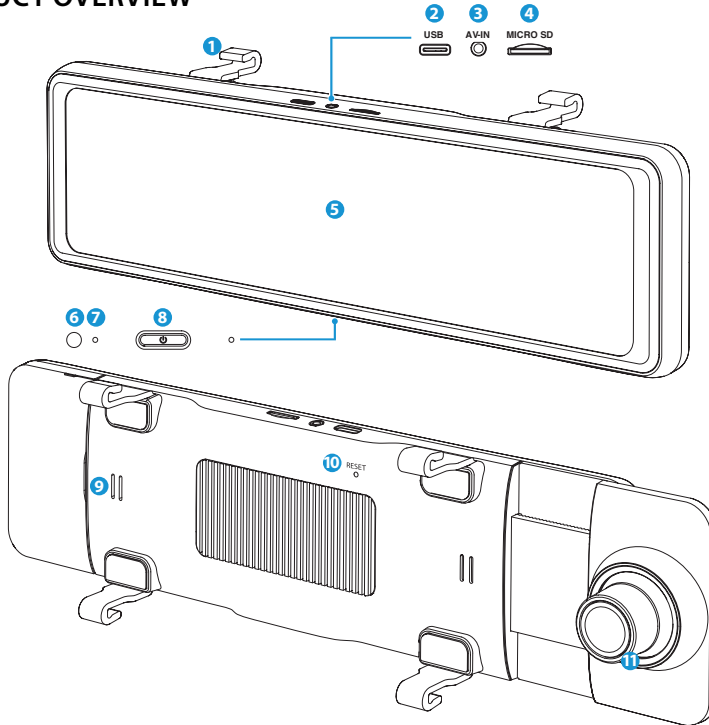


1. Mounting Strap Fixing Anchor
2. USB-C Power input
3. AV-IN port for 1080P Rear Camera
(Not included) *BT532838 sold separately.
4. MicroSD Card Slot
5. 9.4" Touch Screen
6. Light Sensor
7. Microphone
8. Power Button
9. Speaker
10. Reset Button
11. Camera Lens

6. BEFORE YOU START


Before installing the Dashcam onto your vehicle, please test it first by powering it on and connecting it to the TYPE S Drive App (Section 14). Please use this document as your reference for detailed instructions and product information.

7. INSTALLATION


- 1 Peel off the protective film from the display screen.

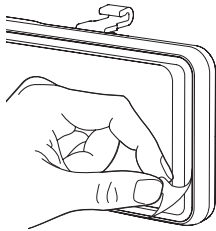


- 2 Insert the MicroSD card into the slot if not pre-installed.

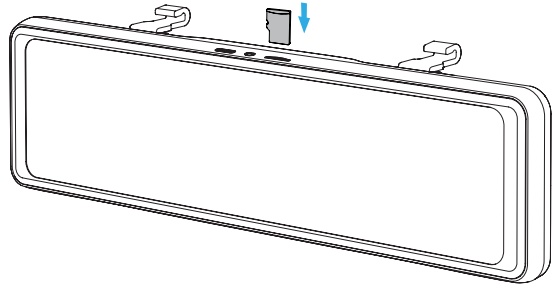

- 3 Attach the Dashcam onto your existing rearview mirror using the rubber straps.

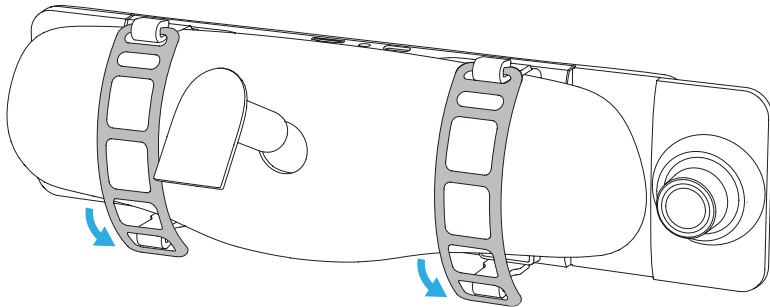


- 4 Plug the power cable into the USB-C power port of the Dashcam.

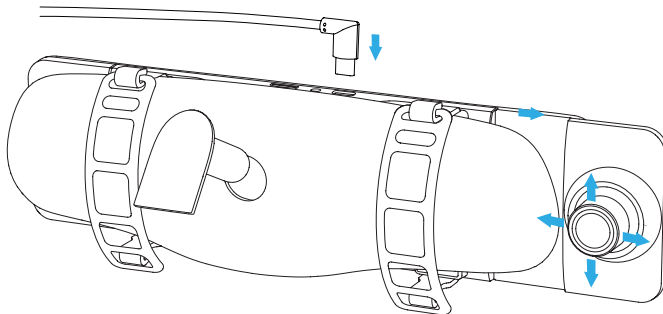


- 5 Adjust lens angle accordingly for the best view.

- 6 Route the power cable to your 12/24V outlet (cigarette lighter) and hide the cable in the headliner and pillars. We recommend going through the passenger side so the cable doesn't get into the driver's way.

Peel off the 3M tape backer from the GPS Receiver and mount it on the windshield. To ensure the best performance, please avoid placing it under a physical obstacle.

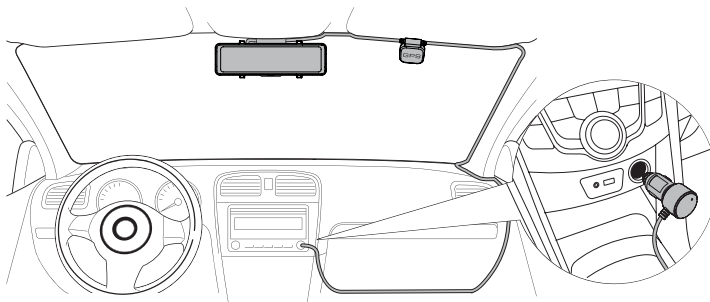


8. INITIAL SETUP

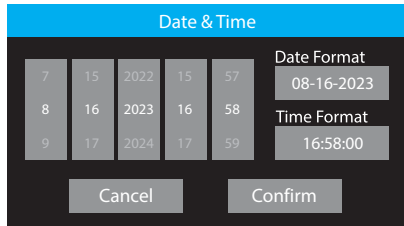

Set date & time. The date stamps that appear on all future recordings will follow this setting. The date & time also automatically sync with your smart device when you connect the Dashcam to TYPE S Drive App.

9. BUTTON CONFIGURATION

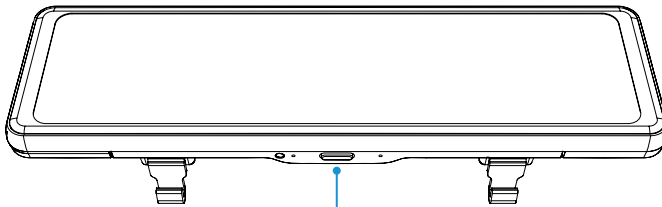

Power Button

- The Dashcam will start recording automatically upon being connected to power.
- Press and hold the power button for 3 seconds to manually turn the Dashcam On/Off.
- Click the power button to enter/exit screen save mode.
- The monitor defaults to screen save mode. Tap the touch screen monitor to wake it up.

Screen Save Mode

Switch between different screen modes.




Front Camera Mode



Rear Camera Mode




Split Screen Mode

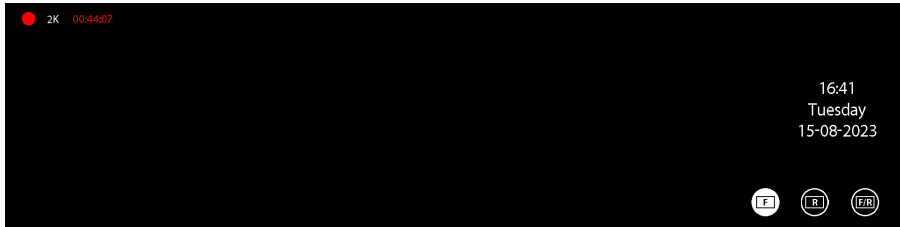

NOTE: Rear Camera Mode and Split Screen Mode only available when the 1080P Rear Camera (sold separately) is connected.

Live View

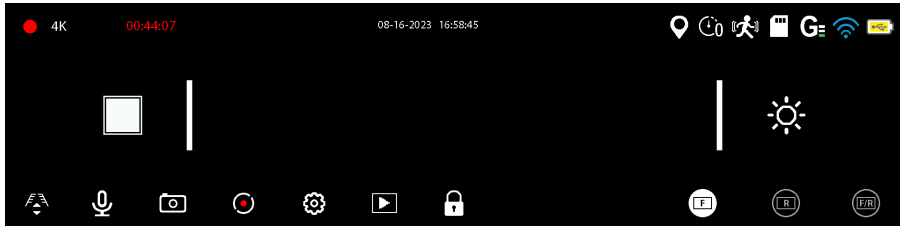



- Swipe Up/Down to adjust view
- Swipe Up/Down to adjust brightness
- Enable Parking Grids
*only available in Rear Camera Mode.
- Microphone On/Off

- Snapshot
- Start/Stop Recording
- Settings Menu
- Open Galley
- Lock/Unlock Video

10. SETTINGS & OPERATION





Switching Screen Modes

- Front Camera Mode is set as default.
- If you have connected an add-on 1080P Rear Camera (BT532838, sold separately), you may click  to switch to Rear Camera Mode or  to switch to Split Screen Mode.


Rear Camera (Optional)

- Refer to the instruction manual of the add-on 1080P Rear Camera (BT532838) for installation procedure.
- If the 1080P Rear Camera is hardwired to your reverse light, it'll automatically switch in/out of Rear Camera Mode as you switch in/out of Reverse Gear.


Parking Grids




- Click  to turn on the Parking Grids manually.
- Click  or  to adjust the Parking Grids up/down.
- Click  to turn off the Parking Grids.

NOTE: Parking Grids (Parking Assistance) are only available in Rear Camera Mode.

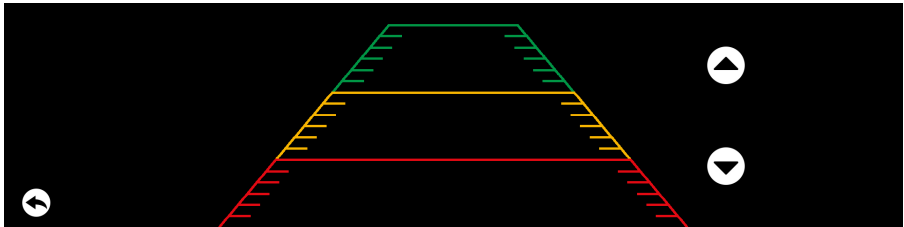

Settings Menu

- Click  to open settings menu.

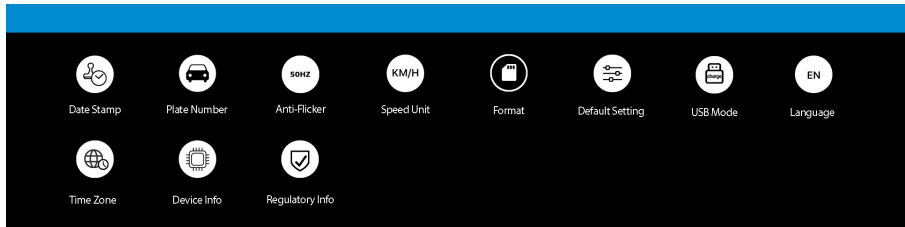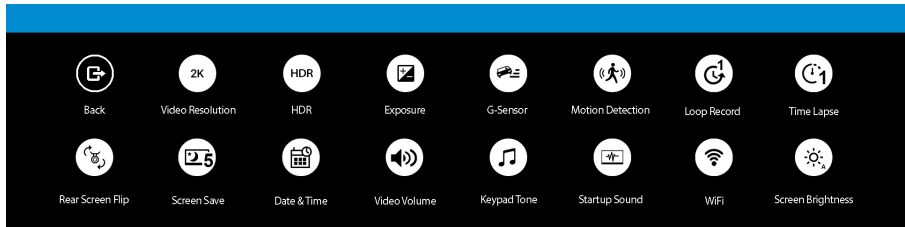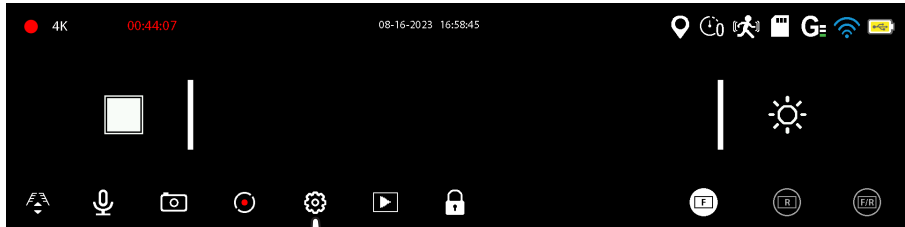

1. Video Resolution

Switch between 4K (3840 x 2160P), 2K (2560 x 1440P) and FHD (1920 x 1080P) recording resolutions. The add-on 1080P Rear Camera (BT532838) resolution is fixed at FHD (1920 x 1080P).

2. HDR

HDR On/Off. The HDR function allows the Dashcam to maintain clarity of the footages under extreme lighting conditions.

3. Exposure

Adjust the exposure level between +2.0, +1.0, 0, -1.0 and -2.0 for different lighting conditions.

4. G-Sensor

- Adjust the G-Sensor sensitivity between Off, Low, Mid and High.
- When the G-Sensor detects a sudden impact such as a collision, it'll automatically "lock" the footage and move it into the Event folder so that it doesn't get overwritten by the loop record feature.

5. Motion Detection

Motion Detection On/Off. The Motion Detection function allows the Dashcam to start recording automatically when a moving object is detected. Please only use this function when the car is parked.

NOTE: Motion Detection does not support Time Lapse function.

6. Loop Record

Select the duration of each recorded footage between 1 minute, 3 minutes and 5 minutes. Oldest and unlocked files will be overwritten once the storage limit is reached.

7. Time Lapse

Select between normal and time lapse video. (Refer to section 12)

8. Rear Screen Flip

Rear Screen Flip On/Off. Select ON to flip the rear camera image upside down so that the screen displays correctly in live view and recorded files.

NOTE: Rear Screen Flip is only available when the add-on 1080P Rear Camera (BT532838) is connected.

9. Screen Save

Select the time of inactivity between Off, 10 seconds, 30 seconds and 1 minute. Screen save will be activated after the specified time of inactivity you select. To turn on the display, click the power button or tap the touch screen monitor.

10. Date & Time

Update the date & time shown on the Dashcam and on all its recorded media files.

11. Video Volume

Adjust the recording volume between Low, Mid and High.

12. Keypad Tone

Mute/Unmute keypad tone.

13. Startup Sound

Startup Sound On/Off. When you set this as ON, the Dashcam will play a tone upon being powered on.

14. WiFi

The auto sync function enables you to view and manage files on your smart device using the TYPE S Drive App.

NOTE: Refer to section 15 for pairing procedure.

15. Screen Brightness

Adjust screen brightness manually or automatically. Feature only available in live view during Manual Mode.

16. Date and TYPE S Logo Stamp

Date and TYPE S Logo Stamp On/Off. When you set this as ON, the date and TYPE S logo stamp will show on all recorded media files.

17. Plate Number

When you have entered your license plate number and set this to ON, your plate number will show on all recorded media files alongside the date and TYPE S logo stamp.

18. Anti-Flicker

Adjust anti-flickering setting between 50Hz and 60Hz.

19. Speed Unit

Select the unit of speed between KM/H and MPH. Default speed unit is set as MPH.

20. Format

Format the MicroSD card. This will erase all the data stored on the MicroSD card.

21. Default Setting

Reset all settings to factory defaults.

22. USB Mode

Select between Power On Only and Mass Storage mode.

NOTE: Refer to section 17 for accessing and managing files on a computer.

23. Language

Default language of the Dashcam is English.

24. Device Info

Show the Dashcam's current firmware version.

25. Regulatory Info


Show regulation related information.




Gallery


- Play Back and Manage Files

Click ▼ at the upper left of the screen and select from the dropdown to browse the galleries:

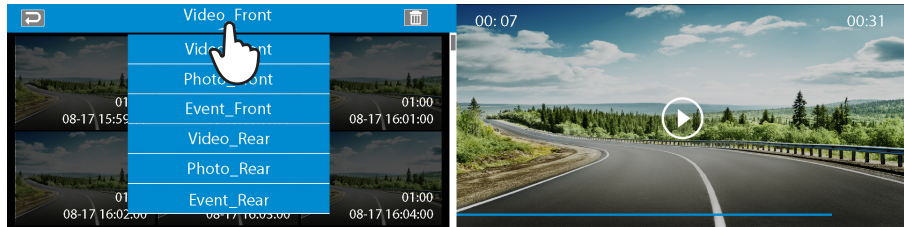



- Video Front
- Photo Front
- Event Front
- Video Rear
- Photo Rear
- Event Rear

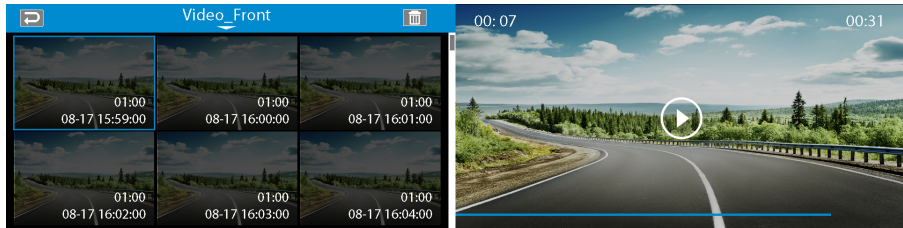


- Scroll through the previews and click to view the file.
- In video playback, click  to pause and  to resume the video.
- Click  to adjust video speed to X2, X4 or X8.



Erase Files

- Click  in previews, then click the files you want to erase.
NOTE: The files you select will be marked with the  icon.
- Click  and confirm the erase.
- Click  to return to a fullscreen live view.

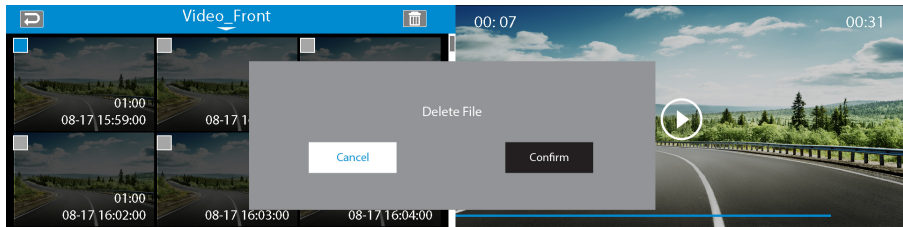

11. RECORDING TIME

| Memory Card Capacity | Total Recording Time | | | | |
|----------------------|----------------------|----------------------|-----------------------|----------------------|----------------------|
| | (4K) | (2K) | (FHD) | (4K+FHD) | (2K+FHD) |
| 16GB | At least 57 minutes | At least 77 minutes | At least 138 minutes | At least 40 minutes | At least 50 minutes |
| 32GB | At least 119 minutes | At least 224 minutes | At least 359 minutes | At least 88 minutes | At least 108 minutes |
| 64GB | At least 246 minutes | At least 462 minutes | At least 740 minutes | At least 178 minutes | At least 220 minutes |
| 128GB | At least 490 minutes | At least 919 minutes | At least 1471 minutes | At least 350 minutes | At least 440 minutes |

NOTE: If you use your own MicroSD card please insert it into the Dashcam and format it before first use.

12. TIME-LAPSE RECORDING LOGIC

| Mode | Behavior |
|------------------|---|
| Off | Without time-lapse record, captures 30 frames per 1 second. |
| 1 Second | Time-lapse record, captures 1 frame per 1 second. |
| 3 Seconds | Time-lapse record, captures 1 frame per 3 seconds. |
| 5 Seconds | Time-lapse record, captures 1 frame per 5 seconds. |

13. TECHNICAL SPECIFICATIONS

Memory Management

| Mode | Resolution | 1 Minute Video Size | Loop Period (16GB SD Card) |
|---------------|---------------------------|---------------------|----------------------------|
| 4K | 3840 X 2160 | 225MB | 12865 / 225 = 57 Minutes |
| 2K | 2560 X 1440 | 165MB | 12865 / 165 = 77 Minutes |
| FHD | 1920 X 1080 | 93MB | 12865 / 93 = 138 Minutes |
| 4K+FHD | 3840 X 2160 + 1920 X 1080 | 315MB | 12865 / 315 = 40 Minutes |
| 2K+FHD | 2560 X 1440 + 1920 X 1080 | 255MB | 12865 / 255 = 50 Minutes |

| Memory Card Capacity | System Reserve | Event & Video | Photo |
|----------------------|----------------|---------------|-------|
| 16GB | 0.435GB | 12.865GB | 1.2GB |
| 32GB | 0.870GB | 26.930GB | 1.2GB |
| 64GB | 1.755GB | 55.54GB | 1.2GB |
| 128GB | 3.450GB | 110.35GB | 1.2GB |

14. DOWNLOAD AND USE THE TYPE S DRIVE APP

The Dashcam's auto sync function enables you to control and play back recorded media files using your smartphone with the TYPE S Drive App. Scan below QR code or search "TYPE S Drive" in the App Store or Google Play. Download and install the App.



SSID:
TYPE_S_DVR08_4K_xxxxxx
Password:
12345678



Compatible with iPhone 4s and higher, iPad3, iPad Mini, iPad Air and higher, and iPod touch 5th Generation and higher.
Requires iOS 9.0 or higher.



Compatible with phones with Android™ 5.0 or higher.


Once installed, enable the WiFi network and connect to the Dashcam.

NOTE: The App is only available on smartphones with Apple iOS 9 or newer, and Android 5.0 or newer. The TYPE S Drive App is not accessible from tablets, browsers, or PCs.

Auto sync with the Dashcam



1. Open the Dashcam's menu. Go to WiFi and turn it on.




NOTE: WiFi is ON by default.

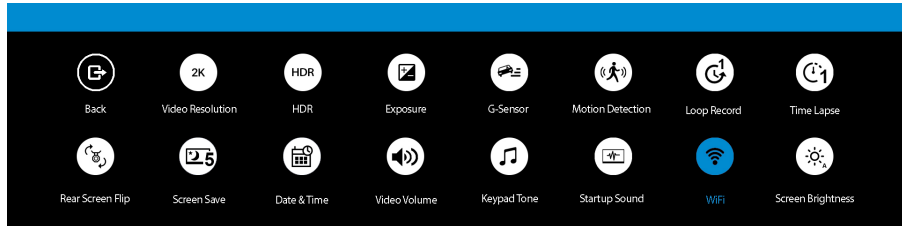

Android Device

2. Navigate to the WiFi setting page on your device.
3. Connect to "TYPE_S_DVR08_4K_xxxxxx" with the default password "12345678".
4. Run the **TYPE S Drive** App. Click **Allow** in the pop-up message when prompted to allow the App to access your location.
5. Select the Dash Camera category.

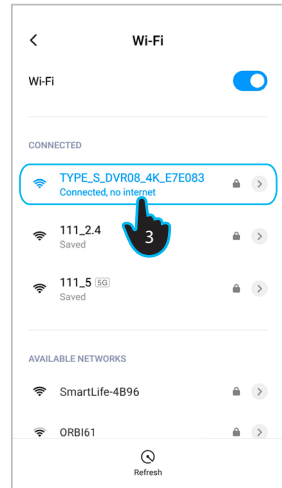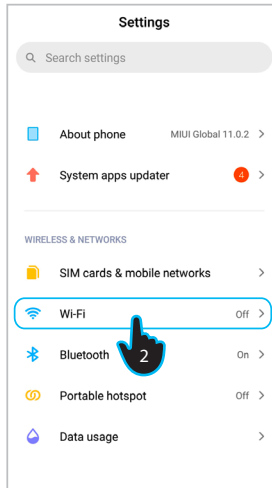


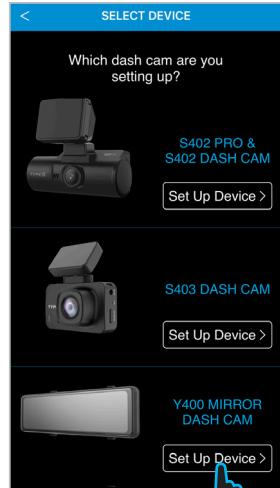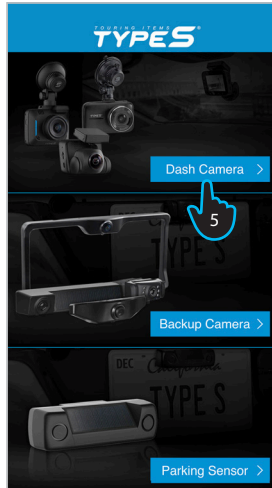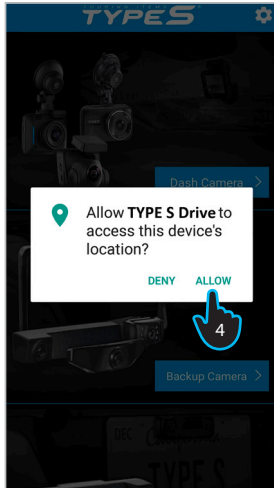

6. Scroll down the device list and select Y400 MIRROR DASH CAM. Click **Set Up Device**.



7. You should see the live view of Dashcam on the main interface if the connection is successful.





NOTE: After the initial sync, the App remembers your Dashcam's network so that you can simply click **Connect** to rejoin next time.

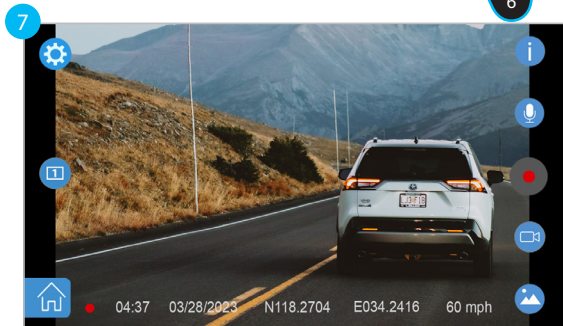

iOS Device (Follow Step 1 from previous instructions)



- Please make sure Bluetooth, Location Services and Local Network Access are enabled on your device.
- Run the **TYPE S Drive App** and select the Dash Camera category.
- Scroll down the device list and select Y400 MIRROR DASH CAM. Click **Set Up Device**.
- Click **Join** in the pop-up message if prompted to connect to the Dashcam's WiFi network.
- Click  to go to App permissions setting page.
- Click **Settings** on the App permissions setting page.
- Scroll to the top and click to enter the WiFi setting page.
- Connect to "TYPE_S_DVR08_4K_xxxxxx" with the password "12345678".
- Click **TYPE S Drive** to return to the App.
- Once connected, you will be able to see the Dashcam's real-time view through the App.

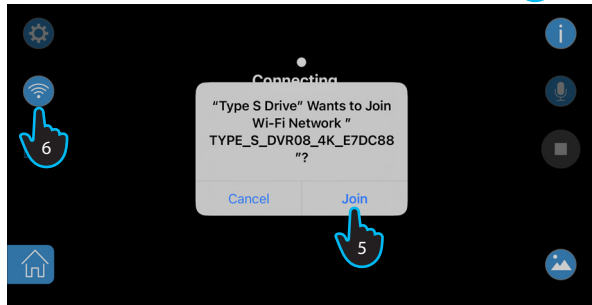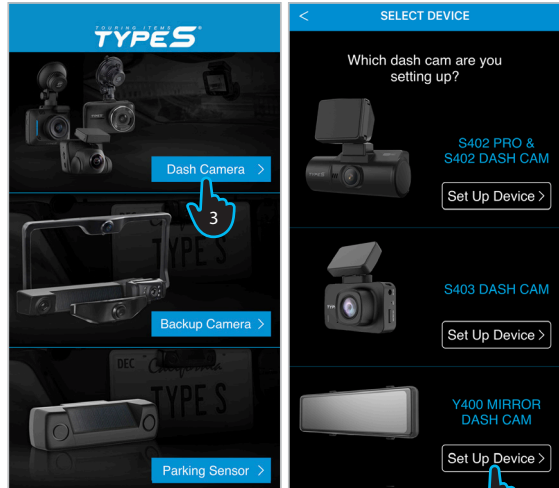

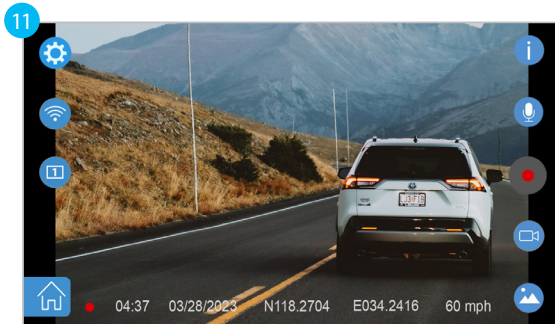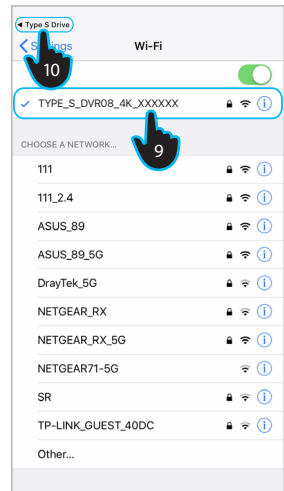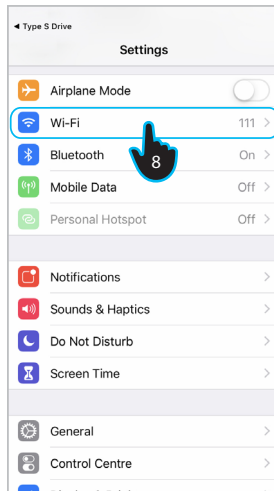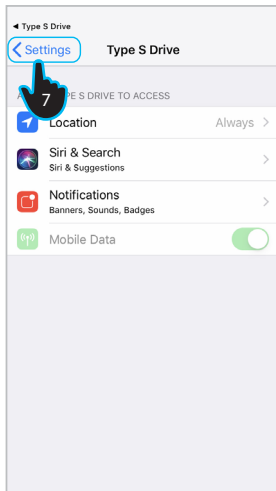

16. APP SETTINGS


Main Interface

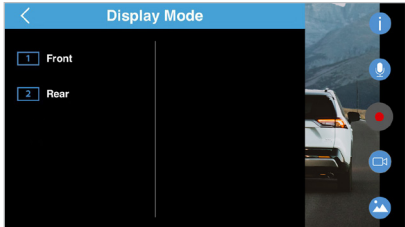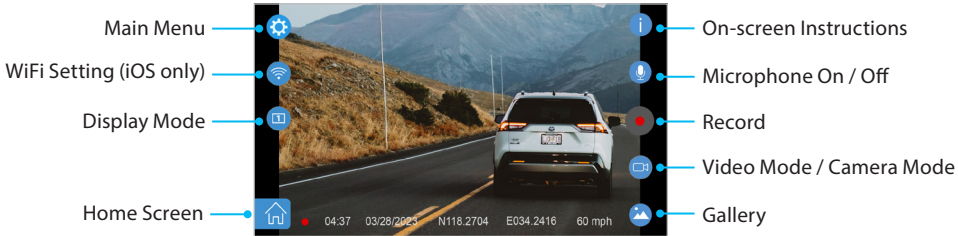


Display Mode

Select from 2 different viewing modes.

NOTE: "Rear" mode only available when the add-on 1080P Rear Cam (BT532838) is connected.

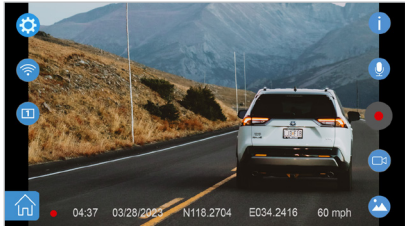


1 Front


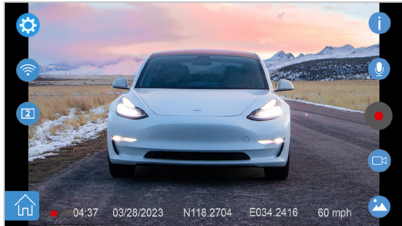


2 Rear


Change WiFi Password



Click  to open Main Menu, then navigate to System Setting > Change WiFi Password. Enter your preferred password (must be exactly 8 characters), then click **OK** for changes to effect. Connect to your Dashcam's WiFi network again with the revised password.

NOTE: It is recommended to reset your WiFi password upon initial connection to protect your data from unauthorized access.

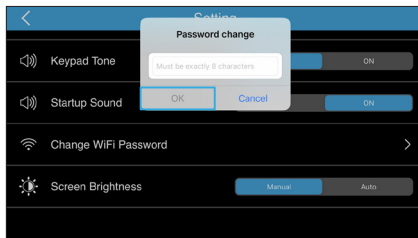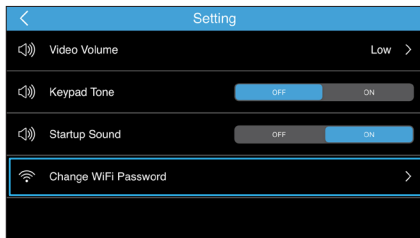



Gallery

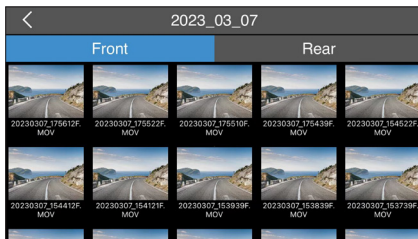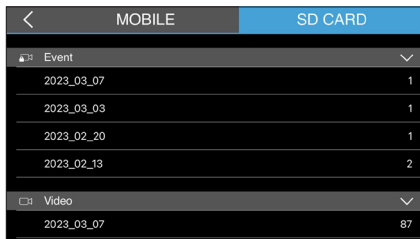
Click  on the main interface to enter the media gallery. Click **SD CARD** to access all media files sorted from latest to oldest in the MicroSD card. Scroll down the list to select the file. In each file, you can browse between front and rear camera footages and photos.





NOTE: Rear camera footages and photos only available after pairing with the 1080P Rear Camera.


SD Card

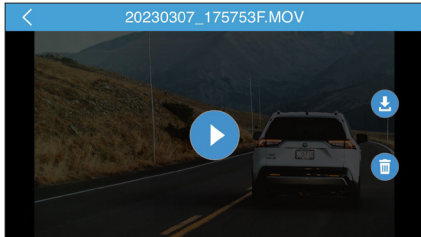Click  to download the selected file onto your smart device or  to delete the file from the MicroSD card.






MOBILE

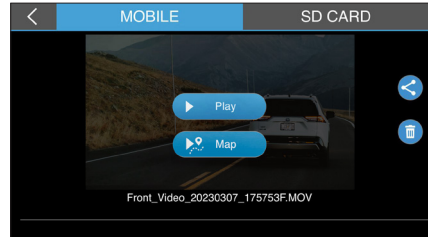Click **MOBILE** to access and manage the downloaded file on your smart device even if it is disconnected from the Dashcam. Click  to share or  to delete the selected file.




GPS Information

Click  Play to play the footage or  Map to view embedded GPS location simultaneously during playback.

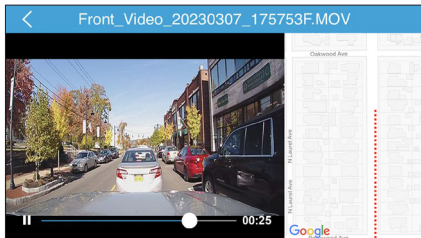


GPS Signal Status 1

Map tracking is not working. To process, mobile data must be turned on.

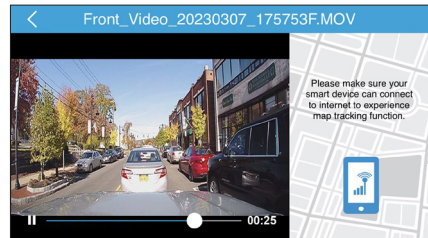


GPS Signal Status 2

GPS receiver is searching for GPS signal when the footage is recorded. GPS trip data will resume once it picks up the signal. If this status persists, please contact our technical support for troubleshooting.

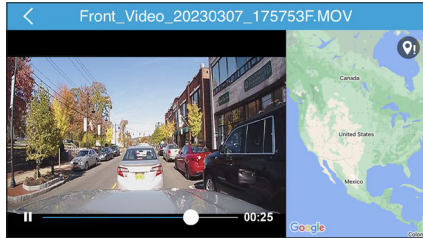


17. VIEWING AND MANAGING MEDIA FILES USING A COMPUTER

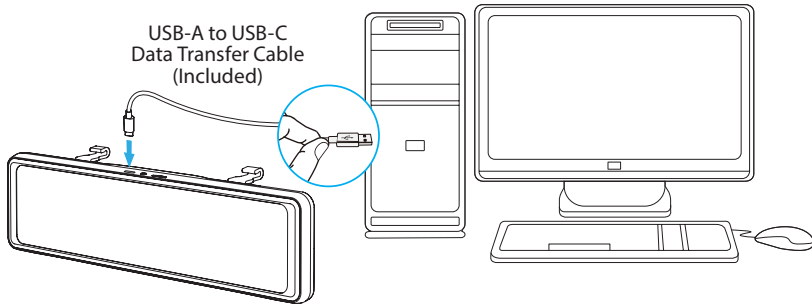

Mass Storage

When connected directly to a computer via the cable provided, the Dashcam will default into charging mode. To view/manage files in the MicroSD card, please go to menu > USB Mode and switch the Dashcam to Mass Storage mode. The screen on the left will show up. The Dashcam will function as a card reader for the computer, and it will appear as a new USB drive.

NOTE: The Dashcam will stop recording when it is connected to a computer.

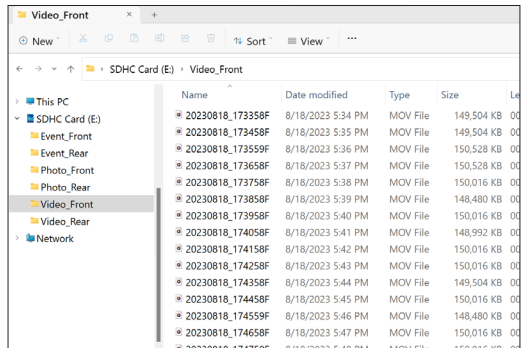

18. SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions of 12/24V car charger for Model BT532783.
2. Before using the product, read all instructions and cautionary markings.
3. Do not expose car charger to rain, moisture, or snow.
4. Use of an attachment not recommended or sold by the product manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting car charger.
6. Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
7. Do not operate the car charger with a damaged cord or cigarette lighter connector – replace the damaged items with new factory replacement items immediately.
8. Do not operate the car charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceperson.
9. Do not disassemble the car charger; take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
10. To reduce risk of electric shock, unplug the charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.

WARNING: A failure to read and follow these warnings and instructions may result in a serious accident, including damaged property or a serious injury, including loss of life.

- The Dashcam is designed as an aid to the driver in detecting large stationary objects to help avoid damaging the vehicle. However, you, the driver, must use it safely and properly. Use of the Dashcam is not a substitute for safe, proper and legal driving.
- Never depend on the Dashcam and Rear Cam (not included) entirely when driving and backing up. The image on the screen is different from actual conditions. Objects viewed in the Dashcam display screen differ from actual distance because a wide-angle lens is used.
- If you use Rear Camera (Not included), never back up while looking only at the screen. You should always check behind and around the vehicle when backing up just as you would if the

vehicle did not have the Rear Camera. Always make sure your intended path is clear. If you back up while looking only at the monitor, you may hit a vehicle, pedestrian, bicyclist, child, pet or other object resulting in injury or death. Always back up slowly.

- The area displayed by the Dashcam and Rear Cam (not included) is limited. The Dashcam does not display objects that are out of the Dashcam's field of view. The Rear Cam (not included) does not display objects that are close to or below the bumper, underneath the vehicle, or objects out of the camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions.
- Be sure to check the Dashcam's position and mounting angle before each use.
- Do not strike the Dashcam. It is a precision instrument. Otherwise, it may malfunction or cause damage resulting in a fire or an electric shock.
- This product will only provide images of items that are within the field of view of the Dashcam. Thus, it is imperative that the Dashcam should be kept clean and unobstructed.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Never allow children to play with the device. Small parts may be a choking hazard.
- There is a plastic cover over the Dashcam. Do not scratch the cover when cleaning dirt or snow from the cover.
- If the temperature changes rapidly, the system may not operate normally.
- If you replace the tires, the area displayed on the monitor may change and you may need to adjust the camera.
- When strong light directly enters a Dashcam, objects may not be displayed clearly.
- The screen may flicker under fluorescent light.
- The colors of objects on the Dashcam may differ from those of the actual objects.
- Do not use alcohol or thinner to clean the Dashcam. This will cause discoloration. To clean the Dashcam, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

SAFETY AROUND AND BEHIND OTHER VEHICLES

Many preventable injuries and deaths occur in driveways or parking lots when drivers do not see children, pets, or others near their vehicles. Here are a few safety tips that will help you to avoid a back-over accident:

- Walk completely around your vehicle before getting in. Check for kids, toys, and pets before entering the vehicle and starting the engine.
- Know where children are. Have children stand in a place where they are in full view.
- Be aware of young children. Young children are small and hard to see.
- Parents, caregivers and all adults need to be vigilant in supervising children, especially when children are in the yard, driveway or parking lot playing near parked cars.
- Roll down your window so you will be able to hear what is happening outside your vehicle.
- Owners of SUVs, trucks, and vans need to take extra care to avoid hitting or running over a child.
- Teach children to move away from a vehicle whenever it is started.

19. MAINTENANCE & WARRANTY

CLEANING

- If dirt, lint, or just is on the Dashcam, the display screen may not clearly display objects. Rinse with water and wipe with a dry cloth.
- Do not use alcohol, benzene or thinner to clean the Dashcam. This will cause discoloration. To clean the Dashcam, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

WARRANTY

- **TYPE S**

- LIMITED WARRANTY**

- TYPE S warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, TYPE S liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and TYPE S makes no other warranty of any kind aside from the limited express warranty stated above.

NOTE: Warranty only applies for North American customers of purchases made in North America.

CONDITIONS OF WARRANTY

If during the 1 year warranty period your new product is found to be defective, TYPE S will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by TYPE S.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by TYPE S under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a “repair or replace” warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

OWNER'S RESPONSIBILITIES:

TYPE S will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM.

NOTE: Toll Free # is for North America Customers ONLY. See Customer service section for customer contact numbers for other regions/offices.

For customer service and technical support, please call us at 1.866.294.9244. If at that time it is determined that a replacement unit is needed, the support representative will issue a Return

Authorization and instruct on how to get a new unit. TYPE S makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE DASHCAM. EXCEPT AS EXPRESSLY SET FORTH HEREIN, TYPE S AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TYPE S and/or its affiliates do not guarantee or promise that the user of Dashcam will not be in an accident or otherwise not collide with an object and/or person. Our Dashcam is not intended in any way to be a substitute for careful and cautious driving or for the consistent adherence to all applicable traffic laws and motor vehicle safety regulations.

The Dashcam is not intended to be a substitute for rearview mirrors or for any other motor vehicle equipment mandated by law. Even when properly installed, our Dashcam has a limited field of vision and does not provide a comprehensive view of the rear area of the vehicle.

TYPE S and/or its affiliates are not responsible for a user's intended or actual use of the Dashcam. In no event shall TYPE S and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the Dashcam, including but not limited to damaged property, personal injury and/or loss of life. Neither shall TYPE S and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the Dashcam, or for any delays, inaccuracies and /or errors in connection with the Dashcam and its functioning.

TYPE S and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents occurring with vehicles having the installed, and TYPE S and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

20. GENERAL INFORMATION

CUSTOMER SERVICE/CONTACT

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT TYPE S DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/ EXCHANGE THE PRODUCT.

FCC Compliance Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

Y400 4K Mirror Dashcam
BT532783

Responsible Party:

TYPE S

2975 Red Hill Ave., Ste. 100,
Costa Mesa, CA 92626, U.S.A.

Tel: 1-866-294-9244

Android is a trademark of Google Inc.

iPhone, iPad, Mac and iPod touch are trademarks of Apple Inc.

3M VHB™ is a trademark of 3M Company.

REG. U.S. PAT. & TM. OFF.
TYPES

A Horizon Brands Company
2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, U.S.A.
1.866.294.9244 | info@typesauto.com
©2023 TYPE S. All rights reserved.

www.typesauto.com

ML-532783E_V1