

# AKAI



## **15 Place Setting Dishwasher** INSTRUCTION MANUAL

MODEL: AK-DW15P



# Contents

- 03 General Safety Instructions**
- 06 Product Overview**
- 10 Installation**
- 14 Features**
- 16 Instructions**
- 28 FAQs and Troubleshooting Guide**
- 32 Other Useful Information**

# General Safety Instructions

## IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with any warranty information and your purchase receipt. If applicable, pass these instructions on to the next owner of the appliance.

**Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

Pay particular attention to safety messages that follow the words:

**DANGER, WARNING and CAUTION.**

These words are used to alert you to a potential hazard that can seriously injure you and others. The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

**DANGER** means that failure to read this safety statement may result in severe personal injury.

**WARNING** means that failure to read this safety statement may result in extensive product damage or serious personal injury.

**CAUTION** means that failure to read this safety statement may result in minor or moderate personal injury, property or equipment damage.

## Electrical safety and cord handling

- **Voltage:** Before connecting and turning on the appliance, ensure the electrical voltage and circuit frequency correspond to those indicated on the appliance rating label.
- **WARNING!** Ensure the outlet is properly earthed to the ground. If unsure, consult a qualified electrician or a service representative. Improper connection of the equipment grounding conductor can result in the risk of an electric shock if the appliance malfunctions.
- **WARNING!** Do not modify the cord and plug provided with the appliance; if it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- **WARNING!** If the supply cord is damaged, do not use the appliance. A damaged cord must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Contact our after sales support centre.
- **Connection:** Do not use an adaptor; do not use an extension cord. We recommend you connect the appliance to a separate circuit serving only this appliance.
- **Power cord:** Do not kink or damage the power cord. Position it out of the way so no one steps on or places anything on the cord or against it.

# General Safety Instructions (Cont.)

- **Inserting/removing the plug:** Before you insert or remove the plug, make sure the appliance is switched off and the power is switched off at the electrical outlet. Remove by grasping the plug, do not pull on the cord.
- **CAUTION!** To reduce the risk of electric shock, do not immerse the unit, cord or plug in water or other liquid. Do not expose it to rain or moisture.
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

## Installation

- **DANGER!** Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more. **Hydrogen gas is explosive!** If the hot-water system has not been used for such a period of time, before using the dishwasher, turn on all hot-water taps and let the water flow from each of them for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- **WARNING!** Do not install the dishwasher yourself. Get it installed by an appropriately qualified, licensed plumber or dishwasher installer only. Any electrical work required should be carried out by a qualified, licensed electrician.
- **Power supply:** During installation, the power supply cord must not be excessively or dangerously bent or flattened. Other means for disconnection from the supply must be incorporated in the fixed wiring with at least 3mm contact separation in all poles.
- **Water supply:** Only use new hose sets when connecting this dishwasher to the water supply; do not reuse old hoses.
- **Water pressure:** The maximum permissible inlet water pressure is 1.0MPa. The minimum permissible inlet water pressure is 0.04MPa.
- **WARNING!** Do not install the appliance on or near any flammable or hot objects.
- **Ventilation:** Ensure any ventilation openings in the base are not obstructed by carpet.
- **Proper installation:** Install the dishwasher on an even, flat and stable ground. Do not operate your dishwasher unless all enclosure panels are properly in place.
- **Safe disposal:** When removing an old dishwasher from service or discarding it, remove the door to the washing compartment.

## Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for industrial, commercial or trade use. Do not use it for anything other than its intended purpose, and only use it as described in this manual.
- **Usage restriction:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

# General Safety Instructions (Cont.)


- **Children** should be supervised to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- **WARNING!** Never leave the appliance unattended while in use. Do not touch the heating element during or immediately after use.
- **Dishwasher door:** Do not abuse, sit on or stand on the door or dish rack of the dishwasher, or use it for anything other than its intended purpose. Do not place any heavy objects on the dishwasher door when it is open. The appliance could tip forward. Open the door very carefully if the dishwasher is operating as there is a risk of water squirting out. The door should not be left wide open as this could increase the risk of someone tripping over the door.
- **Safe loading:** Do not overload this dishwasher, it has a maximum capacity of 15 place settings. To ensure safe operation, follow a few simple rules when loading the dishwasher:
  - Place sharp items so they are not likely to damage the door seal.
  - **WARNING:** Knives and other utensils with sharp points must be loaded in the tray with their points down or placed in a horizontal position to avoid potential hazards.
  - Only wash plastic items that are marked dishwasher-safe or the equivalent. For plastic items not marked, check the manufacturer's recommendations. Place plastic items so they cannot accidentally touch the heating element.
- **Dishwasher detergent:** Use only detergent and rinse additives designed for an automatic dishwasher and keep them out of reach of children. Never use liquid detergent (for manual washing up), soap or laundry detergent in your dishwasher.

**DANGER!** Some dishwasher detergents are strongly alkaline and can be extremely dangerous if swallowed. Avoid contact with the skin and eyes.

**DANGER!** When the dishwasher door is open, make sure to keep children away from the dishwasher. Even after a wash there could still be detergent left inside. Make sure that the detergent compartment is empty after completion of the wash cycle.
- **Cleaning:** Unplug before cleaning and performing maintenance on the appliance. Use a soft cloth moistened with mild detergent for cleaning the appliance, and then use a dry cloth to wipe it again.
- **Do not modify** or attempt to alter this appliance or its controls in any way. Do not tamper with the controls.
- **Repair:** Do not attempt to take the unit apart. Apart from regular maintenance as described in this manual, this appliance is not designed to be dismantled by the user. In case of damage or malfunction, have the unit repaired by trained personnel only, or contact our after sales support centre for advice.
- **Misuse:** Inappropriate use can result in property damage, injury or death. We accept no liability for any damages or injuries resulting from misuse of the appliance or noncompliance with these instructions.

# Product Overview

## Scope of delivery

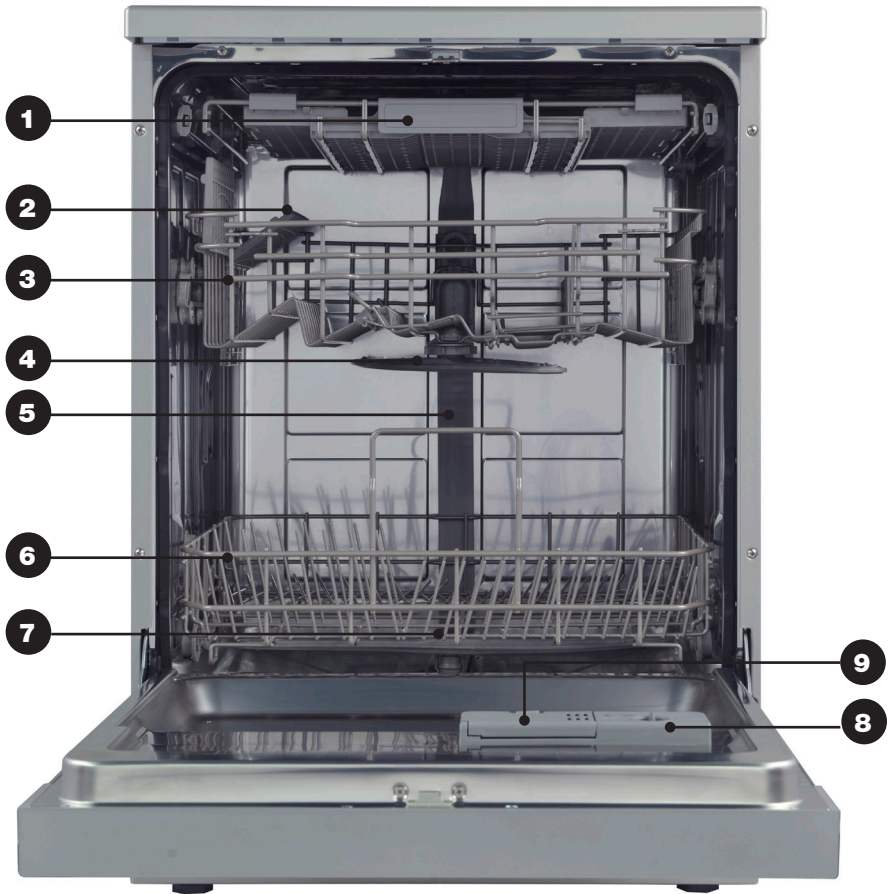


### Dishwasher: front, open

- |   |                   |   |  |
|---|-------------------|---|--|
| 1 | Cutlery tray      | 6 | Lower basket                                     |
| 2 | Foldable cup rack | 7 | Filtration system (on the bottom of the cabinet) |
| 3 | Upper basket      | 8 | Rinse aid dispenser                              |
| 4 | Upper spray arm   | 9 | Detergent dispenser                              |
| 5 | Inner pipe        |   |  |

# Product Overview (Cont.)

## Accessories

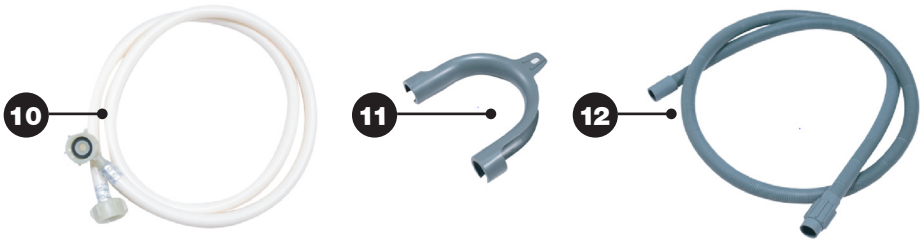

- 10 Water supply hose
- 11 Drain hose holder (elbow)
- 12 Drain hose -- already installed at the back


### Documentation (not shown)

Instruction manual  
Warranty certificate

**NOTE:** Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

# Product Overview (Cont.)



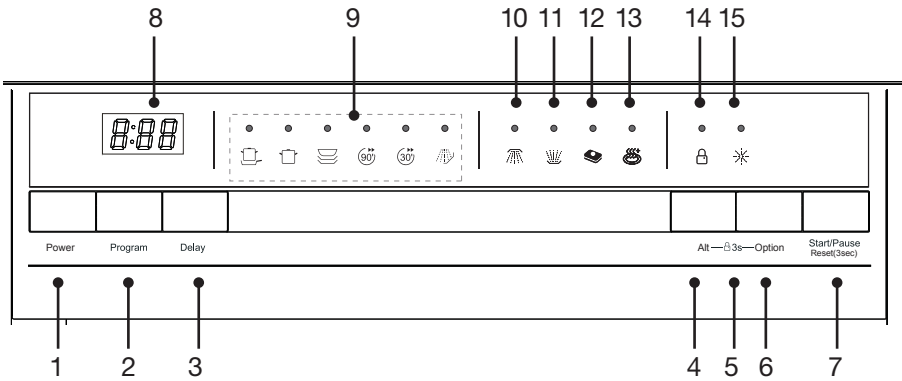










## Control panel



Operation buttons		
1	<b>POWER</b>	Press this button to turn on/off the power supply.
2	<b>PROGRAM</b>	Press this button to scroll through the washing programs. The selected program indicator will be lit.
3	<b>DELAY</b>	Press this button to delay the start time of any program automatically by up to 24 hours.
4	<b>ALT</b> (ALTERNATIVE FUNCTION)	Press this button to select washing of the upper or lower zone only. The corresponding indicator will be lit.
5	<b>CHILD LOCK</b>	Press the <b>ALT</b> and <b>OPTION</b> buttons at the same time and hold for 3 seconds to activate the child lock. All buttons and the door are now locked.
6	<b>OPTION</b> (OPTIONAL FUNCTION)	Press this button to select or cancel the <b>DRY+</b> function or the <b>All-in-1</b> function.
7	<b>START/PAUSE</b>	Press this button to start or pause the selected washing program. Press and hold the button for 3 seconds to reset the dishwasher.



# Product Overview (Cont.)

Display indicators	
<b>8</b>	 <p>The <b>DIGITAL DISPLAY</b> shows the running time, remaining time, malfunction codes and delay time.</p>
<b>9</b> <b>Program indicators</b>	<p>The below program indicator lights illuminate once a program has been selected.</p> <ul style="list-style-type: none"> <li>  <p><b>Intensive</b> For most heavily soiled crockery, such as pots, pans, serving dishes and dishes that have been sitting with dried food on them for some time.</p> </li> <li>  <p><b>Heavy</b> For heavily soiled loads, such as plates, glasses and lightly soiled pots and pans: a standard daily wash program.</p> </li> <li>  <p><b>Normal</b> For normally soiled loads, such as plates, glasses and lightly soiled pots and pans: a slightly longer but more energy-efficient daily wash program with a lower water temperature.</p> </li> <li>  <p><b>90 min</b> For lightly and normally soiled loads that need a quick wash straight after use.</p> </li> <li>  <p><b>Fast 30</b> A quick wash for lightly soiled loads that do not need drying.</p> </li> <li>  <p><b>Soak</b> A rinse/soak program for dishes you plan to wash later that day.</p> </li> </ul>
<b>10–13</b> <b>Function indicators</b>	<ul style="list-style-type: none"> <li>  <p><b>10</b> The upper zone indicator comes on when the upper spray arm is washing.</p> </li> <li>  <p><b>11</b> The lower zone indicator comes on when the lower spray arm is washing.</p> </li> <li>  <p><b>12</b> The all-in-1 indicator comes on when this function is selected and an all-in-1 detergent tablet is used (instead of detergent powder).</p> </li> <li>  <p><b>13</b> The Dry+ indicator comes on when this function is selected. The Dry+ function will increase the water temperature during the final rinse for improved drying results.</p> </li> </ul>
<b>14</b> <b>Child lock</b>	 <p>The child lock indicator comes on when the child lock has been set.</p>
<b>15</b> <b>Rinse aid</b>	 <p>The rinse aid indicator comes on when the rinse aid dispenser needs to be refilled.</p>

# Installation

**DANGER!** Make sure your electrical power is disconnected before installing the dishwasher. Failure to do so can result in death or electric shock.

**IMPORTANT!** All relevant pipes and electrical equipment should be installed by licensed plumbers, electricians or dishwasher installers. Make sure to use new water supply and drain hoses; do not use old hoses.

**IMPORTANT!** Read this manual to familiarise yourself with all parts and operating principles. Pay particular attention to the safety instructions.

## Unpacking the appliance

- This product has been packaged to protect it against transportation damage. Unpack the appliance but keep all packaging materials until you have made sure your new dishwasher is undamaged and in good working order.
- The packaging carton is recyclable. Whenever possible, reuse the carton and recycle it when disposing of the packaging materials.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach, and dispose of them safely.
- The baskets inside the dishwasher are taped to secure them during transport. Remove any tape, ties and foam padding from inside the dishwasher.
- **IMPORTANT!** Using the loading instructions on pages 16-20 for guidance, make sure all parts in the upper and lower baskets are properly installed inside the dishwasher – you may need to relocate the cup rack for appropriate usage.
- Unwind the cord to its full length and inspect it for damage. Do not use if damaged. In case of damage, contact our after sales support centre for advice.


## Positioning the appliance

- This dishwasher is freestanding. It can also be recessed under a single benchtop.
- Position the dishwasher close to an existing water inlet and drain connection and make sure there is a power point nearby, or in an adjoining cabinet.
- The back should rest against the wall behind it and the sides along any adjacent cabinets or walls.
- The dishwasher's water supply and drain hoses can be positioned either to the right or left sides to facilitate proper installation.
- Make sure the appliance does not stand on any water hoses or the power cable.

# Installation (Cont.)

## Levelling the appliance


- Position the dishwasher on a level and sturdy floor.
- If the floor is uneven, adjust the feet at the front of the appliance until the appliance reaches a horizontal position (Fig. 1). Just screw them in or out.
- The maximum adjustment height of the feet is 20mm.
- The appliance should not be inclined more than 2°.
- Correctly levelled, the appliance will be more stable and much less likely to move or cause vibrations and noise during operation.

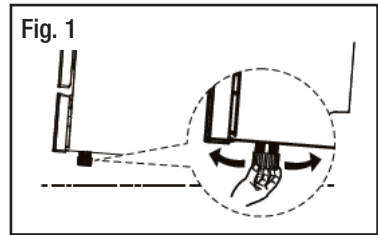

## Freestanding installation

### Between existing cabinets

- The height of the dishwasher, 845mm, has been designed in order to allow the machine to be fitted between existing cabinets of the same height in modern fitted kitchens (Fig. 2).
- The feet can be adjusted so that the correct height is reached.

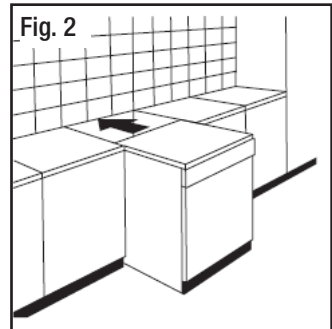


### Underneath an existing worktop

- In most modern fitted kitchens there is only one single worktop under which cabinets and electrical appliances are fitted. If you want to fit this dishwasher under an existing worktop, you need to remove the worktop of the dishwasher by unscrewing the screws under the rear edge of the top (Fig. 3: a).

**IMPORTANT!** Keep the screws! After removing the worktop you will have to screw them back under the rear edge of the top (Fig. 3: b).


- The height of the dishwasher will then be reduced to 815mm (as per ISO regulations), which means it should fit perfectly under your kitchen worktop.

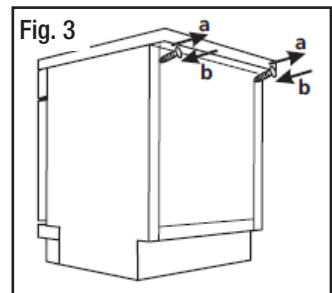

# Installation (Cont.)


## Cold water connection

- Connect the cold water supply hose to a threaded 3/4" connector. During use, the dishwasher will heat up the water to the required temperature. Make sure the hose is not kinked or squashed and is fastened tightly in place (Fig. 4).
- If the water pipes are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities. This step is necessary to avoid the risk of the water inlet being blocked and damaging the appliance.
- **WARNING!** Always close the water tap after using the dishwasher.

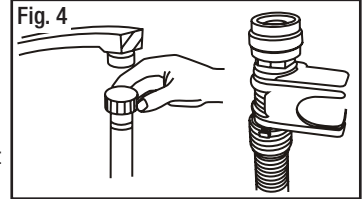

## Drain hose connection

- The drain hose is connected to the drain hose connector at the back of the dishwasher.
- Insert the end of the drain hose into a drain pipe with a minimum diameter of 40mm, or let it run into the sink, making sure to avoid bending, crimping or squashing it. The height of drain pipe must be less than 1100mm from the floor. The free end of the hose must not be immersed in water to avoid the backflow of water.
- Follow the illustration below (Fig. 5) when installing the drain hose connection.
- The drain hose must be correctly fitted in order to prevent water leaks. It should be connected at a height of no more than 1.1m (maximum) and secured with a hose clip.
- If you need to drain any excess water from hoses and the sink is higher than 1m from the floor, you will need to drain the excess water into a bowl or container held underneath the pipe and lower than the sink.
- If you need a drain hose extension, make sure to use a similar hose that is no longer than 4 metres, otherwise the cleaning effect of the dishwasher could be reduced.

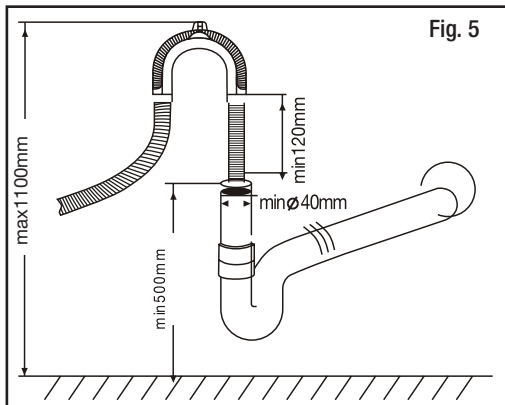

# Installation (Cont.)

## Electrical connection

Make sure that the electrical voltage and circuit frequency in your home correspond to those indicated on the appliance rating label and that the electrical system is sized for the maximum voltage on the rating plate. A time delay fuse or circuit breaker is recommended, as well as provision of a separate circuit serving only this appliance. A suitable power outlet should be located in an adjacent cabinet.

To connect the dishwasher, insert the plug into a properly earthed, easily accessible electrical socket. If the socket is not appropriate for the plug, replace the socket rather than use an adaptor or the like as such devices could cause overheating and fire.

### WARNING!

- Do not use an extension cord or an adaptor with this appliance.
- Do not bend the power cord. Do not place the appliance on top of the cord.
- Do not modify the plug provided with this appliance. If it does not fit into your power point, have a suitable outlet installed by a qualified electrician.

## Earthing

This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance for the electric current. This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local standards and requirements.

### WARNING!

- Ensure the outlet is properly earthed to the ground. If unsure, consult a qualified electrician or a service representative. Improper connection of the equipment grounding conductor can result in the risk of an electric shock if the appliance malfunctions.
- Do not, under any circumstances, cut or remove the third grounding prong from the power plug.







## Before first use

After your new dishwasher has been installed, and before using it for the first time, make sure to check the following points to ensure safe and efficient operation:

- Is the dishwasher level and properly installed?
- Is the water tap open?
- Are the hose connections secured tightly and there is no leakage at either end?
- Are all electrical cords tightly connected?
- Is the power switched on at the power point?
- Are the inlet and drain hoses free of knots and kinks?
- Has all packing material been removed from the dishwasher?
- Is all product documentation stored safely for easy access?

# Features

## Wash programs and cycles

Program	Suitability	Cycles
 <p><b>Intensive</b></p>	For most heavily soiled crockery, such as pots, pans, serving dishes and dishes that have been sitting with dried food on them for some time.	Prewash (40°C) Wash (55°C) Rinse 1 Rinse 2 Hot rinse (65°C) Drying
 <p><b>Heavy</b></p>	For heavily soiled loads, such as plates, cups, glasses and lightly soiled pots and pans: a standard daily wash program.	Main wash (60°C) Rinse 1 Rinse 2 Hot rinse (65°C) Drying
 <p><b>Normal</b> *</p>	For normally soiled loads, such as plates, cups, glasses and lightly soiled pots and pans: a slightly longer and more energy-efficient daily wash program with a lower water temperature.	Prewash Main wash (44°C) Rinse Hot rinse (45°C) Drying
 <p><b>90 min</b></p>	For lightly and normally soiled loads that need a quick wash straight after use.	Prewash Wash (50°C) Rinse Hot rinse (55°C) Drying
 <p><b>Fast 30</b></p>	A quick wash for lightly soiled loads that do not need drying.	Main wash (40°C) Hot rinse (50°C)
 <p><b>Soak</b></p>	A rinse/soak program for dishes you plan to wash later that day.	Prewash

\* The **Normal** program was used for testing to the Australian standard AS/NZS 2007.1 (with 15 place settings, rinse aid setting on 6, upper basket in the lower position, and the door opened about 5cm at the end of the program to assist with drying).

# Features (Cont.)

Detergent (pre / main)	Running Time (hr:min)	Energy (kWh)	Water (L)
5 / 29g (or all-in-1)	2:47	1.35	16.0
29g (or all-in-1)	2:22	1.25	12.5
5 / 29g (or all-in-1)	2:45	0.66	12.3
5 / 20g	1:30	0.89	10.5
15g	0:30	0.54	6.5
	0:07	0.06	4.0

# Instructions

## Loading the dishwasher

For best performance of your dishwasher, follow the loading guidelines in this manual.

### **ATTENTION:** Before loading the dishwasher baskets:

It is not necessary to rinse the dishes under running water before you put them into the dishwasher. However, we recommend you scrape off any large amounts of leftover food and soften remnants of burnt food in pots and pans.

Place objects in the dishwasher in the following way:

- Hollow items such as cups, glasses, pots, pans, etc. should be placed upside down so water cannot collect in the container or in a deep base.
- Curved items, or items with recesses, should be loaded at a slant so water can run off.
- All utensils should be stacked securely so they cannot tip over.
- All dishes and utensils should be placed in a way so the spray arms can rotate freely during washing.
- Very small items should not be washed in the dishwasher as they could easily fall out of the baskets and obstruct moving parts.
- Dishes and items of cutlery should not lie inside one another, or cover each other.
- To avoid damage to glasses, they must not touch.
- **WARNING!** Long bladed knives stored upright are a potential hazard! Always position these and other sharp cutlery items horizontally in the cutlery tray.
- Do not overload your dishwasher; it will hold a maximum of 15 standard place settings. This is important for better washing results and lowers energy consumption.
- **WARNING!** Do not pull out the upper and lower basket at the same time, which can lead to the appliance tipping forward.

## Protecting your glass and tableware

Much of today's tableware is dishwasher safe. However, not everything can be washed safely in a dishwasher. The chemical composition of your dishwasher detergent or the water temperature and duration of the wash program may adversely affect some materials. To protect your special cutlery, glass and tableware from damage, select a wash program with as low a temperature as possible (see pages 14-15 for program details).

We recommend you do not wash in a dishwasher the items listed below, and take special care with items deemed of limited suitability. And when buying new dishes, glassware, porcelain or cutlery, look for products labelled dishwasher-safe.

**Not suitable for the dishwasher:** cutlery with wooden, horn china or mother-of-pearl handles; plastic items that are not heat resistant; older cutlery with glued parts that are not temperature resistant; bonded cutlery items or dishes; pewter or copper items; lead crystal glass; steel items subject to corrosion (rusting); wooden platters.

**Of limited suitability:** some types of glasses can become dull with frequent machine washing; items made of silver and aluminium tend to discolour from machine washing; glazed patterns may fade with frequent machine washing.



# Instructions (Cont.)

## Adjusting the upper basket height

The height of the upper basket can easily be adjusted in order to accommodate taller dishes in either the upper or lower basket. The adjustment mechanism is designed so you can adjust the height of the upper basket upwards or downwards without removing it from your machine when it is full. At the factory the upper basket height is set to the lower position.

In order to raise the basket, hold it on both sides and pull it upwards (Fig. 6). To lower the basket, hold it on both sides again and leave it.

Always ensure the basket height adjustment mechanisms are in the same position (up or down) on both sides (Fig. 7).

Fig. 6



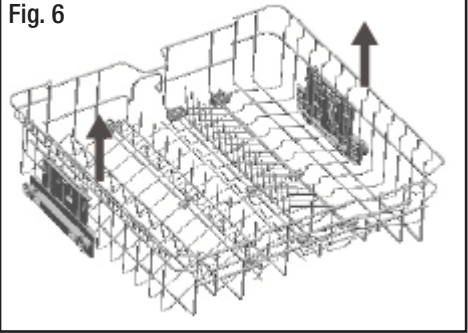


Fig. 7

Upper position

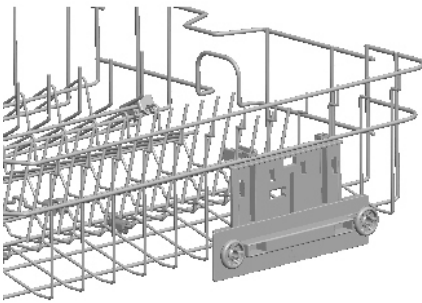

Lower position

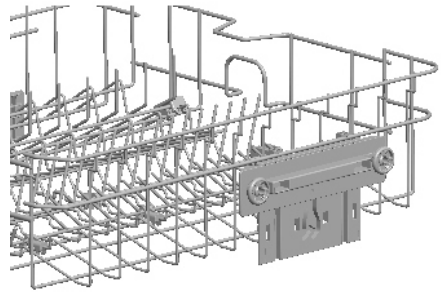


## Folding down the spike rows


If you need more space for larger pots, pans or bowls in the upper or lower basket, you can fold down or raise up some of the spike rows to create more space (Fig. 7).

Fig. 8

Upper basket

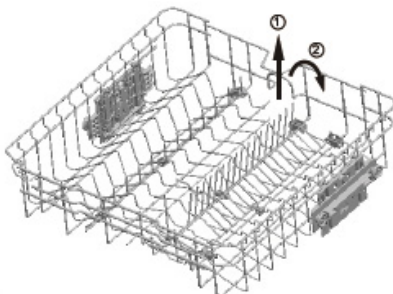

Lower basket

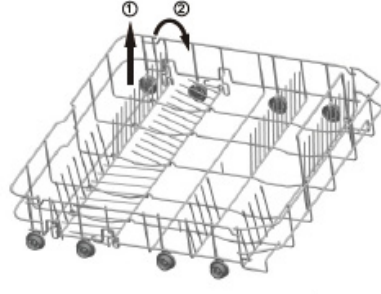


# Instructions (Cont.)

## The upper basket

The upper basket is designed to hold more delicate and lighter tableware such as glasses, cups, small plates, bowls and shallow pans (as long as they are not too dirty). Position these items securely so they do not get moved by the spray of water.

Fig. 9 shows the upper basket loaded to fit 15 place settings according to the standard.

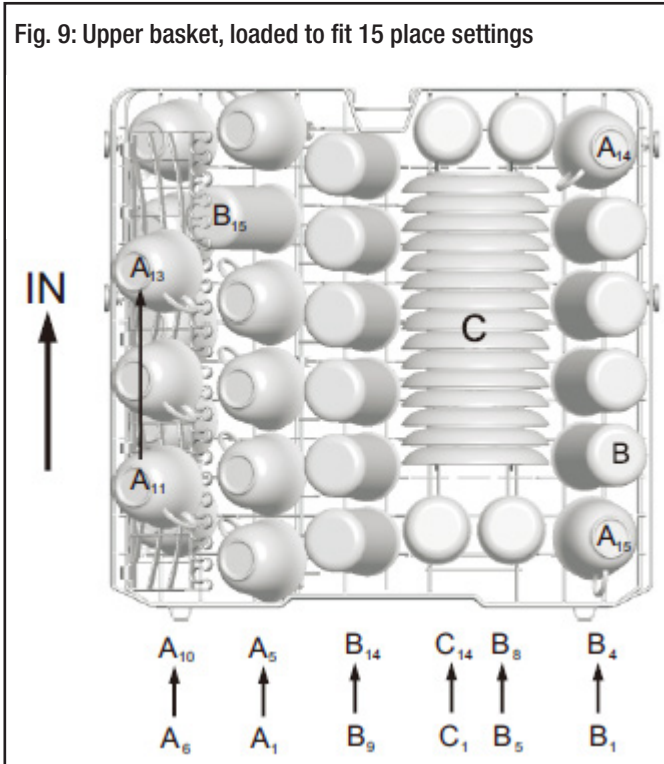

A: Cups - B: Glasses - C: Saucers

**NOTE:** Do not put items in the dishwasher that are soiled with cigarette ash, candle wax, lacquer or paint.

# Instructions (Cont.)


## The lower basket

The lower basket is designed to hold dinner plates, larger items and the cutlery basket.

Pots, pans, serving dishes and bowls are often the most difficult to clean and fit best into the lower basket. Always place these items upside down into the basket or at a slant so the water can flow out. Load large serving dishes and lids on the side of the baskets so they do not block the rotation of the top spray arm.

Keep in mind that some of the spike rows can be folded down (see Fig. 8, page 17) to create more space for larger pots and bowls.

Fig. 10 shows the lower basket loaded to fit 15 place settings according to the standard.

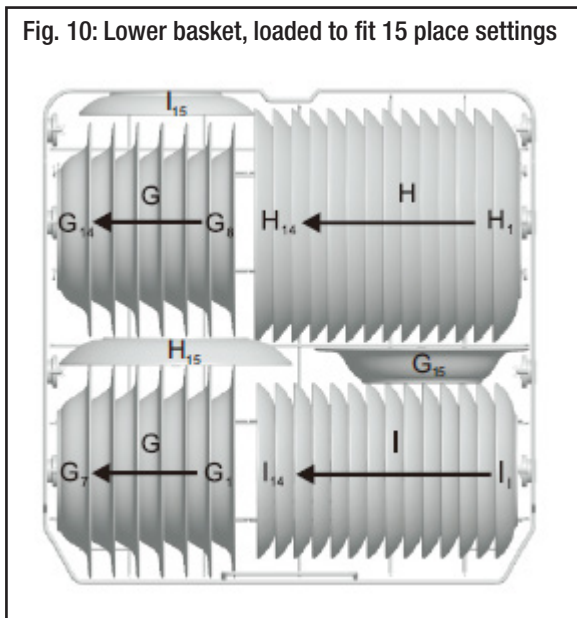


G: Soup plates - H: Dinner plates- I: Dessert plates

# Instructions (Cont.)

## The cutlery tray

Your new dishwasher is equipped with a cutlery tray which is located above the upper basket. Arrange cutlery in the tray as shown (Fig. 11) to ensure that water can run off freely.

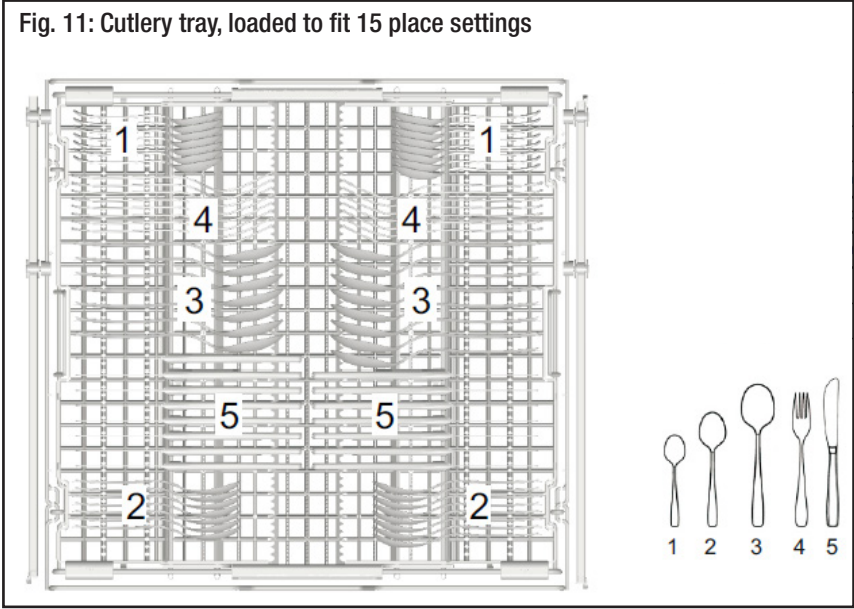

For personal safety and top quality cleaning, place your dishwasher-safe standard size cutlery in the tray, making sure that items do not nest together and that no item extends through the bottom of the tray.

# Instructions (Cont.)

## Dishwasher detergent

### **WARNING!**

- Only use detergent specifically made for use in dishwashers.
- Always add detergent just before starting the dishwasher, otherwise it could get damp and will not dissolve properly. **It is also a hazard to leave detergent in the dispenser where children can reach it when the door is open.**
- **Dishwasher detergent is corrosive! Take care to keep it out of reach of children.**

Dishwasher detergents have chemical ingredients that remove dirt, food and germs and transport them out of the dishwasher. Most commercially sold dishwasher detergents are suitable for this purpose; they come in powder or tablet form.

Based on their chemical composition, dishwasher detergents can be split into two basic types: conventional, alkaline detergents with caustic components and low alkaline, concentrated detergents with enzymes.

### **Concentrated detergent**

Using a “normal” washing program together with a concentrated detergent is better for the environment and good for your dishes; such wash programs are specifically matched to the dirt-dissolving properties in the enzymes of concentrated detergent. For this reason, a “normal” wash program in which a concentrated detergent is used can achieve the same results that otherwise only an “intensive” program can achieve.

### **Detergent tablets**

Detergent tablets of different brands dissolve at different speeds; some cannot dissolve and develop their full cleaning power during short wash programs.

**To ensure the complete removal of detergent residues, we recommend choosing longer wash programs when using dishwasher detergent tablets.**

# Instructions (Cont.)

## The detergent dispenser

Fig. 12: Press latch to open


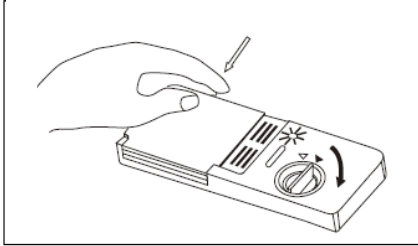


Fig. 13

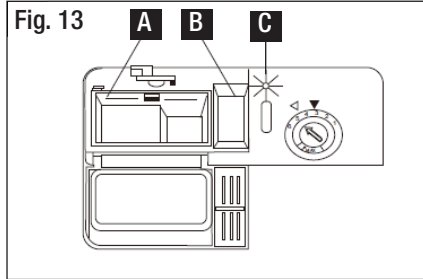

## Adding detergent

The table on page 15 lists the recommended amounts of detergent, generally one heaped tablespoonful, or 25–30g. However, water hardness and soiling levels affect the amount of detergent required, and there are various types of detergent tablet on the market, so always follow the detergent manufacturer's recommendations on dosage.

- Before the start of each wash cycle fill an appropriate amount of detergent (or a detergent tablet) into the detergent dispenser. If the lid is closed, press the release latch (Fig. 12) and the lid will spring open. The MIN line indicates approximately 20g of detergent.
- For each wash cycle, fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment (Fig. 13: A). If you are washing more heavily soiled dishes or using a program with a prewash cycle, also fill some detergent in the respective compartment (13: B), if using powder detergent. The MIN line indicates approximately 5g of detergent.
- Unless you use a detergent tablet with rinse aid, make sure there is sufficient liquid rinse aid in the rinse aid dispenser. Check the mechanical indicator (13: C), or the electronic indicator on the control panel. (For more on rinse aid, see pages 23-24.)
- Close the lid of the detergent dispenser and press until you hear it lock in place.

# Instructions (Cont.)

## All-in-1 (3-in-1) detergent tablets

Some detergent tablets combine dishwasher detergent with rinse aid (and sometimes other ingredients). Before using such all-in-1 (or 3-in-1, or similar) tablets in your dishwasher, check and make sure that the water hardness in your supply is compatible with these tablets. Check on the packaging or contact the detergent manufacturer.

- Strictly follow the detergent manufacturer's recommendations for use of such tablets.
- If you encounter problems when using such tablets for the first time, seek advice from the detergent manufacturer (see the product packaging for contact details).

## The all-in-1 function

This dishwasher has a special **all-in-1** function, which will help dissolve the detergent at the appropriate time during the wash cycle.

To select this function, proceed as follows:

- Close the door and press the **OPTION** button until the **All-in-1** indicator blinks. The dishwasher will now use the **all-in-1** washing program and dissolve the detergent at the appropriate time during the wash cycle.
- To cancel the **all-in-1** washing program, press the **OPTION** button or follow the "Changing a program" instructions (on page 26).
- If you decide to switch back to using a standard detergent system, we advise that you refill the rinse aid compartment, set the rinse aid dispenser (water hardness setting) to the highest possible position and run the dishwasher for three normal cycles without a load. Then readjust the water hardness setting according to the conditions for your region.

# Instructions (Cont.)

## Rinse aid

Rinse aid is automatically released during the last rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aid.

### CAUTION!

Only use specific, branded rinse aid for your dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent) as this could damage the appliance.

## Filling the rinse aid dispenser

Unless you are going to use all-in-1 dishwasher detergent tablets, fill the rinse aid dispenser before first use. The dispenser is located inside the door next to the detergent dispenser. It holds about 140mL.

Fig. 14: Turn anticlockwise to open



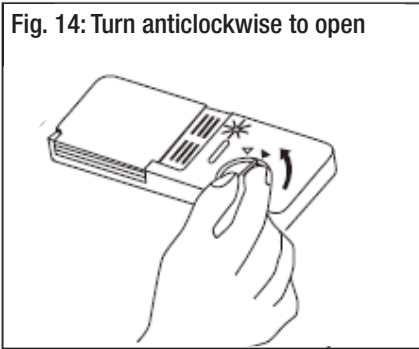


Fig. 15: Pour in rinse aid

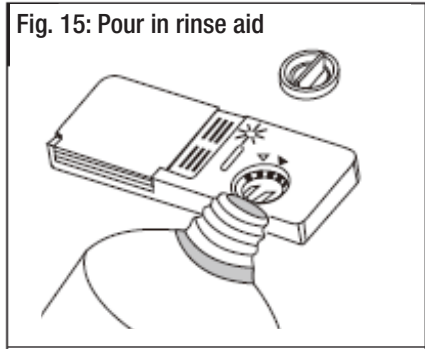

- To open the dispenser, turn the cap in anticlockwise direction and lift it out (Fig. 14).
- Carefully pour rinse aid into the dispenser until the level indicator turns completely black (Fig. 15). Take care not to overfill.
- To replace the cap in the opening, align it with the “open” arrow and turn it clockwise (right) to the “closed” arrow (Fig. 16).

Fig. 16: Turn clockwise to lock

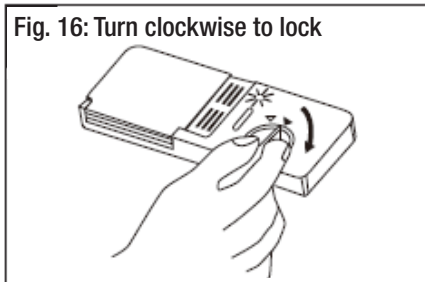

### CAUTION!

Clean up any rinse aid spilled while filling with an absorbent cloth or paper towel to avoid excessive foaming during the next wash.

Do not forget to replace the cap before you close the dishwasher door.



# Instructions (Cont.)

## When to refill the rinse aid dispenser

Fill the rinse aid dispenser when the warning light on the control panel comes on. Alternatively, you can estimate the amount of rinse aid left in the dispenser by the colour of the optical level indicator, which is located next to the cap (see Fig. 12-C on page 22). When the rinse aid container is full, the whole indicator will be dark. As the rinse aid diminishes, the size of the dark dot decreases, as indicated below. Never let the rinse aid level fall below 1/4 full.

- Full
- 3/4 Full
- 1/2 Full
- 1/4 Full - refill now to prevent spotting
- Empty

## Adjusting the rinse aid dose


When you remove the cap from the rinse aid dispenser, the dosage dial with six settings will be visible. The dose is factory set in position 5 (Fig. 17).

Always start with the dispenser set on “4”.

If spots and poor drying are a problem, increase the amount of rinse aid dispensed by rotating the dial to “5”.

If the dishes still are not drying properly or are showing spots, adjust the dial to level “6”.

- **Increase** the dose if there are drops of water or lime spots on the dishes after the wash.
- **Reduce** the dose if there are sticky whitish streaks on your dishes or a bluish film on glassware or knife blades.

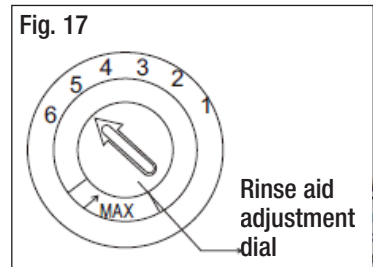

### NOTE

If you are using detergent tablets that contain a rinse aid, you do not need to add liquid rinse aid and can ignore the rinse aid warning light when it comes on.

# Instructions (Cont.)

## Starting a wash program

- Open the door and draw out the lower basket. Load your dishes and push the basket back into place. Then load the upper basket the same way (see pages 16–20 for details).
- Add dishwasher detergent according to the instructions (see pages 21–23).
- Unless you use dishwasher detergent tablets that contain a rinse aid, make sure there is sufficient liquid rinse aid in the rinse aid dispenser (see pages 24–25).
- Close the dishwasher door, making sure you hear a click when it closes properly.
- Insert the plug into a suitable power socket (the power supply is 240V~ 50Hz) and make sure the water supply is turned on to full pressure.
- Press the **POWER** button on the dishwasher control panel (see page 8).
- Press the **PROGRAM** button, repeatedly, to select the desired wash program from the following: Intensive - Heavy - Normal - 90 min - Fast 30 - Soak. The selected program's indicator light will illuminate (see page 9).
- Press the **START/PAUSE** button to start the washing program (see page 8).
- At the end of the program, press the **POWER** button to switch off the dishwasher.
- We recommend you open the door slightly (about 5cm) to assist in drying.

## Setting a delayed start

- Press the **DELAY** button, repeatedly, to delay the start time of any program automatically by up to 24 hours.

## Changing a program

If you want to change the wash program, you must do so soon after the start, otherwise the detergent may have already been released and the wash water drained, in which case you must refill the detergent dispenser (see pages 22–23).

To change a program soon after the machine has started washing:

- Press the **START/PAUSE** button to pause the incorrect wash program.
- Press the **PROGRAM** button and choose the correct wash program.
- Press the **START/PAUSE** button to continue running the correct program.

### NOTE:

- \* If you open the door to the dishwasher when a washing cycle is underway, the appliance will pause, emit a warning signal and [ E1 ] will be shown on the display.
- \* When you close the door, the machine will continue working after 10 seconds.

# Instructions (Cont.)

## Forgot to add a dish?

Additional dishes can be added any time before the detergent dispenser opens.

- Press the **START/PAUSE** button to pause the washing.
- Open the door a little and wait until the spray arm stops working, then open the door completely.
- Add additional dishes.
- Close the door and press the **START/PAUSE** button. The dishwasher will continue with the program after 10 seconds.

**WARNING!** It is dangerous to open the door mid-cycle as hot water or steam may escape and scald you. Open the door very carefully.

## At the end of the wash program

When the working program has finished, a buzzer will sound six times and then stop.

- Turn off the appliance using the **POWER** button.
- Open the door – take care when opening the door as hot steam may escape.
- Leave the door ajar and wait at least a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better. We recommend allowing dishes to cool for around 15 minutes before removing them from the dishwasher.
- When unloading the dishwasher, empty the lower basket first and then the upper one so water from the upper basket will not drip onto the dishes in the lower basket.  
**CAUTION!** Do not pull out both the upper and lower baskets at the same time, which may lead to the appliance tipping forward.
- It is normal that the dishwasher is wet inside. You may wipe the inside of the door with a dry cloth or leave the door slightly ajar for moisture to evaporate.

**NOTE:** If you are not going to use the dishwasher for a period of time, please shut off the water supply.

## Program indicator lights

The program lights indicate the current state of the dishwasher.

One of the program lights is on.	The dishwasher is running.
One of the program lights is blinking.	The dishwasher is in pause mode.
All program lights start blinking.	The dishwasher is out of order. Turn off the power and water supply and contact our after sales support centre for advice on service.

# FAQs and Troubleshooting Guide

The table below lists possible causes and solutions for common problems you may encounter with the dishwasher. If you follow all the instructions below but still cannot solve a problem, please contact our after sales support centre.

	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
Technical problems	Dishwasher does not start	The fuse is blown or the circuit breaker is activated.	Replace the fuse or reset the circuit breaker. Unplug other appliances on the same circuit with the dishwasher.
		The power supply is not turned on.	Ensure the appliance is properly connected and the power switched on.
		The water pressure is low.	Ensure the water supply is connected properly and the water is turned on.
		Dishwasher door is open.	Close the door properly.
	Water is not pumped out	Kink in the drain hose.	Check the drain hose and ensure there are no kinks.
		The filter is clogged.	Check and clean the coarse filter.
		The kitchen sink is clogged.	Ensure the kitchen sink drains well. If the problem is the sink not draining, you may need a plumber rather than a dishwasher service technician.
	Drain pump does not stop	Overflow	When the system detects an overflow, it shuts off the circulation pump and turns on the drain pump.
	Dishwasher leaks	Overfilled rinse aid dispenser or spill	Be careful not to overfill the rinse aid dispenser. Spilled rinse aid could cause oversudsing and lead to overflowing. Wipe away any spills with a damp cloth.
		Dishwasher is not level.	Level the dishwasher.
Noise	Some audible sounds are normal, such as sound from water spraying, food remnants being shredded and the detergent dispenser opening.		
	Knocking noise in tub	A spray arm is knocking against an item.	Interrupt the program and rearrange the items that are obstructing the spray arm.
	Rattling noise in the wash tub	Utensils are not secure in the baskets or something small has dropped out of the baskets.	Interrupt the program and carefully rearrange the loose crockery/cutlery items.
	Motor hums	The dishwasher has not been used regularly.	When used infrequently, set it to fill and pump out every week, which will also help keep the seal moist.

# FAQs and Troubleshooting Guide (Cont.)

	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>General problems</b>	Suds in the tub	Inappropriate detergent	Use only specific dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let the suds evaporate. Add 3–4 litres of cold water to the tub, close the door securely, then run any program. The dishwasher will drain out the water at the first step. Open the door after draining has stopped and check if the suds have disappeared. Repeat, if necessary.
		Spilled rinse aid	Always wipe up rinse aid spills immediately.
		A small amount of clean water around the outlet on the tub bottom is normal. It keeps the water seal lubricated.	
	White film on inside surface of the tub	Hard water minerals	To clean the interior, use a dishwasher cleaner made specially for that purpose. Alternatively, use a damp sponge with dishwasher detergent and wear rubber gloves.
	Rust stains on cutlery	The affected items are not corrosion resistant.	Cutlery must be corrosion resistant and dishwasher safe.
<b>Unsatisfactory washing result</b>	Dishes are not clean	Wrong program selection	Select a more intensive wash program.
		Improper basket loading	Make sure the action of the detergent dispenser and spray arms are not blocked by large tableware.
		The filters are not clean, or incorrectly fitted, which may cause the spray arm jets to get blocked.	Clean and/or fit the filter assembly correctly. Clean the spray arm jets.
	Cloudiness on glassware	Combination of soft water and too much detergent	Use less detergent if you have soft water, and select a shorter program when washing glassware.
	Black or grey marks on dishes	Aluminum utensils have rubbed against dishes.	Use a mild abrasive cleaner to eliminate those marks. Avoid washing aluminium utensils in the dishwasher.
	Detergent left in dispenser	Incorrectly loaded dishes prevent the detergent cover from opening.	Reload the dishes properly to ensure nothing is blocking the detergent cover.

# FAQs and Troubleshooting Guide (Cont.)

	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
Unsatisfactory washing result	Spots and/or filming on glassware	<p>There can be many causes for this, for example:</p> <ul style="list-style-type: none"> <li>- extremely hard water</li> <li>- low inlet temperature</li> <li>- overloaded or improperly loaded dishwasher</li> <li>- lack of rinse aid</li> <li>- old or damp detergent</li> <li>- incorrect detergent dosage.</li> </ul>	<p>To remove spots from glassware:</p> <ol style="list-style-type: none"> <li>1. Take all metal utensils out of the dishwasher, leaving the spotted glassware.</li> <li>2. Choose the longest program and do not add detergent.</li> <li>3. Run the program for about 18–22 minutes, until it is in the main wash.</li> <li>4. Open the door and pour two cups of white vinegar into the bottom of the dishwasher.</li> <li>5. Close the door and let the dishwasher complete the program.</li> </ol> <p>If the vinegar does not work, repeat the above steps but using 1/4 cup of citric acid crystals instead of vinegar.</p>
		<p>Improper loading</p>	<p>Load the dishwasher as suggested in this manual.</p>
Unsatisfactory drying result	Dishes are not dried.	<p>Too little rinse aid</p>	<p>Increase the amount of rinse aid. Set the dosage dial to a higher number.</p>
		<p>No rinse aid</p>	<p>Refill the rinse aid dispenser.</p>
		<p>Dishes are removed too soon after the program has finished.</p>	<p>Do not empty your dishwasher straight after washing. Open the door slightly so steam can escape. Wait at least 15 minutes before unloading. Only start unloading when the dishes are barely warm to the touch. Empty the lower basket first to prevent water from dropping off dishes in the upper basket onto the dry dishes in the lower basket.</p>
		<p>Wrong program selection</p>	<p>In shorter programs the rinse temperature is generally lower. This also lowers the drying performance. Choose a longer program with a higher rinse temperature.</p>
		<p>Use of plastic dishes or cutlery with a lower-quality coating</p>	<p>Water drainage is more difficult with these items, which makes them less suitable for washing in a dishwasher.</p>

# FAQs and Troubleshooting Guide (Cont.)

## Error codes

When there is a malfunction, the dishwasher will stop washing, sound a warning signal and display one of the following error codes. If the code indicates a malfunction or leakage, switch off the dishwasher, turn off the power and close the water supply. Then contact our after sales support centre for advice.

Code	Meaning
E1	The door is open during operation.
E2	Water inlet malfunction.
E3	Water drainage malfunction.
E4	Temperature sensor malfunction.
E5	Water overflow/leakage.
E6	Water leakage.
E7	Heating element malfunction.

### WARNING!

- If the dishwasher is overflowing, make sure to turn off the main water supply before making a service call.
- If there is water in the base of the tub because of an overfill or small leak, make sure to remove the water before restarting the dishwasher.

# Other Useful Information (Cont.)

## Cleaning and maintenance

### The filter system

The filter system consists of a coarse filter, a flat (main) filter and a fine microfilter (Fig. 18):

#### 1 Coarse filter


Larger items, such as pieces of bone or glass that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, gently squeeze the tabs on the top of this filter and lift it out.

#### 2 Flat (main) filter

Food and soil particles trapped by this filter are pulverised by a special jet on the lower spray arm and washed down the drain.

#### 3 Fine (micro) filter

This filter holds dirt and food residues in the sump area and prevents them from being redeposited on the dishes during a cycle.

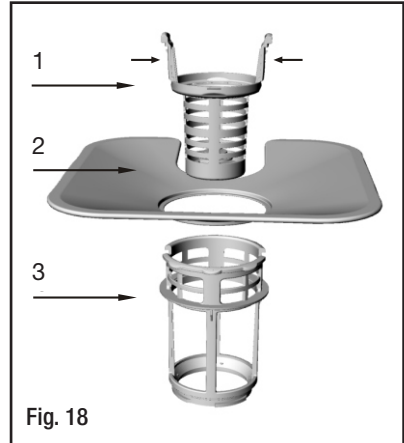

The filter system efficiently removes food particles from the wash water, allowing it to be recycled during the wash. It prevents larger remnants of food or other objects from getting inside the pump. **To ensure best performance, the entire filter assembly should be cleaned once a week and residues removed that may clog up the filters.**


### Removing the filter system

Inspect the filter system **after every use** for obstructions and remove any larger food particles trapped in system. To remove the filter assembly, unscrew the coarse filter and then take out the filters, as illustrated below (Fig. 19).

**Step 1:** Squeeze the tabs on top of the coarse filter, lift up and take out. Then turn the microfilter anticlockwise and remove.

**Step 2:** Lift up the flat filter and take out.

After cleaning the filters, replace them in reverse order.

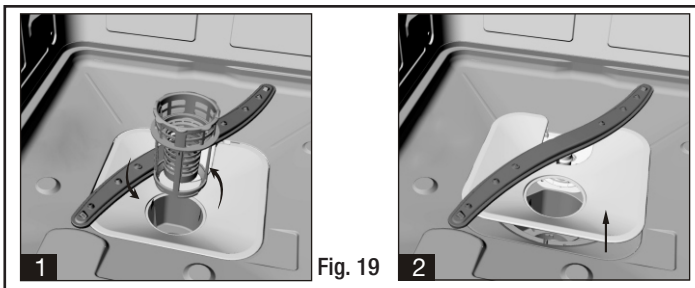



# Other Useful Information (Cont.)

## Cleaning the filters

Remove any larger food remnants from the main filter and clean it under running water.

Use a cleaning brush to clean the coarse filter and the fine microfilter.

Reassemble the filter parts as illustrated opposite (Fig. 17) and reinsert the entire assembly in the dishwasher, positioning it in its seat and pressing downward.


### CAUTION!

- When cleaning the filters take care not to contort their shape, which could compromise the washing performance.
- Never use the dishwasher without the filters. Improper replacement of the filters may reduce the washing performance and damage dishes and utensils.

## Cleaning the spray arms

The spray arms should be cleaned regularly to prevent clogging of the jets and bearings due to limescale or other hard water chemicals.

- First remove the upper spray arm, as illustrated (Fig. 20):  
Screw off the nut in clockwise direction, take off the washer on top of the spray arm and then remove the arm.
- To remove the lower spray arm, pull it upwards, as illustrated.
- Wash both upper and lower spray arms in soapy, warm water and use a soft brush to clean the jets.
- Replace the spray arms after thorough rinsing.

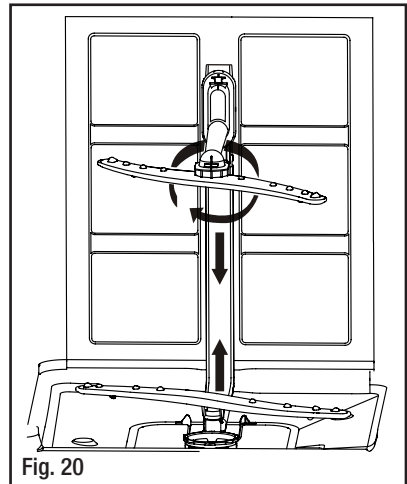

## Cleaning the door

Clean the edge around the door only with a soft cloth, moistened with warm water.

Periodically clean the seals with a damp sponge to remove food remnants and prevent odour development.

### CAUTION!

- To prevent penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- Never use sharp objects, harsh or abrasive cleaners or scouring pads on any dishwasher surface because they will scratch the finish. Some papers towels may also scratch or leave marks on the surface.

# Other Useful Information (Cont.)

## Looking after your dishwasher

- **After every wash**, turn off the water supply to the appliance and leave the door slightly ajar so moisture and odours are not trapped inside.
- **Before cleaning** or performing maintenance, always unplug the dishwasher from the socket.

## No solvents or abrasive cleaning

- To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm, soapy water. Or use a good appliance cleaner.
- To remove spots or stains from the surface of the interior, use a cloth moistened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.
- Clean the door seals periodically with a damp sponge to remove any trapped food remnants and prevent odours developing inside the dishwasher. To clean the control panel, use a lightly moistened cloth and dry the area thoroughly afterwards.

## In special situations

### Going on holidays

When your dishwasher is not going to be used for some time, we recommend you run a wash cycle with the dishwasher empty and then unplug the dishwasher from the socket, turn off the water supply and leave the door slightly ajar. This will help with door seal durability and odour prevention inside the appliance.

### Moving the dishwasher

If you must move the dishwasher, try to keep it in a vertical position. Only put it on its back if absolutely necessary.

### Frost protection

If your dishwasher is left in an unheated place during winter and temperatures are likely to drop to below zero degrees Celsius, you should take certain precautions to prevent water freezing in the pipes. Unplug the dishwasher from the electrical power supply and turn off the water supply. Then ask an authorised service technician to:

- Disconnect the water inlet pipe from the water valve.
- Drain any water from the inlet pipe and water valve (use a pan to catch the water).
- Reconnect the water inlet pipe to the water valve.
- Remove the filter assembly from the bottom of the dishwasher and wipe up any water left in the sump with an absorbent sponge.

If your dishwasher does not work because of ice, contact a qualified service technician.

# Other Useful Information (Cont.)

## Service, repair and spare parts

If the appliance is damaged, do not attempt to repair it yourself. Do not disassemble or modify the appliance. If it requires repair or service, please contact our after sales support centre to arrange for a service.

Our after sales support centre stocks a wide range of spare parts for the dishwasher. To purchase a part, call the centre on 1300 886 649 or email us at [info@tempo.org](mailto:info@tempo.org)

- Adjustable feet
- Basket guides (upper and lower)
- Control panel
- Cutlery tray
- Cup rack
- Dispenser
- Display PCB
- Door lock assembly
- Door lock hook
- Drain pipe, hose and pump
- Filters: fine, flat, micro
- Float
- Heating elements
- Inlet pipe assembly
- Inlet hose
- Inlet valve
- Inner pipe
- Microswitch
- Pump
- Pressure switch
- Rail support assembly
- Sprayer assemblies (upper and lower)
- Temperature sensor
- Top plate assembly

# Other Useful Information (Cont.)

## Technical specifications

Model Number	AK-DW15P
Capacity	15 place settings
Rated voltage/frequency	220-240V~ 50Hz
Rated power	1850W
Standard cleaning cycle	Normal
Energy consumption of the standard cleaning cycle	0.66kWh
Water consumption of the standard cleaning cycle	12.3L
Water pressure (flow pressure)	0.04–1.00 MPa = 0.4–10 bar
Height	845mm
Width	600mm
Depth	600mm
Weight	approx. 42kg



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

## Compliance

This product has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.5.

# Other Useful Information (Cont.)

## **Responsible disposal**

At the end of its working life, do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.

When removing an old dishwasher from service or discarding it, remove the door to the washing compartment. Cut off the power supply cord and make the door closing mechanism unusable.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

## **Warranty returns**

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## **Product does not work?**

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 for advice.