

APPLIANCES FOR LIVING



ARTUSI
THE ART OF LIVING

CAMC45B
OPERATION MANUAL

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**
LEICHHARDT NSW 2040

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.

Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.

All our appliances are only for domestic use, not for commercial use. Products marked with (*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

Ú Table of contents

| | | | |
|--|----|--|----|
| Precautions | 2 | Defrosting programmes | 12 |
| Addendum | 2 | Setting the time-setting options | 13 |
| Important safety instructions | 3 | Setting the timer | 13 |
| Causes of damage | 6 | Setting the cooking time..... | 13 |
| Installation | 6 | Setting the clock | 13 |
| Your new appliance | 8 | Childproof lock | 13 |
| Control panel..... | 8 | Switching on the childproof lock..... | 13 |
| Touch keys and display..... | 8 | Switching off the childproof lock..... | 13 |
| Function selector | 8 | Childproof lock with other cooking operations..... | 13 |
| Parameter selector | 8 | Care and cleaning | 14 |
| Cooling fan | 8 | Cleaning agents..... | 14 |
| Accessories | 9 | Technical data..... | 14 |
| Before using the appliance for the first time | 9 | Malfunction table | 15 |
| Setting the clock..... | 9 | Acrylamide in foodstuffs | 15 |
| Heating up the oven..... | 9 | Energy and environment tips | 16 |
| Cleaning the accessories..... | 9 | Saving energy | 16 |
| Setting the oven | 9 | Environmentally-friendly disposal | 16 |
| Setting the type of heating and temperature | 9 | Expert Cooking Guide | 16 |
| Rapid preheating..... | 10 | Defrosting, heating up and cooking with the microwave..... | 16 |
| The microwave | 10 | Microwave tips | 19 |
| Notes regarding ovenware | 10 | Cakes and pastries | 19 |
| Microwave power settings | 10 | Baking tips | 20 |
| Setting the microwave..... | 11 | Roasting and grilling | 21 |
| MicroCombi operation | 11 | Tips for roasting and grilling..... | 23 |
| Setting Microwave Combi operation | 11 | Bakes, gratins, toast with toppings | 23 |
| Automatic programmes | 11 | Convenience products, frozen..... | 24 |
| Setting a programme | 11 | | |

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment)
5. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
6. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision unless they are aged from 8 years and above and supervised.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

14. The oven should be cleaned regularly and any food deposits removed.

15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

16. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

17. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)

18. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- farm houses;
- bed and breakfast type environments.

19. Care should be taken not to displace the turntable when removing containers from the appliance. (For fixed appliances and built-in appliances being used equal or higher than 900mm above the floor and having detachable turntables. But this is not applicable for appliances with horizontal bottom hinged door.)

20. The appliance shall not be cleaned with a steam cleaner.

21. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

22. WARNING: Accessible parts may become hot during use. Young children should be kept away.

23. Steam cleaner is not to be used.

24. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

25. Surface of a storage drawer can get hot.

26. WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

27. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

28. Metallic containers for food and beverages are not allowed during microwave cooking.

29. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

30. The appliance is intended to be used built-in.

31. The appliance must not be installed behind a decorative door in order to avoid

overheating. (This is not applicable for appliances with decorative door.)

32. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Causes of damage

Caution!

- Creation of sparks: Metal e.g. a spoon in a glass must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Water in the hot cooking compartment: Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage.
- Moist food: Do not store moist food in the closed cooking compartment for long periods.
Do not use the appliance to store food. This can lead to corrosion.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Using the appliance door for standing on or placing objects on: Do not stand or place anything on the open appliance door. Do not place ovenware or accessories on the appliance door.
- Transporting the appliance: Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- The oven should be cleaned regularly and any food deposits removed since they may explode, even after microwave heating has ended.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Installation

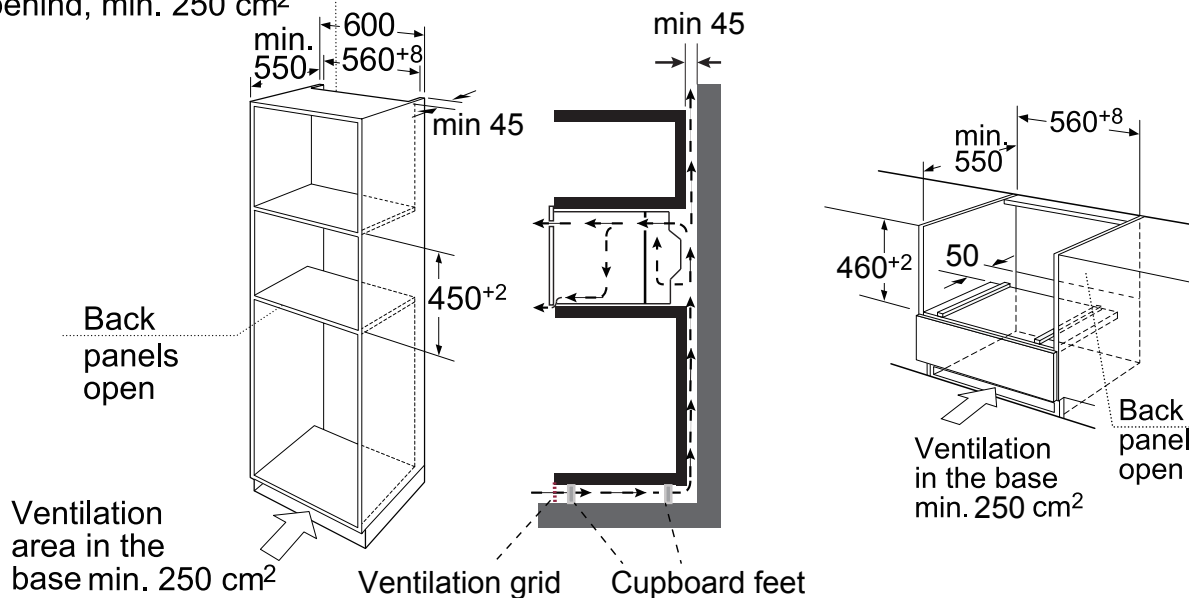
Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 45 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250 cm² on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90 °C.

Installation dimensions

Ventilation openings

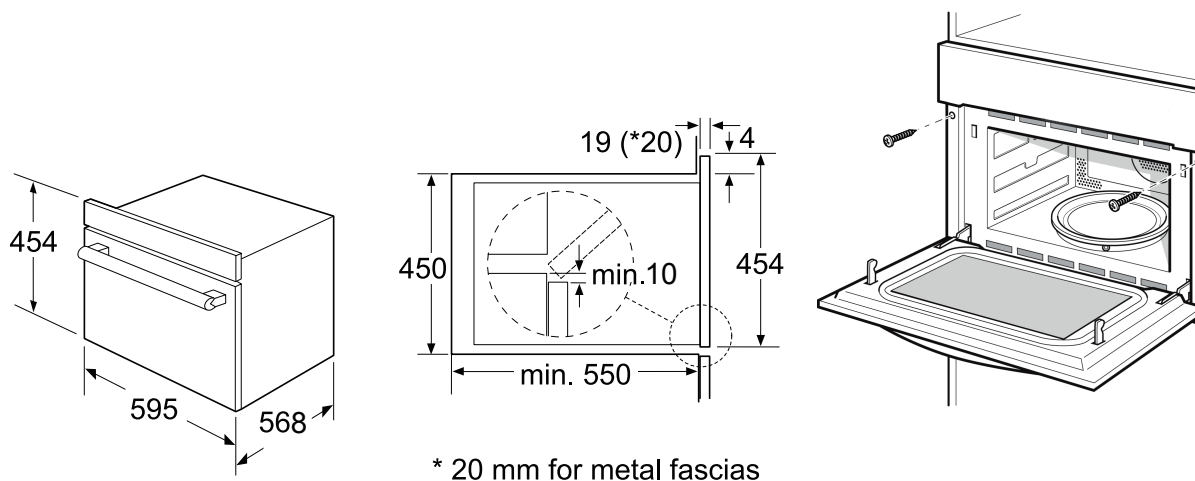
behind, min. 250 cm²



Note: There should be gap above the oven.

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the oven into the box, making sure that it is in the centre.
 2. Open the door and fasten the microwave with the screws that were supplied.



- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

Important information

The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.

Only a qualified electrician who takes the relevant regulations into account may replace the power cord.

Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.

If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3 mm must be provided.

Connect the wires of the mains power cord in accordance with the following colour coding:

Green and yellow Earth wire (E)

Blue Neutral wire (N)

Brown Live (L)

Great Britain and Australia:

Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work. When the appliance is installed, protection must be provided against accidental contact in the future.

Your new appliance

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are

explained. You will find information on the cooking compartment and the accessories.

Control panel



Touch keys and display

The touch keys are used to set the various additional functions. On the display, you can read the values that you have set.

| Symbol | Function |
|--------|-----------------------|
| | Power/Weight |
| | Rapid preheating |
| | ON/OFF |
| | Temperature/Auto menu |
| | Clock |
| | Start/Pause |

Note:

Touch and hold the and keys for approx. 3 seconds to activate the childproof lock. And the oven will not react to any settings. The timer and clock can also be set.

Function selector

Use the function selector to set the type of heating.

| Function | Use |
|---------------------|---|
| 3D Hot air | For baking sponge cakes in baking tins, flans and cheesecakes as well as cakes, pizza and small baked items on the baking tray. 50°C can maintain the taste of food after heat preservation of 1-2 hours. |
| Grill with fan | Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting. |
| Pizza setting | For frozen convenience products and dishes which require a lot of heat from underneath. |
| Grill | Select between the levels high, medium or low. This is ideal if you wish to grill several steaks, sausages, pieces of fish or slices of bread. |
| Microwave+Hot air | Use this function to roast meals quickly. And at the same time use the function of 3D Hot air |
| Microwave+Grill Fan | Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting. And use the function to roast meals evenly. |
| Microwave+Pizza | Use this function to roast meals quickly. And at the same time use the function of Pizza setting. |

| Function | Use |
|-----------------|---|
| Microwave+Grill | Use this function to cook meals quickly and at the same time give the meal a brown crust. |
| Defrost | 2 defrosting programmes |
| Auto-programms | 13 cooking programmes The type of heating and cooking time are set by weight. |
| Microwave | Defrost, reheat and cooking. |

Parameter selector

Use the selector to set the parameters.

| parameter | function |
|-------------|--|
| Auto menu | Select 13 automatic programmes. From P 01 to P 13. |
| Temperature | Select the temperature of cooking (°C). : 50, 100, 105, 110...230 : 100, 105, 110...230 : 100, 105, 110...230 + : 50, 100, 105, 110...230 + : 100, 105, 110...230 + : 100, 105, 110...230 |
| Weight | Set the weight of cooking. |
| Time | Set the time of cooking. |
| Microwave | Select microwave power. 100W, 300W, 450W, 700W and 900W |

Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door.

The cooling fan continues to run for a certain time after operation.

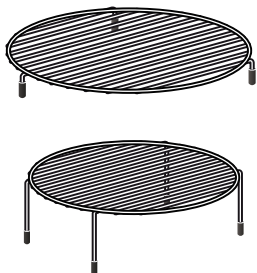
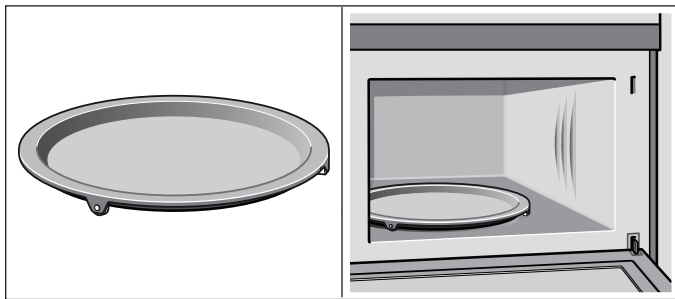
Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

Notes

- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

Accessories



Turntable

As a surface for the wire rack.

Food which particularly requires a lot of heat from underneath can be prepared directly on the turntable.

The turntable can turn clockwise or anti-clockwise.

Place the turntable on the drive in the centre of the cooking compartment. Ensure that it is properly fitted.

- Never use the microwave without the turntable.
- The turntable can withstand max. 5 kg.
- The turntable must turn when using all types of heating.

Lower wire rack

For the microwave and for baking and roasting in the oven.

Higher wire rack

For grilling, e.g. steaks, sausages and for toasting bread.

As a support for shallow dishes.

Note:



Type and quantity of accessories is subject to actual demand.

Before using the appliance for the first time

Here you will find everything you need to do before using your oven to prepare food for the first time. First read the section on *Safety information*.

Setting the clock


Once the appliance is connected, "00:00" will blink, buzzer will ring once. Set the clock.





 




1. Turn the  knob between 00:00 and 23:59.
2. Touch the  key. The time is set.

Cleaning the accessories

Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.

Heating up the oven

To remove the new cooker smell, heat up the oven when it is empty and closed. One hour with  Hot air at 230 °C is ideal. Ensure that no packaging remnants have been left in the cooking compartment.










1. Use the function selector  to set  heating mode. Turn the  knob to select  hot air function.
2. Touch the  key. Turn the  knob to set the temperature to 230 °C.
3. Touch the  key. Turn the  knob to set the cooking time to 60 minutes.
4. Touch the  key. The oven begins to heat up.

Setting the oven

 
There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can also select the oven cooking time for your dish. Please refer to the section on *Setting the time-setting options*.

Setting the type of heating and temperature

 

Example :  Hot air at 200 °C for 25 minutes.

1. Set the function selector  to . Turn the  knob to .
2. Touch the  key. The default temperature 180 °C will blink. Turn the  knob to set the temperature to 200°C.
3. Touch the  key. Turn the  knob to set the cooking time to 25 minutes.
4. Touch the  key. The oven begins to heat up.



Opening the oven door during operation

Operation is suspended. After closing the door, touch the  key. Operation continues.

Pausing operation

 

Touch the  key to pause operation. Then touch the  key to continue operation.

Changing the cooking time


This can be done at any time. Touch the  key. Turn the  knob to change the cooking time.

Changing the temperature

This can be done at any time.

Touch the  key for the new temperature setting. Turn the  knob to set the temperature.

Cancelling operation

This can be done at any time. Touch the  key to enter into the off state.

Rapid Preheating

With rapid preheating, your oven reaches the set temperature particularly quickly.

Rapid Preheating is available for the following types of heating:

- 3D Hot air
- Grill with fan
- Microwave+Hot air
- Microwave+Grill Fan
- Pizza setting
- Microwave+Pizza

To ensure an oven cooking result, only put your food in the cooking compartment when the preheating phase is complete.

1. Set the type of heating and temperature.
2. Touch the key.
The symbol lights up in the display.
3. Touch the key.
The oven begins to heat up.

The preheating process is complete

A signal sounds. The symbol in the display blinks. Put your dish in the oven.

Cancelling rapid preheating

During setting the rapid preheating function, touch the key can cancel the function.

During rapid preheating, touch the or the can cancel the function. Also you can open the door to cancel the function.

- Note:**
1. The rapid preheating function only works if you have already chosen one of the modes above. During preheating, the microwave function is switched off.
 2. Only when you can hear alarm and preheating icon is blinking you can open the door and put food inside.

The microwave

Microwaves are converted to heat in foodstuffs. The microwave can be used solo, i.e. on its own, or in combination with a different type of heating. You will find information about ovenware and how to set the microwave.

Note:

In the Expert Cooking Guide, you will find examples for defrosting, heating and cooking with the microwave oven.

Note:

The step quantities for the adjustment time of the coding switch are as follow:

| | | |
|-----------|---|-----------|
| 0-1 min | : | 1second |
| 1-5 min | : | 10seconds |
| 5-15 min | : | 30seconds |
| 15-60 min | : | 1minute |
| 60 min | : | 5minutes |

Notes regarding ovenware

Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: metal – e.g. a spoon in a glass – must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

1. Heat the empty ovenware at maximum power for ½ to 1 minute.
2. Check the temperature occasionally during that time.

The ovenware should still be cold or warm to the touch.

The ovenware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the key to set the desired microwave power.




 


| | |
|-------|---|
| 100W | -Defrosting sensitive/delicate foods -Defrosting irregularly-shaped foods -Softening ice cream -Allowing dough to rise |
| 300 W | -Defrosting -Melting chocolate and butter |
| 450 W | -Cooking rice, soup |
| 700 W | -Reheating -Cooking mushrooms, shell fish -Cooking dishes containing eggs and cheese |
| 900 W | -Boiling water, reheating -Cooking chicken, fish, vegetables |

Notes

- When you touch a key, the selected power lights up.
- The microwave power can be set to 900 watts for a maximum of 30 minutes. With all other power settings a maximum cooking time of 1 hour 30 minutes is possible.

Setting the microwave

Example: Microwave power setting 300 W, cooking time 17 minutes


1. In the off state, touch the  key to enter microwave function. The default microwave power 900W will appear. And the default cooking time will blink.
2. Touch the  key to activate the microwave power. Turn the  knob to adjust the microwave power to 300W.
3. Touch the  key. Turn the  knob to adjust the cooking time to 17 minutes.
4. Touch the  key.

Operation begins. The cooking time starts counting down in the display.



The cooking time has elapsed

A signal sounds. Microwave operation has finished.

Opening the oven door during operation



Operation is suspended. After closing the door, touch the  key. Operation continues.

Changing the cooking time

 

This can be done at any time. Touch the  key. Turn the  knob to change the cooking time.

Changing the microwave power setting


This can be done at any time.

Touch the  key for the new microwave power setting. Turn the  knob to set the microwave power.


Pausing operation

Touch the  key briefly. The oven is paused. Touch the  key again to continue operation.

Cancelling operation

This can be done at any time. Touch the  key to enter into the off state.

Notes

- When you set the function selector to , the highest microwave power setting always lights up as the suggested setting.
- If you open the appliance door during cooking, the fan may continue to run.












MicroCombi operation

This involves simultaneous operation of the grill and the microwave. Using the microwave makes your dishes ready more quickly, but they are still nicely browned.

You can switch on all microwave power settings. Exception: 900 watts

Setting Microwave Combi operation

Example: microwave 100 W, 17 minutes and hot air  190 °C.


1. Turn the  knob to . Turn the  knob to .
2. Touch the  key. The default temperature 180 °C will blink. Turn the  knob to set the temperature to 190°C.
3. The default microwave power is 300W. Touch the  key. Turn the  knob to set the microwave power to 100W.
4. Touch the  key. Turn the  knob to set the cooking time to 17 minutes.
5. Touch the  key.

Appliance operation begins. The cooking time starts counting down.

 

The cooking time has elapsed

A signal sounds. Combination mode has finished.


 
Opening the oven door during cooking

Operation is suspended. After closing the door, touch the  key briefly. The programme will then continue.

Pausing operation



Touch the  key briefly. The oven is paused. Touch the  key again to continue operation.

Changing the cooking time

This can be done at any time. Touch the  key. Turn the  knob to change the cooking time.

 

Changing the microwave power setting

This can be done at any time.


Touch the  key for the new microwave power setting. Turn the  knob to set the microwave power.

Changing the temperature

This can be done at any time.

Touch the  key for the new temperature setting. Turn the  knob to set the temperature

Cancelling operation

This can be done at any time. Touch the  key to enter into the off state.

Automatic programmes

The automatic programmes enable you to prepare food very easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can choose from 13 programmes.



Always place the food in the cold cooking compartment.


Setting a programme


When you have selected a programme, set the oven. The temperature selector must be in the off position.

 
Example : Programme 3 with a weight of 1 kilogram.

1. Set the function selector  to automatic programmes . The first programme number appears in the display.

2. Touch the  key. Turn the  knob to select the programme number.

3. Touch the  key.

4. Turn the  knob to set the weight, cooking time will shown.

5. Touch the  key. The programme starts. You can see the cooking time counting down.

Auto Menu

| Programme no. | Category | Item |
|---------------|--------------|--|
| P 01** | Vegetables | Fresh vegetables |
| P 02** | Side dishes | Potatoes-peeled/cooked |
| P 03* | Side dishes | Potatoes-roasted <small>If you hear a beep, turn the food. The combi microwave oven starts the next face automatically.</small> |
| P 04 | Poultry/Fish | Chicken pieces <small>If you hear a beep, turn the food. The combi microwave oven starts the next face automatically.</small> |
| P 05* | Bakery | Cake |
| P 06* | Bakery | Apple pie |
| P 07* | Bakery | quiche |
| P 08** | Reheat | Drink/soup |
| P 09** | Reheat | Plated meal |
| P 10** | Reheat | Sauce/stew/dish |
| P 11* | Convenience | Frozen-Pizza |
| P 12* | Convenience | Oven chips <small>If you hear a beep, turn the food. The combi microwave oven starts the next face automatically.</small> |
| P 13* | Convenience | Lasagna |

Notes

- The programmes with a * are preheated. During preheating, the cooking time pauses and the preheating symbol is on. After preheating, you will hear an alarm and the preheating symbol will blink.
- The programmes with ** only use the microwave function.


Programme has ended

A signal sounds. The oven stops heating.

Changing the programme

Once you have started the programme, the programme number and weight cannot be changed.

Cancelling the programme







This can be done at any time. Touch the  key to enter into the off state.

Changing the cooking time

If using automatic programmes, you cannot change the cooking time.

Defrosting programmes

You can use the 2 defrosting programmes to defrost meat, poultry and bread.

1. Set the function selector  to automatic programmes  . The first programme number blinks in the display.
2. Turn the  knob to select the programme number.
3. Touch the  key.
4. Turn the  knob to set the weight, cooking time will shown.
5. Touch the  key. The programme starts. You can see the cooking time counting down.



Notes

- **Preparing food**
Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible.
Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.
- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.
- **Ovenware**
Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.
- When defrosting chicken and chicken portions (d 01), an audible signal will sound on two occasions to indicate that the food should be turned.
- **Resting time**
The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand.
After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

| Programme no. | Defrost | Weight range in kg |
|---------------|------------------------|--------------------|
| d 01* | meat, poultry and fish | 0.20 - 1.00 |
| d 02* | bread, cake and fruit | 0.10 - 0.50 |

*During defrosting, place the food on the Lower wire rack

Setting the time-setting options

Your oven has various time-setting options. You can use the  key to call up the menu and switch between the individual functions. A time-setting option that has already been set can be changed directly with the  knob.

Setting the cooking time

The cooking time for your meal can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be accidentally exceeded.



The oven starts. The cooking time counts down in the display.

The cooking time has elapsed



An audible signal sounds. The oven stops heating.

Setting the clock

Once the appliance is connected, "00:00" will blink, buzzer will ring once. Set the clock.

1. Turn the  knob between 00:00 and 23:59.
2. Touch the  key.
The time is set.

Changing the clock

1. Touch and hold the  key for 3 seconds in waiting state. The actual time disappear and then the time will blink in the display.
2. Turn the right knob to set the new time and touch the  key to confirm the setting.

Childproof lock

 
The oven has a childproof lock to prevent children switching it on accidentally.

The oven will not react to any settings. The timer and clock can also be set when the childproof lock has been switched on.

Switching on the childproof lock

 
Requirement: No cooking time should be set and the function selector is in the off position.

Touch and hold the  and  keys for approx. 3 seconds.

The  symbol appears in the display. The childproof lock is activated.

Switching off the childproof lock

Touch and hold the  and  keys for approx. 3 seconds.

The  symbol on the display goes out. The childproof lock is deactivated.

Childproof lock with other cooking operations

When other cooking programmes have been set, the childproof lock is not operational.

Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

⚠ Risk of electric shock.!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

⚠ Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

⚠ Risk of serious damage to health!

Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.

Notes

- Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Unpleasant odours, e.g. after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Place a spoon into the container as well, to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave power.

Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal,
- hard scouring pads and sponges,
- cleaning agents with high concentrations of alcohol.

Wash new sponge cloths thoroughly before use.

Allow all surfaces to dry thoroughly before using the appliance again.

| Area | Cleaning agents |
|--------------------------------------|---|
| Appliance front | Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning. |
| Appliance front with stainless steel | Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning. |
| Cooking compartment | Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth. If the oven is very dirty: Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly. |
| Recess in cooking compartment | Damp cloth: Ensure that no water seeps through the turntable drive into the appliance interior. |
| Wire racks | Hot soapy water: Clean using stainless steel cleaning agent or in the dishwasher. |
| Door panels | Glass cleaner: Clean with a dish cloth. Do not use a glass scraper. |
| Seal | Hot soapy water: Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning. |

Technical data

| | |
|-------------------------------|------------|
| Model | CAMC45B |
| Rated Voltage | 240V~ 50Hz |
| Rated Output Power(Microwave) | 900W |
| Rated Input Power(Microwave) | 1650W |
| Rated Input Power(Grill) | 1750W |
| Rated Input Power(Convection) | 1750W |

Malfunction table


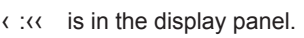
Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not turn out exactly as you wanted, refer to the Expert Cooking Guide section, where you will find plenty of cooking tips and tricks.

Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

Malfunction table

| Problem | Possible cause | Remedy/information |
|--|---|--|
| The appliance does not work. | Faulty circuit breaker. | Look in the fuse box and check that the circuit breaker for the appliance is in working order. |
| | Plug not plugged in. | Plug in the plug. |
| | Power cut | Check whether the kitchen light works. |
| The appliance does not work.  appears in the display panel. | Childproof lock is active. | Deactivate the childproof lock (see section: Childproof lock). |
|  is in the display panel. | Power cut | Reset the clock. |
| The microwave does not switch on. | Door not fully closed. | Check whether food residue or debris is trapped in the door. |
| It takes longer than before for the food to heat up in the microwave | The selected microwave power level is too low. | Select a higher power level. |
| | A larger amount than usual has been placed in the appliance. | Double the amount = almost double the cooking time. |
| | The food was colder than usual. | Stir or turn the food during cooking. |
| Turntable grates or grinds. | Dirt or debris in the area around the turntable drive. | Clean the rollers under the turntable and the recess in the oven floor thoroughly. |
| A particular operating mode or power level cannot be set. | The temperature, power level or combined setting is not possible for this operating mode. | Choose permitted settings. |
| “ , ” appears in the display panel. | The thermal safety switch-off function has been activated. | Call the after-sales service. |
| “ ... ” appears in the display panel. | The thermal safety switch-off function has been activated. | Call the after-sales service. |
| “ , , ” appears in the display panel. | Moisture in the control panel. | Allow the control panel to dry. |
| “ , ^ ” appears in the display panel. | Rapid heating has failed. | Call the after-sales service. |

Acrylamide in foodstuffs

Which foods are affected?

Acrylamide is mainly produced in grain and potato products that are heated to high temperatures, such as potato crisps, chips,

toast, bread rolls, bread, fine baked goods (biscuits, gingerbread, cookies).

Tips for keeping acrylamide to a minimum when preparing food

| | |
|-------------------------------|--|
| General | Keep cooking times to a minimum. Cook meals until they are golden brown, but not too dark. Large, thick pieces of food contain less acrylamide. |
| Baking biscuits Oven chips | Max. 200 °C in Top/bottom heating or max. 180 °C in 3D hot air or hot air mode. Max. 190 °C in Top/bottom heating or max. 170 °C in 3D hot air or hot air mode. Egg white and egg yolk reduce the formation of acrylamide. Distribute thinly and evenly over the baking tray. Cook at least 400 g at once on a baking tray so that the chips do not dry out. |

Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

Saving energy

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.
- Open the oven door as infrequently as possible while you are cooking, baking or roasting.
- It is best to bake several cakes one after the other. The oven is still warm. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.

- For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance complies with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). The directive gives a framework for the collection and recycling of old appliances, which is valid across the EU.

Expert Cooking Guide

Here you will find a selection of recipes and the ideal settings for them. We will show you which type of heating and which temperature or microwave power setting is best for your meal. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about ovenware and preparation methods.

Notes

- The values in the table always apply to food placed into the cooking compartment when it is cold and empty. Only preheat the appliance if the table specifies that you should do so. Before using the appliance, remove all accessories from the cooking compartment that you will not be using.
- Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are only guidelines. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained from specialist retailers or from the after-sales service.
- Always use an oven cloth or oven gloves when taking accessories or ovenware out of the cooking compartment.

Defrosting, heating up and cooking with the microwave

The following tables provide you with numerous options and settings for the microwave.

| Defrost | Weight | Microwave power setting in watts, cooking time in minutes | Notes |
|--|--------|---|---|
| Whole pieces of meat (beef, veal or pork - on the bone or boned) | 800 g | 300 W, 15 mins + 100 W, 10-20 mins | Turn several times |
| | 1 kg | 300 W, 20 mins + 100 W, 15-25 mins | |
| | 1.5 kg | 300 W, 30 mins + 100 W, 20-30 mins | |
| Meat in pieces or slices of beef, veal or pork | 200 g | 300 W, 3 mins + 100 W, 10-15 mins | Separate any defrosted parts when turning |
| | 500 g | 300 W, 5 mins + 100 W, 15-20 mins | |
| | 800 g | 300 W, 8 mins + 100 W, 15-20 mins | |
| Minced meat, mixed | 200 g | 100 W, 10-15 mins | Freeze food flat if possible Turn several times, remove any defrosted meat |
| | 500 g | 300 W, 5 mins + 100 W, 10-15 mins | |
| | 800 g | 300 W, 8 mins + 100 W, 15-20 mins | |
| Poultry or poultry portions | 600 g | 300 W, 8 mins + 100 W, 10-15 mins | Turn during cooking. |
| | 1.2 kg | 300 W, 15 mins + 100 W, 25-30 mins | |
| Duck | 2 kg | 300 W, 20 mins + 100 W, 30-40 mins | Turn several times |

The times specified in the tables are only guidelines. They may vary according to the ovenware used, the quality, temperature and consistency of the food.

Time ranges are often specified in the tables. Set the shortest time first and then extend the time if necessary.

It may be that you have different quantities from those specified in the tables. A rule of thumb can be applied: Double amount - just under double the cooking time, half amount - half the cooking time.

Defrosting

Notes

- Place the frozen food in an open container on the lower wire rack.
- Delicate parts such as the legs and wings of chicken or fatty outer layers of roasts can be covered with small pieces of aluminium foil. The foil must not touch the cooking compartment walls. You can remove the foil half way through the defrosting time.
- Turn or stir the food once or twice during the defrosting time. Large pieces of food should be turned several times. When turning, remove any liquid that has resulted from defrosting.
- Leave defrosted items to stand at room temperature for a further 10 to 60 minutes so that the temperature can stabilise. The giblets can be removed from poultry at this point.

| Defrost | Weight | Microwave power setting in watts, cooking time in minutes | Notes |
|---|--------|---|---|
| Fish fillet, fish steak or slices | 400 g | 300 W, 5 mins + 100 W, 10-15 mins | Separate any defrosted parts |
| Whole fish | 300 g | 300 W, 3 mins + 100 W, 10-15 mins | - |
| | 600 g | 300 W, 8 mins + 100 W, 10-15 mins | |
| Vegetables, e.g. peas | 300 g | 300 W, 10-15 mins | Stir carefully during defrosting. |
| | 600 g | 300 W, 10 mins + 100 W, 10-15 mins | |
| Fruit, e.g. raspberries | 300 g | 300 W, 7-10 mins | Stir carefully during defrosting and separate any defrosted parts |
| | 500 g | 300 W, 8 mins + 100 W, 5-10 mins | |
| Butter, defrosting | 125 g | 300 W, 1 mins + 100 W, 2-4 mins | Remove all packaging |
| | 250 g | 300 W, 1 min + 100 W, 2-4 mins | |
| Loaf of bread | 500 g | 300 W, 6 mins + 100 W, 5-10 mins | Turn during cooking. |
| | 1 kg | 300 W, 12 mins + 100 W, 15-25 mins | |
| Cakes, dry, e.g. sponge cake | 500 g | 100 W, 15-20 mins | Only for cakes without icing, cream or crème pâtissière, separate the pieces of cake. |
| | 750 g | 300 W, 5 mins + 100 W, 10-15 mins | |
| Cakes, moist, e.g. fruit flan, cheesecake | 500 g | 300 W, 5 mins + 100 W, 10-15 mins | Only for cakes without icing, cream or gelatine |
| | 750 g | 300 W, 7 mins + 100 W, 10-15 mins | |

- Place the food directly on the turntable.

Defrosting, heating up or cooking frozen food

Notes

- Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up.
- Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.

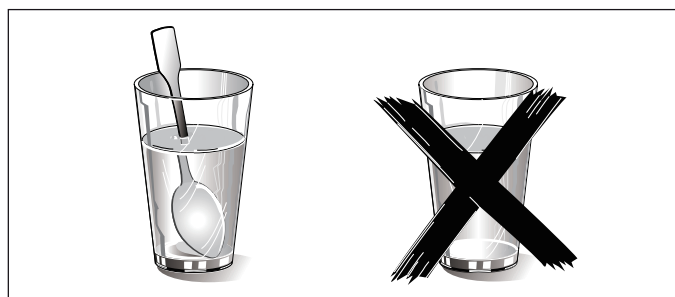
- Always cover the food. If you do not have a suitable cover for your ovenware, use a plate or special microwave foil.
- Stir or turn the food 2 or 3 times during cooking.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.
- This will help the food retain its own distinct taste, so it will require less seasoning.

| Defrosting, heating up or cooking frozen food | Weight | Microwave power setting in watts, cooking time in minutes | Notes |
|---|-----------|---|--|
| Menu, plated meal, ready meal | 300-400 g | 700 W, 10-15 mins | Take meal out of packaging; cover food to heat |
| Soup | 400-500 g | 700 W, 8-10 mins | Ovenware with lid |
| Stews | 500 g | 700 W, 10-15 mins | Ovenware with lid |
| | 1 kg | 700 W, 20-25 mins | |
| Slices or pieces of meat in sauce, e.g. goulash | 500 g | 700 W, 15-20 mins | Ovenware with lid |
| | 1 kg | 700 W, 25-30 mins | |
| Fish, e.g. fillet steaks | 400 g | 700 W, 10-15 mins | Covered |
| | 800 g | 700 W, 18-20 mins | |
| Side dishes, e.g. rice, pasta | 250 g | 700 W, 2-5 mins | Ovenware with lid; add liquid |
| | 500 g | 700 W, 8-10 mins | |
| Vegetables, e.g. peas, broccoli, carrots | 300 g | 700 W, 8-10 mins | Ovenware with lid; add 1 tbsp of water |
| | 600 g | 700 W, 15-20 mins | |
| Creamed spinach | 450 g | 700 W, 11-16 mins | Cook without additional water |

Heating food

Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only moves a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the container. This will prevent delayed boiling.



Caution!

Metal e.g. a spoon in a glass must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.

Notes

- Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up .

- Always cover the food. If you do not have a suitable cover for your container, use a plate or special microwave foil.
- Stir or turn the food several times during the heating time. Check the temperature.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.
- Place the food directly on the turntable.

| Heating food | Weight | Microwave power setting in watts, cooking time in minutes | Notes |
|---|------------|---|---|
| Menu, plated meal, ready meal | 350-500 g | 700 W, 5-10 mins | Take meal out of packaging, cover food to heat |
| Drinks | 150 ml | 900 W, 1-2 mins | Caution! Place a spoon in the glass. Do not overheat alcoholic drinks. Check during heating |
| | 300 ml | 900 W, 2-3 mins | |
| | 500 ml | 900 W, 3-4 mins | |
| Baby food, e.g. baby bottle | 50 ml | 300 W, approx. 1 min | Place baby bottles on the cooking compartment floor without the teat or lid. Shake or stir well after heating. You must check the temperature |
| | 100 ml | 300 W, 1-2 mins | |
| | 200 ml | 300 W, 2-3 mins | |
| Soup | | | - |
| 1 cup | 175 g | 900 W, 2-3 mins | |
| 2 cups | 175 g each | 900 W, 4-5 mins | |
| 4 cups | 175 g each | 900 W, 5-6 mins | |
| Slices or pieces of meat in sauce, e.g. goulash | 500 g | 700 W, 10-15 mins | Covered |
| Stew | 400 g | 700 W, 5-10 mins | Ovenware with lid |
| | 800 g | 700 W, 10-15 mins | |
| Vegetables | 150 g | 700 W, 2-3 mins | Add a little liquid |
| | 300 g | 700 W, 3-5 mins | |

Cooking food**Notes**

- Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.
- Place the food directly on the turntable.

- Cook the food in ovenware with a lid. If you do not have a suitable lid for your ovenware, use a plate or special microwave foil.
- This will help the food retain its own distinct taste, so it will require less seasoning.
- After cooking, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.

| Cooking food | Weight | Microwave power in watts, Cooking time in minutes | Notes |
|--|--------|---|---|
| Whole chicken, fresh, no giblets | 1.5 kg | 700 W, 30-35 mins | Turn halfway through the cooking time |
| Fish fillet, fresh | 400 g | 700 W, 5-10 mins | - |
| Fresh vegetables | 250 g | 700 W, 5-10 mins | Cut into equal-sized pieces; add 1 to 2 tbsp water per 100 g; stir during cooking |
| | 500 g | 700 W, 10-15 mins | |
| Potatoes | 250 g | 700 W, 8-10 mins | Cut into equal-sized pieces; add 1 to 2 tbsp water per 100 g; stir during cooking |
| | 500 g | 700 W, 11-14 mins | |
| | 750 g | 700 W, 15-22 mins | |
| Rice | 125 g | 700 W, 7-9 mins+ 300 W, 15-20 mins | Add double the quantity of liquid and use deep ovenware with a lid |
| | 250 g | 700 W, 10-12 mins + 300 W, 20-25 mins | |
| Sweet foods, e.g. blancmange (instant) | 500 ml | 700 W, 7-9 mins | Stir 2 to 3 times with an egg whisk while heating |
| Fruit, compote | 500 g | 700 W, 9-12 mins | - |

Popcorn for the microwave

Notes

- Use heat-resistant, flat glass ovenware, e.g. the lid of an ovenproof dish, a glass plate or a glass tray (Pyrex)
- Always place the ovenware on the wire rack.
- Do not use porcelain or overly curved plates.

- Make the settings as described in the table. You can adjust the timings according to product and amount.
- So that the popcorn doesn't burn, briefly take the popcorn bag out of the oven after 1 minute and 30 seconds and shake it. Take care as the bag will be hot!

Risk of scalding!

- Open the popcorn bag carefully as hot steam may be released.
- Never set the microwave to full power.

| | Weight | Accessories | Microwave power in watts, Cooking time in minutes |
|---------------------------|--------------|-------------|---|
| Popcorn for the microwave | 1 bag, 100 g | Ovenware | 700 W, 3-5 mins |

Microwave tips

You cannot find any information about the settings for the quantity of food you have prepared.

Increase or reduce the cooking times using the following rule of thumb:

Double the amount = almost double the cooking time

Half the amount = half the cooking time

The food has become too dry.

Next time, set a shorter cooking time or select a lower microwave power setting. Cover the food and add more liquid.

When the time has elapsed, the food is not defrosted, hot or cooked.

Set a longer time. Large quantities and food which is piled high require longer times.

When the time has elapsed, the food is overheated at the edge but not done in the middle.

Stir it during the cooking time and next time, select a lower microwave power setting and a longer cooking time.

After defrosting, the poultry or meat is defrosted on the outside but not defrosted in the middle.

Next time, select a lower microwave power setting. If you are defrosting a large quantity, turn it several times.

Cakes and pastries

About the tables

Notes





 









- The times given apply to food placed in a cold oven.
- The temperature and baking time depend on the consistency and amount of the mixture. This is why temperature ranges are given in the tables. Begin with the lower temperature and, if necessary, use a higher setting the next time, since a lower

temperature results in more even browning.

- Additional information can be found in the *Baking tips* section following the tables.
- **Always place the cake tin in the centre of the lower wire rack. But the food with ** should be placed in the turntable.**





Baking tins

Note: It is best to use dark-coloured metal baking tins.



 


 

| Baking in tins | Accessories | Type of heating | Temperature °C | Microwave power in watts | Cooking time in minutes |
|---|--------------------------|---|----------------|--------------------------|-------------------------|
| Sponge cake, simple | Ring tin/cake tin |  | 170-180 | 100 | 40-50 |
| Sponge cake, delicate (e.g. sandcake)* | Ring tin/cake tin |  | 150-170 | - | 70-90 |
| Sponge flan base | Flan-base cake tin |  | 160-180 | - | 30-40 |
| Delicate fruit flan, sponge | Springform/ring tin |  | 170-180 | 100 | 35-45 |
| Sponge base, 2 eggs | Flan-base cake tin |  | 160-170 | - | 20-25 |
| Sponge flan, 6 eggs | Dark springform cake tin |  | 170-180 | - | 35-45 |
| Shortcrust pastry base with crust | Dark springform cake tin |  | 170-190 | - | 30-40 |
| Fruit tart/cheesecake with pastry base* | Dark springform cake tin |  | 170-190 | 100 | 35-45 |
| Swiss flan** | Dark springform cake tin |  | 190-200 | - | 45-55 |
| Ring cake | Ring cake tin |  | 170-180 | - | 40-50 |
| Pizza, thin base, light topping** | Round pizza tray |  | 220-230 | - | 15-25 |
| Savoury cakes** | Dark springform cake tin |  | 200-220 | - | 50-60 |
| Nut cake | Dark springform cake tin |  | 170-180 | 100 | 35-45 |
| Yeast dough with dry topping | Round pizza tray |  | 160-180 | - | 50-60 |



 

* Allow cake to cool in the oven for approx. 20 minutes.

** the food should be placed in the turntable

| Baking in tins | Accessories | Type of heating | Temperature °C | Microwave power in watts | Cooking time in minutes |
|--------------------------------|------------------|---|----------------|--------------------------|-------------------------|
| Yeast dough with moist topping | Round pizza tray |  | 170-190 | - | 55-65 |
| Plaited loaf with 500 g flour | Round pizza tray |  | 170-190 | - | 35-45 |
| Stollen with 500 g flour | Round pizza tray |  | 160-180 | - | 60-70 |
| Strudel, sweet | Round pizza tray |  | 190-210 | 100 | 35-45 |

* Allow cake to cool in the oven for approx. 20 minutes.

| Small baked items | Accessories | Type of heating | Temperature in °C | Cooking time in minutes |
|-------------------|--------------------------|---|-------------------|-------------------------|
| Biscuits | Round pizza tray |  | 150-170 | 25-35 |
| Macaroons | Round pizza tray |  | 110-130 | 35-45 |
| Meringue | Round pizza tray |  | 100 | 80-100 |
| Muffins | Muffin tray on wire rack |  | 160-180 | 35-40 |
| Choux pastry | Round pizza tray |  | 200-220 | 35-45 |
| Puff pastry | Round pizza tray |  | 190-200 | 35-45 |
| Leavened cake | Round pizza tray |  | 200-220 | 25-35 |

| Bread and bread rolls | Accessories | Type of heating | Temperature in °C | Cooking time in minutes |
|-----------------------------------|------------------|---|-------------------|-------------------------|
| Sourdough bread with 1.2 kg flour | Round pizza tray |  | 210-230 | 50-60 |
| Flatbread | Round pizza tray |  | 220-230 | 25-35 |
| Bread rolls | Round pizza tray |  | 210-230 | 25-35 |
| Rolls made with sweet yeast dough | Round pizza tray |  | 200-220 | 15-25 |

Baking tips

| | |
|---|--|
| You want to bake according to your own recipe. | Use similar items in the baking tables as a guide. |
| Use baking tins made of silicone, glass, plastic or ceramic materials. | The baking tin must be heat-resistant up to 250 °C. Cakes in the se baking tins will be less brown. When using the microwave, the cooking time will be shorter than the time shown in the table. |
| How to establish whether sponge cake is baked through. | Approximately 10 minutes before the end of the baking time specified in the recipe, poke the cake with a cocktail stick at its highest point. If the cocktail stick comes out clean, the cake is ready. |
| The cake collapses. | Use less liquid next time or set the oven temperature 10 degrees lower and extend the baking time. Observe the specified mixing times in the recipe. |
| The cake has risen in the middle but is lower around the edge. | Only grease the base of the springform cake tin. After baking, loosen the cake carefully with a knife. |
| The cake is too dark. | Select a lower temperature and bake the cake for a little longer. |
| The cake is too dry. | When it is done, make small holes in the cake using a toothpick. Then drizzle fruit juice or an alcoholic beverage over it. Next time, select a temperature 10 degrees higher and reduce the baking time. |
| The bread or cake (e.g. cheesecake) looks good, but is soggy on the inside (sticky, streaked with water). | Use slightly less fluid next time and bake for slightly longer at a lower temperature. When baking cakes with a moist topping, bake the base first, cover with almonds or bread crumbs and then add the topping. Please follow the recipe and follow the baking times. |
| The cake cannot be turned out of the dish when it is turned upside down. | After baking, allow the cake to cool for a further 5 to 10 minutes, then it will be easier to turn out of the tin. If it still sticks, carefully loosen the cake around the edges using a knife. Turn the cake tin upside down again and cover it several times with a cold, wet cloth. Next time, grease the tin well and sprinkle some bread crumbs into it. |
| You have measured the temperature of the oven using your own meat thermometer and found there is a discrepancy. | The oven temperature is measured by the manufacturer after a specified period of time using a test rack in the centre of the cooking compartment. Ovenware and accessories affect the temperature measurement, so there will always be some discrepancy when you measure the temperature yourself. |
| Sparks are generated between the tin and the wire rack. | Check that the tin is clean on the outside. Change the position of the tin in the cooking compartment. If this does not help, continue baking but without the microwave. The baking time will then be longer. |

Roasting and grilling

About the tables

The temperature and roasting time depend on the type and amount of food being cooked. This is why temperature ranges are given in the tables. Begin with the lower temperature and, if necessary, use a higher setting the next time.

For more information, see the section entitled *Tips for grilling and roasting* which follows the tables.

Ovenware

You may use any heatresistant ovenware which is suitable for use in a microwave. Metal roasting dishes are not suitable for roasting with microwaves.

The ovenware can become very hot. Use oven gloves to take the ovenware out of the oven.

Place hot glass ovenware on a dry kitchen towel after they have been removed from the oven. The glass could crack if placed on a cold or wet surface.

Tips for roasting

Notes

- Use a deep roasting dish for roasting meat and poultry.
- Check that your ovenware fits in the cooking compartment. It should not be too big.
- Meat:
Cover approx. two thirds of the ovenware base with liquid. Add slightly more liquid for pot roasts. Turn pieces of meat halfway through the cooking time. When the roast is ready, turn off the

oven and allow it to rest for an additional 10 minutes. This allows better distribution of the meat juices.

- Poultry:
Turn the pieces of meat after Z of the cooking time has elapsed.

Tips for grilling





Notes

- Always keep the oven door closed when grilling and do not preheat.
- As far as possible, the pieces of food you are grilling should be of equal thickness. Steaks should be at least 2 to 3 cm thick. This will allow them to brown evenly and remain succulent and juicy. Do not add salt to steaks until they have been grilled.
- Use tongs to turn the pieces of food you are grilling. If you pierce the meat with a fork, the juices will run out and it will become dry.
- Dark meat, e.g. beef, browns more quickly than lighter-coloured meat such as veal or pork. When grilling light-coloured meat or fish, these often only brown slightly on the surface, although they are cooked and juicy on the inside.
- The grill element switches off and on again automatically. This is normal. The grill setting determines how frequently this will happen.

Beef

Notes

- Turn pot-roasted beef after Y and Z of the cooking time. Finally, allow to stand for approx. a further 10 minutes.
- Turn tenderloins and sirloins halfway through the cooking time. Finally, allow to stand for approx. a further 10 minutes.
- Turn steaks after Z of the cooking time.



| Beef | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|---------------------------------------|----------------------|---|----------------------------------|--------------------------|-------------------------|
| Pot-roasted beef, approx. 1 kg* | Ovenware with lid |  | 180-200 | - | 120-143 |
| Fillet of beef, medium, approx. 1 kg* | Ovenware without lid |  | 180-200 | 100 | 30-40 |
| Sirloin, medium, approx. 1 kg* | Ovenware without lid |  | 210-230 | 100 | 30-40 |
| Steak, medium, 3 cm thick** | Higher wire rack |  | 3 | - | each side: 10-15 |

* Lower wire rack

** Higher wire rack

Veal

Note: Turn joints and knuckle of veal halfway through the cooking time. Finally, allow to stand for approx. a further 10 minutes.

| Veal | Accessories | Type of heating | Temperature °C | Microwave power in watts | Cooking time in minutes |
|----------------------------------|-------------------|---|----------------|--------------------------|-------------------------|
| Joint of veal, approx. 1 kg* | Ovenware with lid |  | 180-200 | - | 110-130 |
| Knuckle of veal, approx. 1.5 kg* | Ovenware with lid |  | 200-220 | - | 120-130 |

* Lower wire rack

Pork

Notes

- Turn lean joints of pork and rindless joints halfway through the cooking time. Finally, allow to stand for approx. a further 10 minutes.
- Place the joint in the ovenware rind-side up. Score the rind. Do not turn the joint. Finally, allow to stand for approx. a further 10 minutes.
- Do not turn pork fillets or pork chops. Finally, allow to stand for approx. a further 5 minutes.
- Turn the neck of pork after Z of the cooking time.

| Pork | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|---|----------------------|-----------------|----------------------------------|--------------------------|--|
| Joint without rind (e.g. neck), approx. 750 g* | Ovenware with lid | ☉ | 220-230 | 100 | 40-50 |
| Joint with rind (e.g. shoulder) approx. 1.5 kg* | Ovenware without lid | ☉ | 190-210 | - | 130-150 |
| Fillet of pork, approx. 500 g* | Ovenware with lid | ☉ | 220-230 | 100 | 25-30 |
| Joint of pork, lean, approx. 1 kg* | Ovenware with lid | ☉ | 210-230 | 100 | 60-80 |
| Smoked pork on the bone, approx. 1 kg* | Ovenware without lid | - | - | 300 | 45-50 |
| Neck of pork, 2 cm thick** | | ☐ | 3 | - | 1st side: approx. 15-20 2nd side: approx. 10-15 |

* Lower wire rack
** Higher wire rack

Lamb

Note: Turn the leg of lamb halfway through the cooking time.

| Lamb | Accessories | Type of heating | Temperature °C | Microwave power in watts | Cooking time in minutes |
|---|----------------------|-----------------|----------------|--------------------------|-------------------------|
| Saddle of lamb on the bone, approx. 1 kg* | Ovenware without lid | ☉ | 210-230 | - | 40-50 |
| Leg of lamb, boned, medium, approx. 1.5 kg* | Ovenware with lid | ☉ | 190-210 | - | 90-95 |

* lower wire rack

Miscellaneous

Notes

- Finally, allow the meat loaf to stand for approx. a further 10 minutes.
- Turn the sausages after Z of the cooking time.

| Miscellaneous | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|---|----------------------|-----------------|----------------------------------|--------------------------|-------------------------|
| Meat loaf, approx. 1 kg* | Ovenware without lid | ☉ | 180-200 | 700 W + 100 W | - |
| 4 to 6 sausages for grilling approx. 150 g each** | - | ☐ | 3 | - | each side: 10-15 |

* lower wire rack
**higher wire rack

Poultry

Notes

- Place whole chickens and chicken breasts breast-side down. Turn after Z of the cooking time.
- Place poulard breast-side down. Turn after 30 minutes and set the microwave power to 180 watts.
- Place half chickens and chicken portions skin-side up. Do not turn.
- Turn the duck and goose breast skin-side up. Do not turn.
- Turn goose thighs halfway through the cooking time. Prick the skin.
- Place turkey breast and thighs skin-side down. Turn after Z of the cooking time.

| Poultry | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|--|----------------------|-----------------|----------------------------------|--------------------------|-------------------------|
| Chicken, whole, approx. 1.2 kg* | Ovenware with lid | ☉ | 220-230 | 300 | 35-45 |
| Poulard, whole, approx. 1.6 kg* | Ovenware with lid | ☉ | 220-230 | 300 100 | 30 20-30 |
| Chicken, halves, 500 g each* | Ovenware without lid | ☉ | 180-200 | 300 | 30-35 |
| Chicken portions, approx. 800 g* | Ovenware without lid | ☉ | 210-230 | 300 | 20-30 |
| Chicken breast with skin and bones, 2 pieces, approx. 350-450 g* | Ovenware without lid | ☉ | 190-210 | 100 | 30-40 |

| Poultry | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|---|----------------------|-----------------|----------------------------------|--------------------------|-------------------------|
| Duck breast with skin, 2 pieces, 300-400 g each** | Ovenware without lid | ☐ | 3 | 100 | 20-30 |
| Goose breast, 2 pieces, 500 g each* | Ovenware without lid | ☒ | 210-230 | 100 | 25-30 |
| Goose legs, 4 pieces, approx. 1.5 kg* | Ovenware without lid | ☒ | 210-230 | 100 | 30-40 |
| Turkey breast, approx. 1 kg* | Ovenware with lid | ☒ | 200-220 | - | 90-100 |
| Turkey drumsticks, approx. 1.3 kg* | Ovenware with lid | ☒ | 200-220 | 100 | 50-60 |

* lower wire rack

**higher wire rack

Fish

Notes

- For grilling, place the whole fish, e.g. trout, onto the middle of the higher wire rack.
- Grease the wire rack with oil beforehand.

| Fish | Accessories | Type of heating | Temperature °C | Cooking time in minutes |
|--|------------------|-----------------|----------------|-------------------------|
| Fish steak, e.g. salmon, 3 cm thick, grilled | Higher wire rack | ☐ | 3 | 20-25 |
| Whole fish, 23 pieces, 300 g each, grilled | Higher wire rack | ☐ | 3 | 20-30 |

Tips for roasting and grilling

| | |
|---|---|
| The table does not contain information for the weight of the joint. | For small roasts, select a higher temperature and a shorter cooking time. For larger roasts, select a lower temperature and a longer cooking time. |
| How to tell when the roast is ready. | Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer. |
| The roast looks good but the juices are burnt. | Next time, use a smaller roasting dish or add more liquid. |
| The roast looks good but the juices are too clear and watery. | Next time, use a larger roasting dish and add less liquid. |
| The roast is not well-done enough. | Carve the roast. Prepare the gravy in the roasting dish and place the slices of roast meat in the gravy. Finish cooking the meat using the microwave only. |

Bakes, gratins, toast with toppings

Notes

- The values in the table apply to food placed in a cold oven.
- For bakes, potato gratins and lasagne, use a microwaveable, heat-resistant ovenproof dish 4 to 5 cm deep.
- Place the bake on the lower wire rack.
- Leave bakes and gratins to cook in the oven for a further 5 minutes after switching off.
- Cheese on toast: Pretoast slices of bread.

| Bakes, gratins, toasts | Accessories | Type of heating | Temperature in °C, grill setting | Microwave power in watts | Cooking time in minutes |
|---|----------------------|-----------------|----------------------------------|--------------------------|-------------------------|
| Bake, sweet, approx. 1.5 kg* | Ovenware without lid | ☒ | 140-160 | 300 | 25-35 |
| Savoury bake, made with cooked ingredients, approx. 1 kg* | Ovenware without lid | ☒ | 150-160 | 700 | 20-25 |
| Lasagne, fresh* | Ovenware without lid | ☒ | 200-220 | 300 | 25-35 |
| Potato gratin made from raw ingredients, approx. 1.1 kg* | Ovenware without lid | ☒ | 180-200 | 700 | 25-30 |
| Toast with topping, 4 slices** | | ☐ | 3 | - | 8-10 |

* lower wire rack














** higher wire rack

Convenience products, frozen

Notes

- Observe the instructions on the packaging.

- The values in the table apply to food placed in a cold oven.
- Do not lay chips, croquettes or potato röstis on top of each other. Turn half way through the cooking time.
- Place the food directly on the turntable.

| Convenience products | Accessories | Type of heating | Temperature °C | Microwave power in watts | Cooking time in minutes |
|-------------------------------|-----------------|---|----------------|--------------------------|-------------------------|
| Pizza with thin base* | Turntable |  | 220-230 | - | 10-15 |
| Pizza with deep-pan base | Turntable |  | - | 700 | 3 |
| | |  | 220-230 | - | 13-18 |
| Mini pizza* | Turntable |  | 220-230 | - | 10-15 |
| Pizza baguette* | Turntable |  | - | 700 | 2 |
| | |  | 220-230 | - | 13-18 |
| Chips | Turntable |  | 220-230 | - | 8-13 |
| Croquettes* | Turntable |  | 210-220 | - | 13-18 |
| Rösti, stuffed potato pockets | Turntable |  | 200-220 | - | 25-30 |
| Part-cooked rolls or baguette | Lower wire rack |  | 170-180 | - | 13-18 |
| Fish fingers | Turntable |  | 210-230 | - | 10-20 |
| Chicken goujons, nuggets | Turntable |  | 200-220 | - | 15-20 |
| Lasagne, approx. 400 g** | Lower wire rack |  | 220-230 | 700 | 12-17 |

* Preheat the cooking compartment for 5 minutes.

** Place the food in suitable, heat-resistant ovenware.



Worldwide Appliances Pty Limited

A.B.N. 45868077422

Distributed by Eurolinx Pty Ltd

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at www.artusi.com.au. Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY

1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths
Portable Appliances* – Benchtop Models and Portable Gas Models

2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in artusi products.

3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

Continued over...

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you

for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances.

Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

All warranty service calls must be booked via the customer care department. The team can be contacted on 1 300 85 64 11 option 1 or customercare@eurolinx.com.au

01082016



Warranty Card tear off

WARRANTY REGISTRATION CARD
01052013

Please complete and send to ARTUSI at: REPLY PAID 83617
LEICHHARDT NSW 2040

| | | | |
|--------------------------|-----------|--|--|
| Last Name: | | First Name: | |
| Address: | | | |
| State: | Postcode: | Email: | |
| Home Phone: | | Mobile: | |
| Purchase Date: / / | | (Please attach proof of purchase to validate warranty) | |

| MODEL NUMBER | SERIAL NUMBER (if you cannot locate the serial number please call ARTUSI on 1300 694 583) |
|--------------|--|
| 1 | |
| 2 | |
| 3 | |
| 4 | |

01082016



DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)
48-50 MOORE STREET
LEICHHARDT
F 02 8569 4699

VIC, TAS & SA
1211 TOORAK ROAD
CAMBERWELL
F 03 9809 2155

QLD
1/42 CAVENDISH ROAD
COORPAROO
F 07 3397 0850

WA & NT
UNIT 10/55 HOWE STREET
OSBORNE PARK
F 08 9201 9188

NZ
PO BOX 11160
SOCKBURN CHRISTCHURCH
F 03 344 5906

P: 1300 649 583

ARTUSI.COM.AU