

34L Microwave Oven

PRODUCT CODE: **EP34MWS**



FEATURES:

- + 34L Capacity
- + Digital touch control
- + 1100W microwave power
- + Auto cooking menus
- + Child safety lock
- + Grey painted cavity
- + Stainless steel front panel finish
- + Black outer housing

TIMER

Use to set microwave cooking time. Allows you to set up to 95 minutes.

DEFROST BY TIME

Use to set microwave defrost time. This function will allow you to set a maximum of up to 95 minutes.

DEFROST BY WEIGHT

Defrost food according to weight from 100g to 2kg.

MULTI-STAGE COOKING

This feature allows you to set multiple stages of cooking for example, the defrost function followed by microwave function.

ELECTRIC REQUIREMENTS

This microwave is fitted with a cord and 10amp plug.

POWER CONSUMPTION

Rated input power (microwave): 1500w
Rated output power (microwave): 1100w
Rated input power (grill): 1100w
Rated Voltage: 220-240V

WEIGHT:

20.5kg (Gross) / 18.5kg (Net)

OVEN CAPACITY:

34 Litres



eurocooking



Warranty

HELPFUL TIPS

- + Leave your rangehood on for 15 minutes after the cooking of the food to remove all odors, steam etc.
- + The dishwasher-safe cassette filters need to be cleaned after approximately 2 months of standard operation
- + It is recommended that the rangehood be installed between 650mm and 750mm above the cooktop
- + It is also recommended that fumes from the rangehood be ducted out into the atmosphere.
- + Turn off the rangehood before attempting to clean

INSTALLATION

Installation is recommended by a qualified installer, please refer to the product manual for full installation instructions.

FILTER CLEANING INFORMATION

Cassette mesh filter: Requires cleaning monthly. This will ensure no interruptions with airflow operation.

PRODUCT DIMENSIONS

