INSTALLATION INSTRUCTIONS

Induction cooktop

CI604ELTB, CI704ELTB & CI904ELTB models





A WARNING!

Electrical shock hazard Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.



Connection to a good earth wiring system is essential and mandatory. Alterations to the domestic wiring system must only be made by a qualified electrician.

Failure to follow this advice may result in electrical shock or death.

▲ WARNING!



Take care - panel edges are sharp. Failure to use caution could result in injury or cuts.

IMPORTANT SAFETY INSTRUCTIONS

 Particular attention shall be given to the relevant requirements regarding ventilation.

Read these instructions carefully before

installing this product.

 Please make this information available to the person installing the appliance as it could reduce your installation costs.

This appliance is to be installed and serviced only by an authorised person.

Installation must comply with your local building and local electricity

regulations.

The manufacturer accepts no responsibility for the incorrect installation of appliances. Incorrect installation may result in personal injury, damage to property and may invalidate any warranty or liability claims.

Do not modify this appliance.

Do not use or store flammable materials

on or near this appliance.

 Packing elements (eg plastic bags, polystyrene foam, staples, packing straps etc) and tools should not be left around during and after installation, especially if they are within easy reach of children, as these may cause serious injuries.

IMPORTANT!

Cut Hazard

IMPORTANT SAFETY INSTRUCTIONS

Before you install the appliance, please make sure that a suitable disconnection switch is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations. A means of disconnection with at least a 3 mm air gap contact separation in all poles must be incorporated into the fixed wiring in accordance with the wiring rules, unless the local wiring rules allow for alternative means.

the benchtop is made of a heat resistant

material.

the power supply cable is not accessible through cupboard doors or drawers.
there is adequate flow of cool air from the cabinetry to the base of the cooktop.

You may ventilate from adjacent cupboards, but ensure that the available air supply will not be restricted.

the ventilation area must be at least two 50mm diameter holes or of an equivalent

area.

the isolating switch is easily accessible

by the customer.

 you use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the cooktop.

 the cooktop will not be installed directly above a dishwasher, fridge, freezer, washing machine or clothes dryer, as the humidity may damage the cooktop electronics.

IMPORTANT SAFETY INSTRUCTIONS

if the cooktop is installed above an oven,

the oven has a built-in cooling fan.
the installation will comply with all clearance requirements and applicable standards and regulations.

you consult local building authorities and by-laws if in doubt regarding installation.

When you install the appliance

 We do not recommend you flush mount or seal this appliance into the bench with silicone or glue. Doing so will make future servicing difficult. ELBA by Fisher & Paykel will not be liable for any costs associated with removing or replacing a sealed-in appliance, nor for repairing any damage that may be incurred by doing this.

Seal exposed bare edges of the cutout with an oil-based paint or moistureproof polyurethane to prevent possible moisture creeping between the cooktop trim and the benchtop.

 Take extreme care not to chip, crack, or break the top glass surfaces during installation. A heavy metal tool or part accidentally dropped on the glass could

damage it.

 If, after following the instructions given, correct performance cannot be achieved, please contact your nearest Fisher & Paykel Authorised Service Centre, Customer Care, or contact us through our local website listed at the end of this document.





Clamping brackets (4) and screws (4) Foam tape (1)


Mans.io


Installing multiple products



- Note: We recommend installing products in separate cutouts with a minimum distance of 5 mm between the glass edges.
- · If installing multiple products adjacent to each other within the same cutout, a separate joining strip kit is required for installation.
- . The kit is available from the nearest ELBA by Fisher & Paykel Authorised Service Centre or our website www.fisherpaykel.com.
- If installing different products adjacent to each other (eg a wok burner next to an induction cooktop), the minimum clearance measurements for the different products may vary.
 Always use the greater distance.

PRODUCT & CABINETRY DIMENSIONS

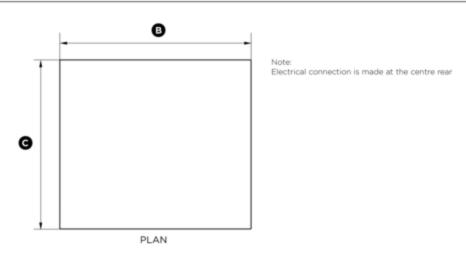

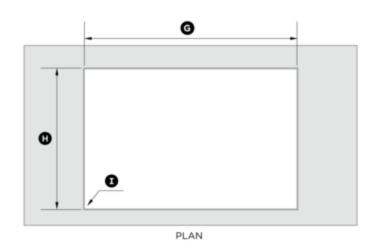






FRONT

	CI904ELTB	CI704ELTB	CI904ELTB
PRODUCT AND CABINETRY DIMENSIONS	mm	mm	mm
Overall height of product (including terminal block below top of chassis)	61	61	61
Overall width of product	600	700	900
© Overall depth of product	530	530	530
Height of chassis (including terminal block below top of chassis)	57	57	57
Width of chassis	555	555	755
© Depth of chassis	485	485	485
Overall width of cutout	560	560	760
Overall depth of cutout	490	490	490
① Corner radius of cutout	max. 10	max. 10	max. 10

4 CLEARANCE DIMENSIONS

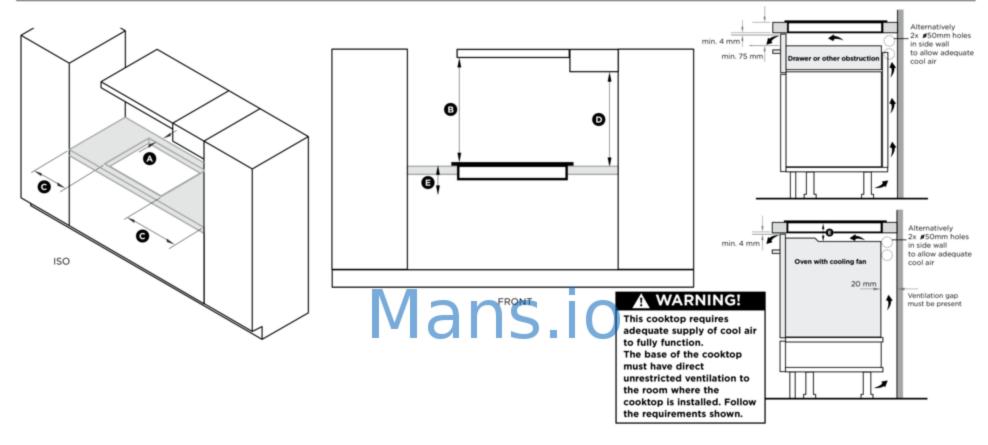

	CI604ELTB	CI704ELTB	CI904ELTB
CLEARANCE DIMENSIONS	mm	mm	mm
Minimum clearance from rear edge of cutout to nearest combustible surface	30	30	30
Minimum clearance from glass surface to rangehood	650	650	650
© Minimum clearance from side edges of cutout to nearest combustible surface	30	80	80
Minimum clearance from benchtop to overhead cabinet not directly above the cooktop	450	450	450
Minimum clearance below top of benchtop to: Rear top of oven* installed below cooktop or cabinetry	82	82	82
* The oven installed below the cooktop MUST have a cooling fan.			

5 FLUSH MOUNTING INSTALLATION (NOT RECOMMENDED)




	1 1 011 1 0 1	CI604ELTB	C1704ELTB	CI904 ELTB
PRO	DUCT AND CABINETRY DIMENSIONS	mm	mm	mm
(A)	Overall height of product (including terminal block below top of chassis)	61	61	61
(B)	Overall width of product	600	700	900
©	Overall depth of product	530	530	530
0	Height of chassis (including terminal block below top of chassis)	57	57	57
(E)	Width of chassis	555	555	755
F	Depth of chassis	485	485	485
6	Overall width of routered recess	605	605	905
(G)I	Width of cutout	560	560	760
(H)	Overall depth of routered recess	535	535	535
$(H)_{\parallel}$	Depth of cutout	490	490	490
1	Corner radius of cutout	max. 10	max. 10	max. 10
(J)	Corner radius of routered recess	max. 2	max. 2	max. 2
(K)	Height of routered recess	5	5	5
(L)	Minimum clearance below top of benchtop to: rear top of oven* installed below cooktop or cabinetry thermal protection barrier	87 87	87 87	87 87


FLUSH MOUNTING INSTALLATION (NOT RECOMMENDED)


A ROUTER THE BENCHTOP TO THE SPECIFIED DEPTH

B FIT THE CLAMPING BRACKETS

© MASK OFF THE AREA TO BE SILICONED

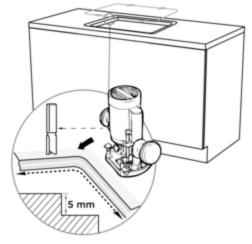


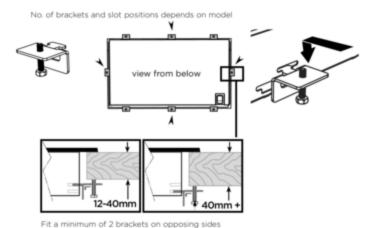

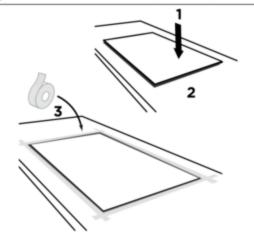


® WIPE OFF EXCESS SILICONE


F IF REMOVING PRODUCT, CUT AROUND THE SILICONE

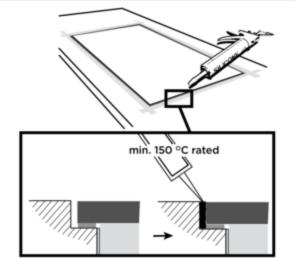


D APPLY SILICONE


Ensure silicone does not leak underneath glass.

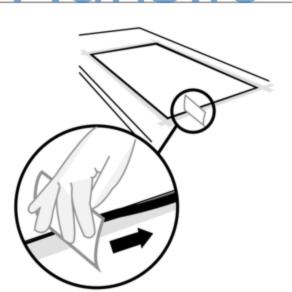

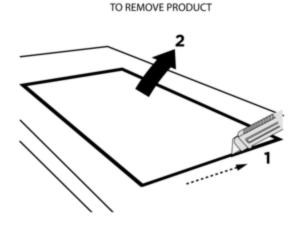



IMPORTANT! - To avoid damage to the glass, ensure there is a protective cover underneath it.

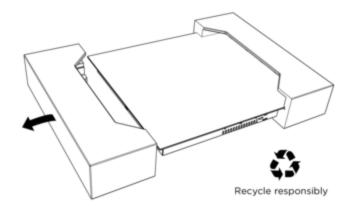

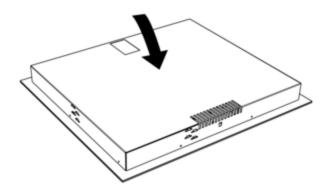

APPLY ADHESIVE FOAM TAPE AROUND GLASS EDGE OLOWER GENTLY INTO THE CUTOUT

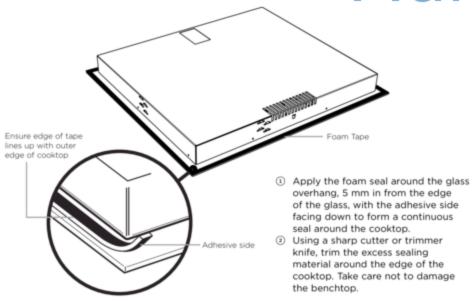

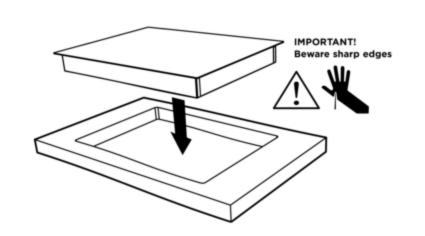

ONNECTING THE COOKTOP TO THE MAINS POWER SUPPLY

IMPORTANT!


- This cooktop must be connected to the mains power supply only by a suitably qualified person.
- To connect the cooktop to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause overheating and fire.
- The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 75 °C at any point.
- Check with an electrician whether the domestic wiring system is suitable without alterations.
 Any alterations must only be made by a qualified electrician.


Before connecting the cooktop to the mains power supply check that:

- The domestic wiring system is suitable for the power drawn by the cooktop.
- The voltage corresponds to the value given in the rating plate
- The power supply cable sections can withstand the load specified on the rating plate.

Power supply

CI604ELTB 7400W @ 220-240V IN - 32A CI704ELTB 7400W @ 220-240V IN - 32A CI904ELTB 7400W @ 220-240V IN - 32A

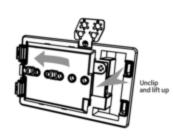

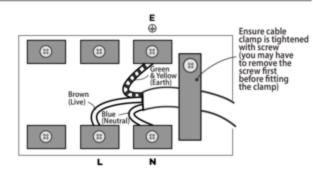

CI604ELTB, CI704ELTB1 CI904ELTB


Single-phase connection 220-240V-




Mans.io

FIT CLAMPING BRACKETS BASED ON THE BENCHTOP THICKNESS

No. of brackets and slot positions depends on model

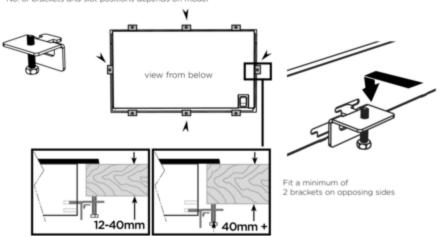

12 SECURE TO BENCHTOP

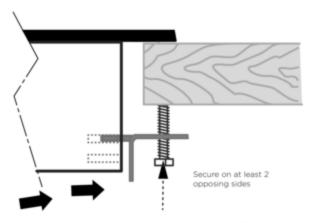

Repeat on all the other brackets

\checkmark	TO BE COMPLETED BY THE INSTALLER					
	Is the cooktop earthed?			Have you demonstrated the basic operation to the customer?		
	Check that there is an adequate and constant flow of cool air from the cabinetry to the base of the cooktop.		1	Make sure you explain to the customer about the importance of taking note of the safety warnings at the beginning of the user guide, especially for persons with pacemakers or other electrical implants.		
	Check that the power supply cable is not accessible via cupboard doors or drawers and that it is NOT touching the cooktop.		(3)	(3)	(2) (3)	the 'hot surface' indicators. using induction suitable cookware only.
	Is the cooktop clamped down securely?			the pair detection reature.		
	Check that the pan detection feature is working correctly. Turn on each cooking zone without putting any cookware on them. Are all the displays flashing?					
	Check that all the cooking zones function correctly. Place suitable pans with water in them on each zone, then turn all of them on to a high setting. Is the water heating?					
	Are all touch controls and displays functioning?					
	To check that the 'hot surface' indicators function correctly, turn off all the zones. Is H displayed in all the cooking zone displays?					
Mans.io						

www.elba.co.nz www.elba.com.au

Mans.io

Copyright © Fisher & Paykel Appliances. 2016. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

NZ AU