

6kg Front Load Washing Machine



FEATURES

6kg Capacity, LED Display Screen, 15 Wash Programs, Pre-wash and Extra Rinse Functions, 24 Hour Delay Start, Child Lock, 1000RPM Spin Speed, Shallow Depth 400mm

Congratulations on your new InAlto 6kg Front Load Washing Machine

WASHING PROGRAMS

- **Cotton:** Suitable to wash durable, heat-resistant textiles made of cotton or linen.
- **Jeans:** Suitable for washing all types of denim.
- **Delicate:** This program has a gentle water flow. Suitable for delicate, washable textiles such as silk, satin, synthetic fibres or blended fabrics.
- **Cotton ECO:** A economical cotton cycle that uses lower temperatures and less water over an extended period of time.
- **Spin Only:** This program can be used after a wash to remove excess water. However, the clothing will not be fully dry.
- **Rinse & Spin:** Simply rinses the load and then spins it.
- **Hot 90°C:** This program should be reserved for brightening whites, removing stubborn stains on cotton or linen, killing bacteria on heavily soiled items or performing a routine drum clean maintenance wash for your washing machine.
- **Mix:** Suitable for mixed fabric loads that require a more intense cleaning cycle.
- **Rapid 45:** Suitable for washing lightly dirty clothes quickly.
- **Quick 15:** Suitable for light loads with light soiling of which you would like to be cleaned in a hurry.

Please refer to the User Manual pages 14–15 for more detailed Washing Program information.

REGISTER YOUR APPLIANCE

AU: www.inalto.house/registration
NZ: www.inalto.house/nz/registration

INSTALLATION & FIRST USE

Prior to installing your washing machine:

- Choose a solid and level surface that is away from direct sunlight.
- Remove the cardboard carton and styrofoam packaging.
- Lift the washing machine and remove the base packaging, ensuring the small triangle foam at the base is removed.
- Remove the tape securing the power supply cord and drain hose.
- Remove the inlet hose from the drum.
- Remove the transportation bolts.

Before using the washing machine to clean your laundry, you must perform one complete cycle without any clothes inside using the following steps:

- Connect the power source and water.
- Insert a small amount of detergent into the detergent drawer and close it.
- Turn the Program dial to select a program.
- Press the “Start/Pause” button to begin the wash cycle.
- After the machine has completed its full cycle, the machine is now ready for use.

Please refer to the User Manual for more detailed Operating & Installation instructions.

DETAILS

Capacity: 6kg
Dimensions (W, D, H): 595 × 400 × 850mm
Warranty: 2 Years

SUPPORT

Telephone: 1300 11 4357
Email: support@residentiagroup.com.au