


MODELS

Infinity 32	(REU-AM3237W)	Infinity Enviro 26	(REU-E2626W)
HD32e	(REU-AM3237WC)	Infinity Enviro 16	(REU-E1620W)
Infinity 26 Touch	(REU-AM2626WDL)	Infinity 28i	(REU-VCM2837FF)
Infinity 26	(REU-AM2626WD)	HD28i	(REU-VCM2837FFC)
Infinity 20	(REU-AM2024WD)	HD28e	(REU-VCM2837WC)
Infinity 16	(REU-AM1620WD)	B26	(REU-A2626WB)
Infinity 12	(REU-AM1220WD)	B20	(REU-A2024WB)
		B16	(REU-A1620WB)

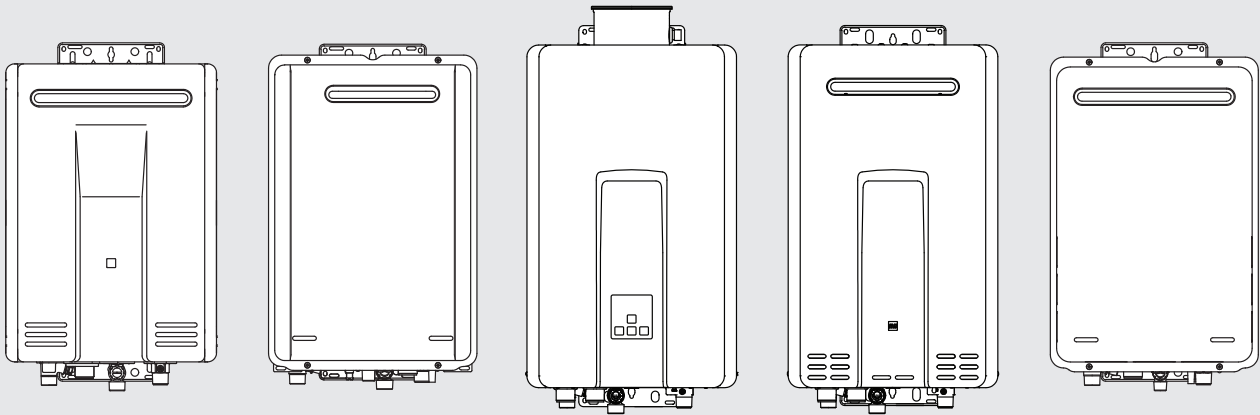

Gas Continuous Flow Water Heater Operation & Installation Manual

Rinnai

