

cooking collection

Instructions for use and warranty details

To register your warranty or make a warranty claim, scan this QR code:



Built-in Oven
Model No.:KCOMF6010

 kleenmaid

Dear Customer,

Thank you and congratulations for choosing Kleenmaid.

Your new appliance has been designed and meticulously tested to ensure that it meets all your culinary requirements, and has been carefully manufactured using top quality materials to give you years of reliable performance.

For best results, carefully read the instructions on how your new appliance is to be installed. Correct installation will avoid delays and unnecessary service call costs.

Once installation is complete, please read this instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance. These simple instructions will enable you to achieve excellent results from the very first time you use it.

Again, congratulations and thank you for choosing The Best You Can Own.

KLEENMAID

TABLE OF CONTENTS

Warning.....4
Safety Hints6
Instructions for Operation7
Product Description7
Accessories8
Shelf Placement Warning9
Installation Instructions10
Cleaning and Maintenance.....12
Specifications.....13
Kleenmaid Warranty14

NOTE: Before using this appliance please study this entire User Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using this appliance are familiar with these instructions as well. The latest version of this manual is available on our website. (See back page for details.)

If you are unsure of any of the information contained in these instructions, please contact our customer support centre.

The manufacturer shall not be responsible for any damages to persons or property caused by incorrect installation or use of the appliance.

The manufacturer also reserves the right to make any modifications to the product as may be considered necessary or useful, also in the interests of the user, without jeopardising the main functional and safety features of the product.

The appliance is designed for a domestic environment and not for commercial use.

WARNING

- When the oven is first switched on, it may give off a strong odour. This is due to the bonding agent used for the insulating panels within the oven. Please run the new oven empty with the conventional cooking function at 250 °C, for 90 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal for there to be a trace of smoke and an odour. If it does occur, please wait for the smell to clear before putting food into the oven.
- Please use the product in a well ventilated environment.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children shall be kept away unless continuously supervised.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by an adult person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- A steam cleaner is not to be used.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The oven must not be installed behind a decorative door in order to avoid overheating.
- The oven and its hinges and associated parts are designed to support the weight of the oven door only, and any damage to the door or its hinges or associated parts which is caused by excessive weight of any kind being placed onto the oven door will not be covered by warranty. The full cost of any warranty service call regarding damage which is assessed to be the result of excessive weight of any kind being placed onto the oven door will be for the care of the owner.
- Children should specifically be prevented from climbing or standing on the oven door.
- The appliance should never be lifted or moved by holding the door handle, and it is recommended that the door be removed before lifting or moving the oven.

SAFETY HINTS

- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- The oven door should not be opened often during the cooking period.
- The appliance must be installed by an authorized technician and checked before use. The manufacturer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- Do not place items on the open drawer or door of the oven as this may unbalance your appliance or break the door.
- Some parts of the appliance may retain heat for a long time; wait for it to cool down before touching the points that are exposed to direct heat.
- If the appliance will not be used for a long time, please turn it off and unplug it.



WARNING: IT MUST BE ENSURED THAT THIS APPLIANCE IS CONNECTED ONLY TO A 230vac +10%/-6% 50Hz MAINS POWER SUPPLY WHICH CONTINUOUSLY COMPLIES WITH THE RELEVANT AUSTRALIAN STANDARD. FAILURE TO DO SO MAY SERIOUSLY DAMAGE THE APPLIANCE AND ANY SUCH DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY.



DECLARATION OF COMPLIANCE

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous.

NOTE: Remove the oven and all materials from the carton and oven cavity. There are oven specific accessories (e.g. screws and plugs) supplied with the oven which should be retained for installation and not discarded with packaging.

DISPOSAL

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and ElectronicS EquipmentS(WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it should be handed over at the applicable collection point for the recycling of electrical and electronic equipment.

 
Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local council household waste disposal or the shop where you purchased the product.



INSTRUCTIONS FOR OPERATION

- To cook for an unspecified length of time, turn the timer knob anticlockwise to " ⓘ ",
The timer will not return to " 0 " automatically and the oven will keep in power-on state. To cook for a set time turn the timer knob clockwise to the time chosen.
- When the set cooking time is reached, the timer will return to " 0 " automatically with the sound of "Ding, Ding, Ding" and the oven will power-off.
- To set functions turn the function knob to the desired position.
- The temperature is set by turning the temperature knob.
- The oven will automatically start cooking after function, time and temperature are set. When the oven is not in use, always set all the knobs to " 0 ".


PRODUCT DESCRIPTION

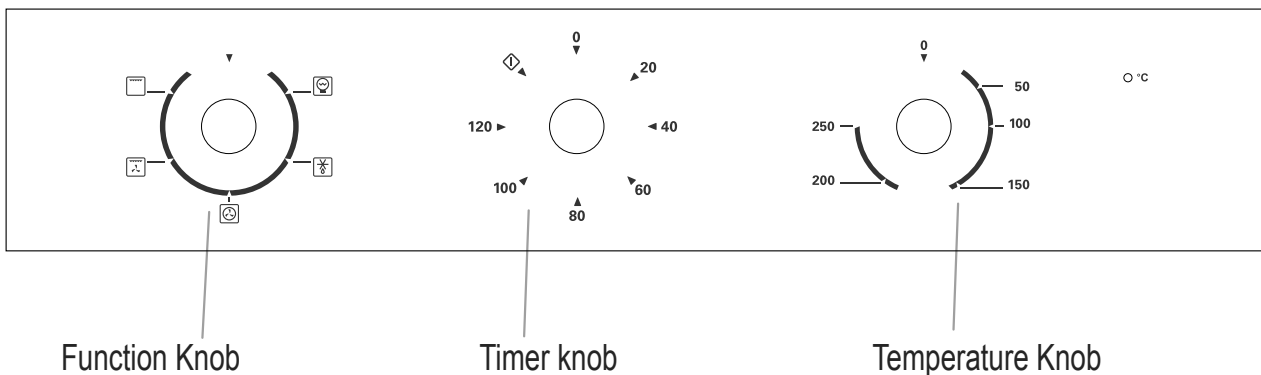


Symbol	Function description
	Oven Lamp: which enables the user to observe the progress of cooking without opening the door.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food,(without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Convection: Warm air heated by the rear element is quickly and evenly distributed throughout the oven by the fan. This results in a faster and more economical cooking process. The convection mode allows food to be cooked simultaneously on different shelves.
	Radiant grilling: The upper grill element switches on and off to maintain temperature. Best results can be obtained from using the top shelf for small items and lower shelves for large items.
	Grilling with fan: The upper grill element works with fan.

ACCESSORIES

 Wire shelf : For grill, dishes, cake pans, pans with items for roasting and grilling.

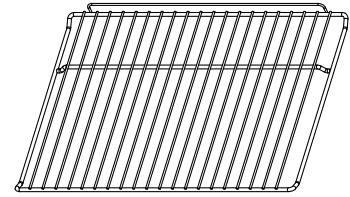


 Slider bracket: When cooking larger size food items these shelf support rails on the right and left sides of the oven can be removed, and dishes and trays can be put on the oven floor, using functions such as Radiant grilling or grilling with fan.

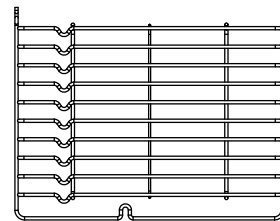


NOTE: For other models, when placing dishes on the oven floor, please Do NOT use functions with bottom element to prevent heat gathering at the base of the oven.

 Universal pan: For cooking large quantities of food such as moist cakes, pastries, frozen food etc, or for collecting fat/spillage and meat juices (use with wire rack insert).

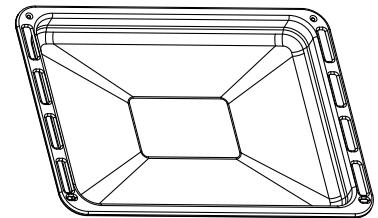

 
Wire rack: For grilling and roasting. Place the wire insert in the universal pan with the legs facing downwards. This ensures that dripping fat and meat juices are collected.

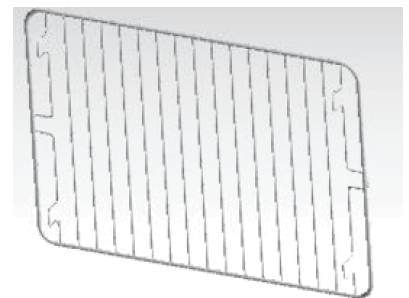

SHELF PLACEMENT WARNING:


To ensure the oven shelves operate safely, correct placement of the shelves between the side rails is imperative. Shelves and the pan can only be used between the first and fifth layers.

 The shelves should be inserted correctly to ensure that hot food items do not slide out during careful removal of the shelf or tray.

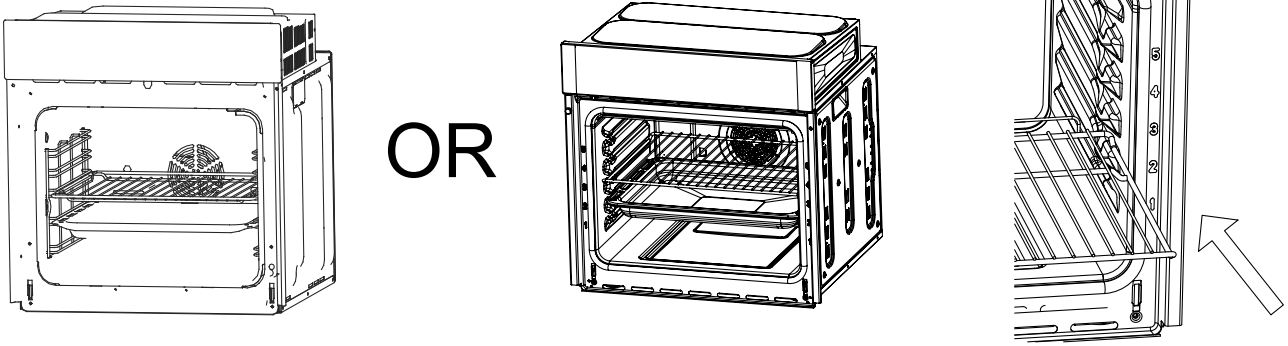

VENTILATING OPENINGS

 When cooking is finished, if the temperature at ventilating openings is over 70 degrees, the cooling fan will continue working. The cooling fan will not stop working until the temperature becomes lower than 60 degrees.

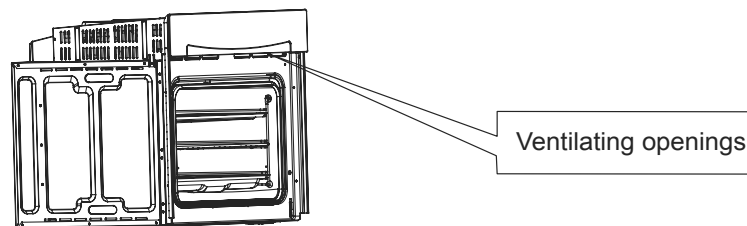


INSTALLATION INSTRUCTIONS

Note: Before making preparations for or commencing installation, the installer should refer to the current online version of the User Manual, which is available on the Kleenmaid website (see back cover for details).

Note: Remove the oven and all materials from the carton and oven cavity. There are oven specific accessories (e.g. screws and plugs) supplied with the oven which should be retained for installation and not discarded with packaging.

 DIMENSIONS

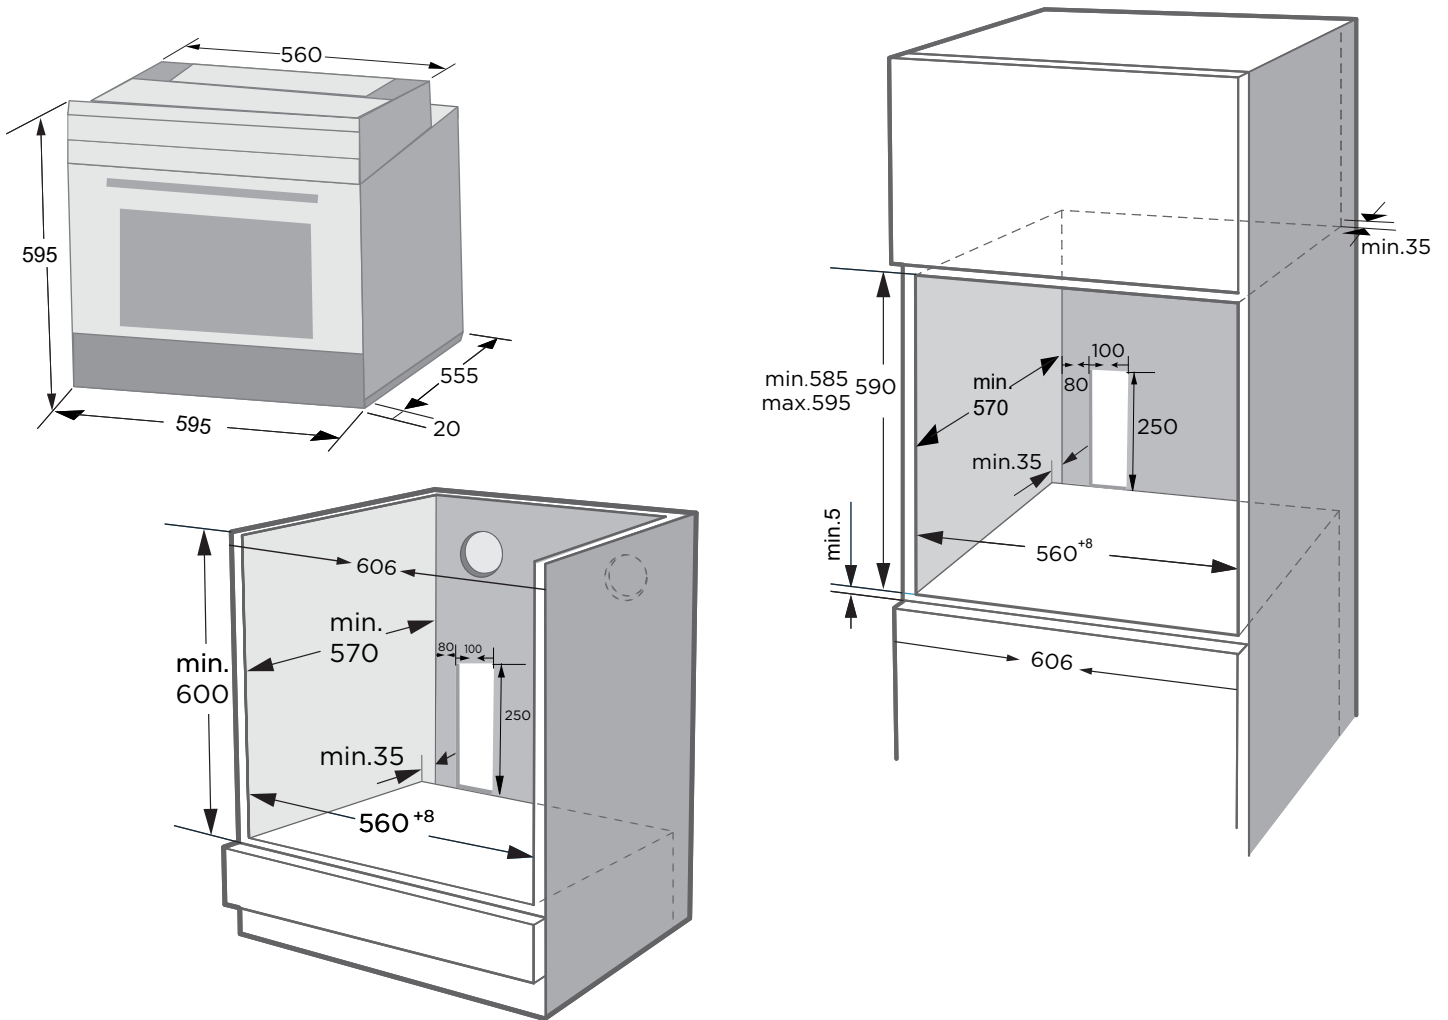

Note:

1. Only plus deviations are admissible for all dimensions.
2. The cabinet does not include the power switch or socket.
3. The setback from the glass fascia to the niche front should be 20 mm.
4. The cabinet dimension is in mm.

FITTING THE OVEN INTO THE KITCHEN UNIT

Fit the oven into the space provided in the kitchen unit. It may be fitted underneath a work top or into an upright column. Fix the oven in position by screwing into place, using the two fixing holes in the frame. (See diagram page 11.) To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation, the measurements and distances indicated in this manual must be adhered to when fixing the oven. For column installation ensure that a 35mm minimum depth full width ventilation cutout is made at the rear above and below the oven.

IMPORTANT

 
The appliance must be installed by an authorized technician and checked before use. The manufacturer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.

Before making preparations for or commencing installation, the installer should refer to the current online version of the User Manual, which is available on the Kleenmaid website (see back cover for details).


If the oven is to work properly, the kitchen housing must be suitable. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120 °C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit. Once the oven has been lodged inside the unit, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The oven must have a rear gap of at least 45 mm.

SECURING THE OVEN TO THE CABINET

1. Fit oven into the cabinet recess.
2. Open the oven door and determine the location of the mounting screw holes.
3. Fix the oven to the cabinet with two screws.

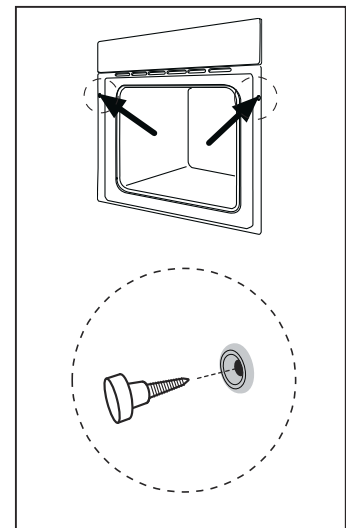

ELECTRICAL CONNECTION

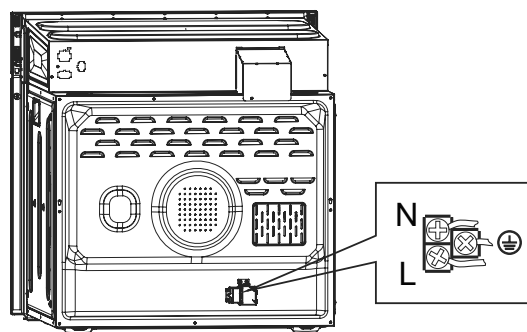 

NOTE: This appliance should be connected to the mains power supply via the supplied plug and cord, and a standard 10A GPO.

CLEANING AND MAINTENANCE

REMOVING THE DOOR FROM OVEN (OPTIONAL)

Disassembly of oven door components for easier cleaning and maintenance.

1. To remove the door, open the door to the maximum angle, then pull the buckle at the door hinge backward. Fig.1

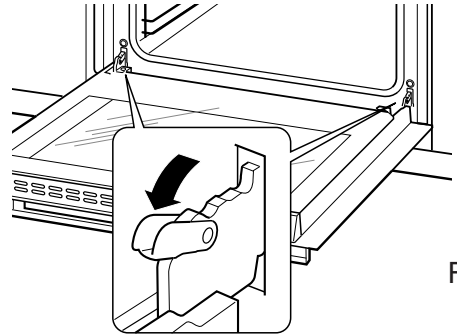 


Fig. 1

2. Close the door to an angle approximately 30°. Hold the door with one hand on each side. Lift up and slowly pull the door out from the oven. Fig.2

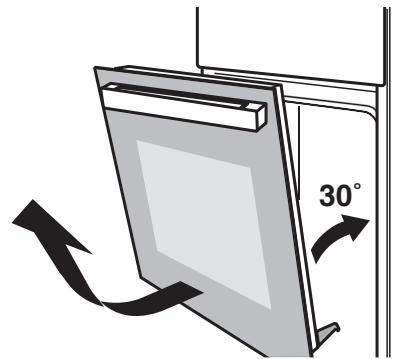 


Fig. 2

3. Open the door rotation bracket assembly by performing the action shown in Fig.3.

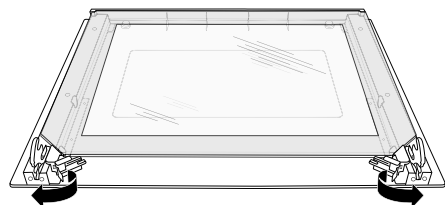 


Fig. 3

4. Lift up the door outer glass and gently pull it out, then take the door middle glass out in the same way. Fig.4 & Fig.5.

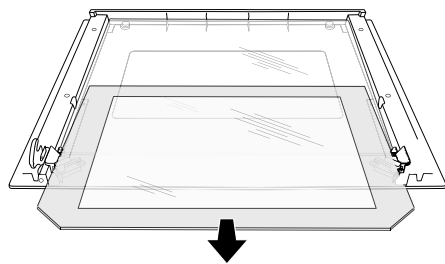 


Fig. 4

5. Reverse the above procedures to return the door to its original position.

WARNING:

Don't forcibly pull out the door as this may cause glass breakage during the dismantling process.

WARNING:

The hinge springs which are under tension could operate suddenly without warning causing personal injury.

WARNING:

Do not lift or carry the oven door by the door handle.

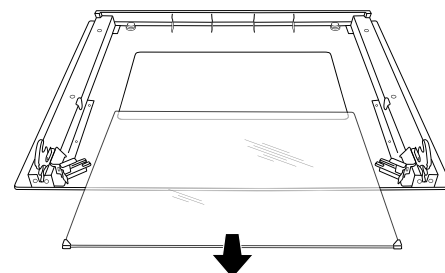 


Fig. 5

CLEANING AND MAINTENANCE

To enhance appearance and reliability, keep the unit clean. The modern design of the unit facilitates maintenance. The parts of the unit which come into contact with food should be cleaned regularly.

 
- Before any maintenance and cleaning, disconnect the power.
- Set all controls in the OFF position.
- Wait until the inside of the unit is only slightly warm but not hot - cleaning is easier than when warm.
- Clean the surface of the unit with a damp cloth, soft brush or fine sponge and then wipe dry. In case of heavy soiling, use hot water with a non-abrasive cleaning product.
- Do not use abrasive cleaners or sharp metal scrapers for cleaning the glass of the oven door as these can scratch the surface or lead to the glass being damaged.
- Never leave acidic substances (lemon juice, vinegar) on stainless steel parts.
- Do not use a high pressure cleaner for cleaning the unit. The baking pans may be washed in mild detergent.

BULB REPLACEMENT

The replacement process is as follows:

- 1> Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
- 2> Unscrew the glass lamp cover by turning it counter-clockwise (note, it may be stiff) and replace the bulb with a new one of the same type.
- 3> Screw the glass lamp cover back in place.

NOTE: Only use 25W/230V, T300°C halogen lamps.

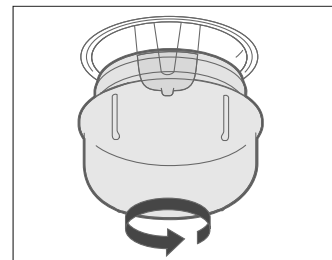

SPECIFICATIONS

Model	KCOMF6010
Oven Dimensions(H/W/D)	595x595x575mm
Rated Voltage	220-240V~50Hz-60Hz
Total Power	2.1kW 9.1A
Power Cord	10A H05VV-F 3X1.0 1m

Note: If the appliance fails to operate correctly during the warranty period please visit our website to request a warranty service (see back cover of this manual for details). When booking a service please provide your Model No KCOMF6010 and the individual Serial Number of your appliance, which are found on the rating plate. The rating plate bearing these numbers can be seen when you open the appliance door.

KLEENMAID WARRANTY

TERMS AND CONDITIONS

1. Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid will provide parts and labour to you the customer as set out herein.
2. Kleenmaid may engage a Service Agent to provide service under this warranty.
3. Kleenmaid's Products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
4. The benefits given to you under this Kleenmaid Warranty are in addition to other rights and remedies to which you may be entitled under the Australian Consumer Law in relation to the Product to which this Kleenmaid Warranty relates. Subject to the conditions below, the Product is warranted by Kleenmaid and/or its agents to be free from defects in materials and workmanship for the Warranty Period for normal Domestic Use.
5. Product Identification: -
 - a. Kleenmaid reserves the right to reject claims for any services or work where you cannot produce for verification the serial number and a proof of purchase for the Product (including but not limited to the original invoice).
 - b. this Kleenmaid Warranty will be voided if the serial number for the Product cannot be verified. This is not intended to exclude, restrict or modify any right or remedy to which you may otherwise be entitled under the consumer guarantee provisions of the Australian Consumer Law.
 - c. in the event that a request for repair is made against this Kleenmaid Warranty where the serial number for the Product cannot be verified or you cannot produce for verification a proof of purchase for the Product (including but not limited to the original invoice), the repairer will not carry out any repairs on the Product and you will be charged a service call-out fee.
6. What is covered by this Kleenmaid Warranty: -
 - a. the Product is covered for faulty workmanship or parts that have failed under normal Domestic Use.
 - b. Kleenmaid and/or its agents will determine by objective testing if there are any defects in the Product and/or faulty workmanship.
 - c. this Kleenmaid Warranty is only applicable if repairs on Products are carried out within Mainland Australia.
 - d. this Kleenmaid Warranty: -
 - i. covers a Product purchased as new, manufactured for use in Mainland Australia;
 - ii. commences from the date of delivery of the Product;
 - iii. provides for the labour and replacement parts necessary to maintain the Product in good operating condition as specified in this Kleenmaid Warranty, however, if repair is needed because of Product failure during normal Domestic Use, Kleenmaid has the option to repair or replace the defective Product or part of the Product with a product or part of like kind and quality. A replacement part may be new or reconditioned of like kind and quality and may cost less than the original Product purchased and no charges or refunds will be made based on the replacement product or part cost difference; and
 - iv. is only applicable when the Product is used and operated in accordance with the Manufacturer's instructions.
7. What is not Covered by this Kleenmaid Warranty (excluded):-
 - a. any damage or failure to or of the Product or part of the Product:
 - i. due to the Product being inadequately serviced to manufacturer's recommendations;
 - ii. resulting from environmental conditions including and not limited to dirt, dust, rodents, insects, rust, corrosion, salt built-up, or of in any part of the Product;
 - iii. resulting from excessive use but fair wear and tear is excepted;
 - iv. resulting from installation by an unqualified or uncertified tradesperson;
 - v. resulting from poor or incorrect installation including and not limited to positioning and externally fitted equipment such as plumbing and drainage, cabling, antennae or due to incompatibility of connected equipment;
 - vi. caused by overheating as a result of sitting or positioning of the Product, where there is no provision for adequate ventilation or adequate protection from excessive dust;
 - vii. if the Product has been dismantled, repaired or serviced by any person other than someone authorised by Kleenmaid or its agents or representatives;
 - viii. caused by power surges or spikes, including and not limited to, mains power and telecommunications connections, or to other unspecified sources, incorrect power current, voltage fluctuation, amperage fluctuation, rust or corrosion;
 - ix. if the Product is dropped, collision of the Product with another object, use for which the Product is not designed, damage to the Product caused by your own negligence, accidental or deliberate misuse of the Product by you, theft, abuse, vandalism, flood, fire, earthquake, electrical storms or any other act of God or any war related events; or
 - x. due to the introduction of abnormal heat loads to the Product;
 - b. costs of attendance and testing where no fault or defect covered by the terms of this Kleenmaid Warranty is identified in the Product;
 - c. initial setup and installation of the Product;
 - d. normal maintenance costs and costs incurred through the installation of items listed as requiring periodic replacement;
 - e. Products with removed or altered serial numbers;
 - f. broken or cracked glass other than transport damage to the initial point of delivery;
 - g. consumables such as but not limited to bulbs/globes, seals, filters, batteries and remote controls;
 - h. removal and reinstallation of an internal component not performed by an authorised Kleenmaid agent or representative or authorised service centre;
 - i. cosmetic or structural items; or
 - j. any failures due to interference from or with other products and/or sources.
8. This Kleenmaid Warranty ceases if: -
 - a. the Product ceases to carry the original manufacturer's serial number or is sold at an auction;
 - b. the Product is rented; or
 - c. there is failure to pay monies owing on invoices as a result of non-warranty work being carried out at the request of the end user as per point 16 below.

9. Service under this warranty may be limited by the area in which you live. Service to remote and regional areas may incur additional travel costs which will be payable by you. You will be advised of this at the time you make a claim and Kleenmaid arranges to attend your premises.
10. Neither Kleenmaid nor its representatives provide loan equipment under the terms of this Kleenmaid Warranty.
11. Any unauthorised access to the internal hardware of the Product will void this Kleenmaid Warranty.
12. Repair Notice: Products presented for repair may be replaced by refurbished Products of the same type rather than being repaired. Refurbished parts may be used to repair the Products.
13. Replacement items are "like for like" and is not "new for old" and does not indicate in any way that a faulty Product will be replaced with a new part or unit. "Like for like" may either be a quality checked, refurbished or reconditioned unit of the same or later batch of model/size/specifications
14. The cost of making a claim under this Kleenmaid Warranty is not covered by Kleenmaid, including any costs of transportation or travel expenses between your home and your nearest authorised service agent.
15. Kleenmaid accepts no liability for items that are lost, damaged, or stolen as a result of freight, transport or storage. If you are required to transport the Product to an authorised service centre, you must ensure that it is securely packed and insured.
16. On Public Holidays or other periods when regular business and wholesale operations are temporarily ceased, repairer availability and warranty response times may extend beyond the standard response times due to the unavailability of repairers and parts.
17. For any repair performed on a Product under this Kleenmaid Warranty where no fault can be found, or the item is deemed by Kleenmaid or an authorised agent, to be not faulty under this Kleenmaid Warranty, or the repair or fault is not covered under this Kleenmaid Warranty, a 'No Fault Found' fee is payable by you. Kleenmaid will advise you of this cost and seek your agreement to pay such costs before commencing such repairs.
18. Any repairs or services required that are outside the terms and conditions of this Kleenmaid Warranty can be carried out at your request at your cost (including where the Product has not been installed or set up correctly). Kleenmaid will always advise you of this cost and seek your agreement to pay such costs before commencing such repairs. A credit card may be required prior to the commencement of such services.
19. Extra charges will be payable by the customer should the Product not be readily accessible without special equipment, such as but not limited to cranes and lifts or should the Product be installed in a position that service access is blocked and/or repair work is not possible without uninstalling the Product to gain access.
20. You, the customer, may be entitled to purchase an extended warranty in respect of the Product. Any extended warranty will not be issued by Kleenmaid but by a third party. Any extended warranty services will be provided directly by the third party as principal and not as agent for Kleenmaid, under their extended warranty terms and conditions and not under this Kleenmaid Warranty.
21. To make a claim under this Kleenmaid Warranty, please have your proof of purchase and the serial number of the Product ready and call (02) 9310 1207 during business hours.
22. This Kleenmaid Warranty is given by:
Name: Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid
Business address: Level 2, Suite 3, 204 Botany Rd, Alexandria NSW Australia 2015
Telephone: (02) 9310 1207
23. Definitions:
 - a. **Australian Consumer Law** means the *Competition and Consumer Act 2010* (Cth).
 - b. **Domestic Use** means use of the Product for personal, domestic or household purposes.
 - c. **Kleenmaid** means Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid.
 - d. **Mainland Australia** means the following States and Territories of Australia: New South Wales, Victoria, South Australia, Western Australia, Queensland, Tasmania, Northern Territory, Australian Capital Territory.
 - e. **Product** means the appliance sold by Kleenmaid to you as evidenced by the original purchase invoice.
 - f. **Service Agent** means any independent service agent engaged by Kleenmaid to carry out any repair or service under this warranty.
 - g. **Warranty Period** means for domestic use and for Products purchased on or after 1 January 2019 the period of 60 months, otherwise 36 months. For non-domestic use 12 months or such alternative period as may be specified.

UPDATE NOTICE: This Kleenmaid Warranty is current as at 1 December 2022 but is subject to variation from time to time. For the latest version of the Kleenmaid Warranty, please see our website <https://kleenmaid.com.au/warranty/> or phone us on (02) 9310 1207.

Other products available in the Kleenmaid range of appliances

- | Washing machines
- | Clothes dryers
- | Dishwashers
- | Ovens
- | Cooktops
- | Steam ovens
- | Microwave ovens
- | Built in espresso coffee machines
- | Rangehoods
- | Freestanding ovens
- | Refrigerators & Freezers
- | Beverage Serving Cabinets
- | Water Dispensers
- | Vacuum Cleaners

To register your warranty or make a warranty claim, scan this QR code:

 


Compass Capital Services Pty Limited
trading as Kleenmaid
ABN 96138214525

Level 2, 204 Botany Road Alexandria
NSW 2015



Register your Kleenmaid
Appliances Warranty
www.kleenmaidwarranty.com.au



Request a Warranty Service
www.kleenmaidwarranty.com.au

E: warranty@kleenmaid.com.au
Please download the current User Manual for this
appliance at www.kleenmaid.com.au

 **kleenmaid**