



 **Goldline**


CERAMIC ELECTRIC  
COOKTOP (RZ94T-1)  
USER MANUAL

# TABLE *of* CONTENTS

---

Safety & Warnings	01
Introduction	03
Installation	05
Operation & Maintenance	08
Troubleshooting	13
Care & Cleaning	15
Energy Guidelines	16
Warranty & Service	17


---

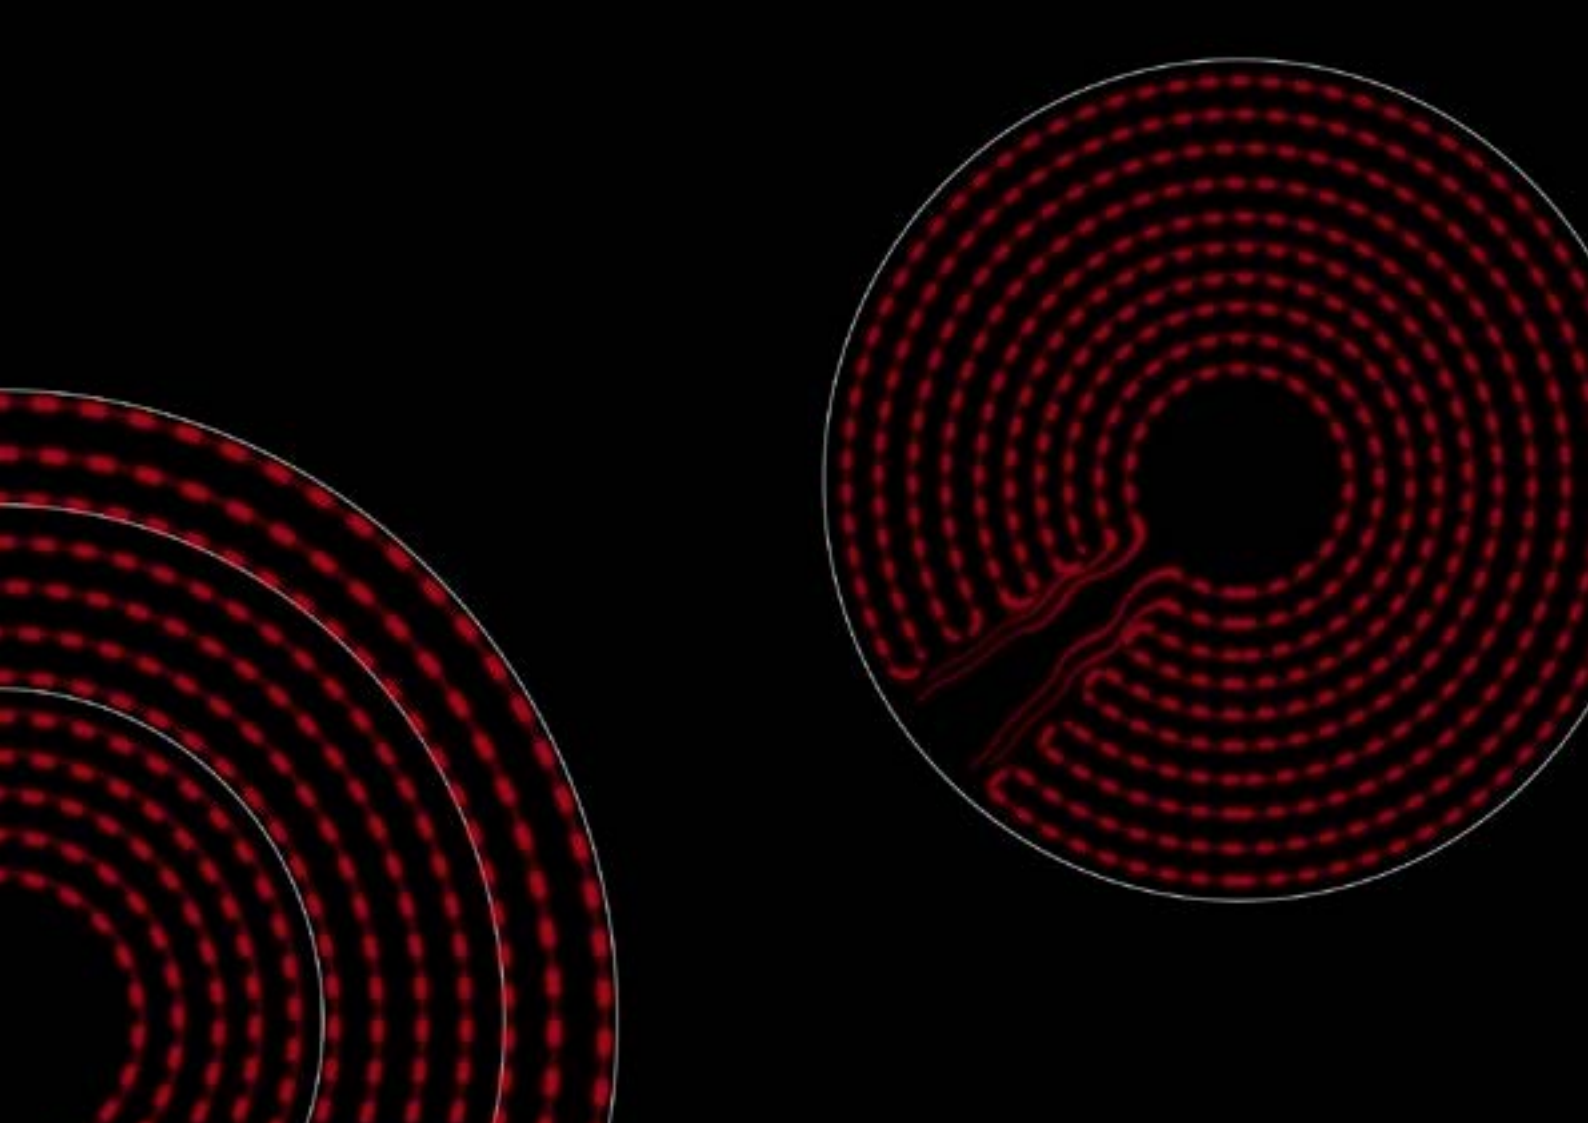

Dear Customers,

Thank you for choosing Goldline kitchen appliance. For your safety and correct operation of this appliance, please read this instructions carefully before installing and using.

Please follow the instruction and advice in the manual. Please preserve this manual carefully, it will be useful in the future should you need to refer to it.

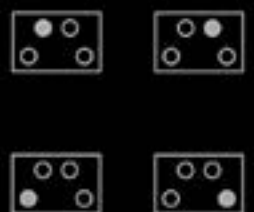

## SAFETY & WARNINGS

---

- ❗ Read these instructions carefully before installing or using this appliance.
- ❗ No combustible material or products should be placed on this appliance at any time.
- ❗ Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- ❗ In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- ❗ This appliance is to be properly installed and earthed only by a suitably qualified person.
- ❗ This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- ❗ Failure to install the appliance correctly could invalidate any warranty or liability claims.
- ❗ This appliance is not intended for use by persons (including Children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ❗ Do not allow children to approach the glass of the cooktop while it is in use, as high temperature can be reached.
- ❗ Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- ❗ Do not use a steam cleaner to clean your cooktop.
- ❗ Do not place or drop heavy objects on your cooktop. Do not stand on your cooktop.
- ❗ Do not use pans with jagged edges or drag pans across the ceramic glass surface as this can scratch the glass.
- ❗ Do not use scourers or any other harsh/abrasive cleaning agents to clean your cooktop, as these can scratch the ceramic glass.

- ❗ If the power supply cable is damaged, it must only be replaced by a qualified technician.
- ❗ Do not operate your cooktop by means of an external timer or separate remote-control system.
- ❗ **Electrical Shock Hazard**  
Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it. Connect on to a good earth wiring system is essential and mandatory. Alterations to the domestic wiring system must only be made by a qualified electrician. Failure to follow this advice may result in electrical shock or death.
- ❗ **Electrical Shock Hazard**  
Do not cook on a broken or cracked cooktop. If the cooktop surface should break or crack, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician. Switch the cooktop off at the wall before cleaning or maintenance. Failure to follow this advice may result in electrical shock or death.
- ❗ **Fire Hazard**  
Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and cover flame, e.g. with a lid or fire blanket.
- ❗ Do not store items on cooking surfaces. Failure to follow this advice may result in serious burns or death.
- ❗ **Hot Surface Hazard**  
During use, accessible parts of this appliance will become hot enough to cause burns. Do not let body, clothing or any item other than suitable cookware contact with the ceramic glass until the surface is cool. Never leave metal objects on the cooktop as they can become hot very quickly. Keep children away.

# INTRODUCTION

---

## Important

- ❗ The packing materials (including plastic bags, plyfoam, nails, metal strips etc.) must be move away from the reaching of children to avoid potential dangers. These materials should be handled based on local regulations.
- ❗ Don't attempt to alter the technical features of the appliance as this may result in dangerous accidents.
- ❗ Whenever you decide to dispose of the appliance or replace it with a new one, before scrapping, we recommend you to make it inoperative and harmless to meet their health and anti-pollution regulators.

## Important Precautions and Recommendations for the Usage of the Ceramic Cooktop

- ❗ Do not use the appliance the bare feet.
- ❗ Do not let children or the disabled operate control panel.
- ❗ Disconnect the appliance from electric supply before carrying out any cleaning or maintenance operation.
- ❗ Never try to remove the plug from mains supply socket by pulling the cable.
- ❗ If the appliance break down or does not work properly, switch off and do not tamper with it.
- ❗ All repairs (including damage of main supply) should be operated by an approved service agent and you should insist that only original spare parts are used. Failure to follow the above advice can affect the safety of your appliance.

## Warning

- ❗ Children should be supervised to ensure that they do not play with appliance.
- ❗ The appliance and its accessible parts become hot during use.
- ❗ If surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- ❗ Care should be taken to avoid touching heating elements.
- ❗ **Warning**  
Unattended cooking on appliance with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water. But switch off the appliance and then cover flame e.g. with lid or a fire blanket.
- ❗ **Warning**  
Danger of fire do not store items on the cooking surfaces.

# INSTALLATION


## First Use of the Appliance

During the first use, fumes and odours may occur which is normal because the adhesive of isolative panel around the hot plate are heated. After having your stove top installed ensure you ask for a certificate of compliance.




## Cooktop & Cut-out Dimensions

Width	930mm
Depth	450mm
Height	60mm

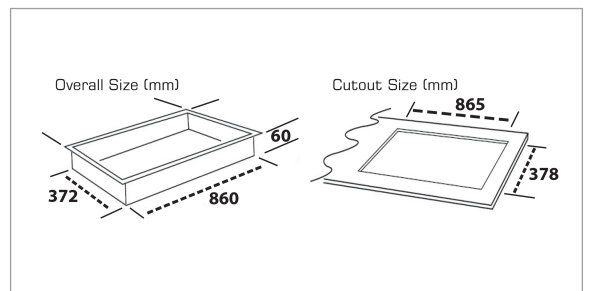

## Technical Parameters: RZ94T-1 Control Panel

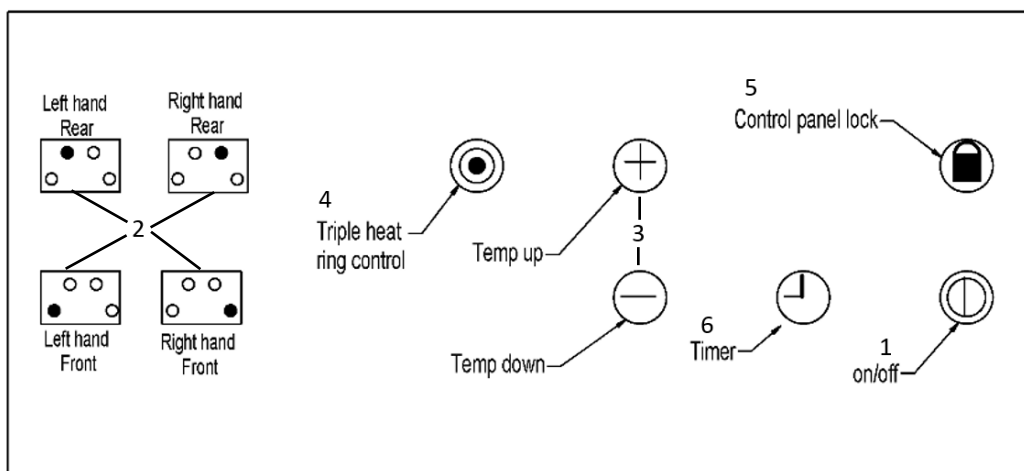



## Important

- ❗ The appliance should be installed and debugged by a qualified installation technician.
- ❗ The appliance should be earthed.
- ❗ The power line should be connected after the appliance have been installed. Brown line live wire, blue line, yellow-green line - earth.
- ❗ The manufacturer declines all responsibility for damage resulting from incorrect earthed, non-compliance with electrical regulations and national safety requirements.

## Warning: Shock Hazard

- ❗ The appliance must be earthed.
- ❗ Before permanently earthing the appliance, it should not connect with power supply.
- ❗ This appliance must connect with an earthed permanent metal electric system or its earth terminal or its wire connects with a grounding connector.

## Connection to Power Supply of Vitro-Ceramic Appliance



Before connecting to the power supply, installation personnel should confirm the following points:

1. Ensure voltage and frequency parameter are conform to the information of the nameplate on the product.
2. Ensure the appliance is capable of the maximum power on the nameplate during installation.
3. This product must be earthed to observe current laws.
4. After the connection of power supply, please do inspection to make sure if all the parts of the ceramic hob work well.

### Connection Between Ceramic Hob and Power Line

---


Mode of connection	<i>Refer to figure</i>
--------------------	------------------------

---

Maximum electricity that the main power circuit needs to bear	32A
---	-----

---


While installing, open the terminal cover, connect brown line to terminal and connect blue line to terminal, connect earthed line to the earthed position of the terminal, by using separately screws to fix tightly, then press power line into fixed-line buckle, tighten the screw, close the terminal cover.

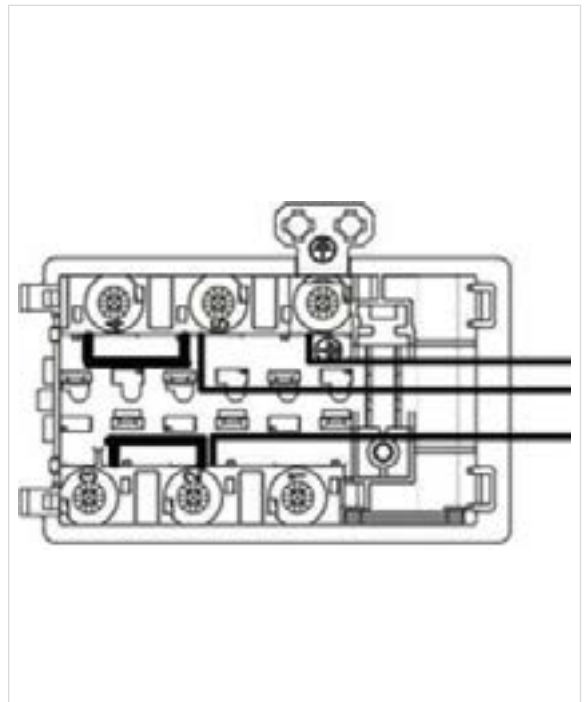

# OPERATION & MAINTENANCE

---

## Start Controller

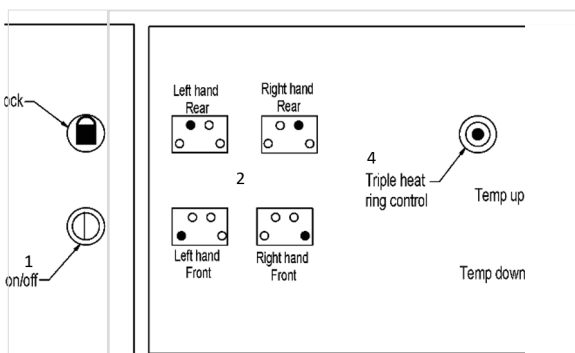

1. Press (1) on/ off button until the light comes on.

## Selecting Which Burner

1. Press (2) to select which burner you wish to use.
2. Press (3) to set heat level (+) to go up (-) to go down.

## To Turn Burner Off

1. Select the burner you wish to turn off
2. To turn the burner off, reduce the heat level by pressing (-) until "0".

## Cool Down Process

1. The cook top will show "H" (waste heat) if the temperature for the surface of the cook top panel is higher than 60°C.
2. If the temperature for the surface of the panel is lower than 60°C, it will show '0'.
3. When the appliance has cooled down on there will be no display.

## Start Double Circle or Triple Circle Heating Zone

1. Select (2) left hand triple circle burner.
2. Select heat (+) up or (-) for down.
3. Select (4) press one for doubled red dot twice for triple (2 red top).

## Double Circle Setting

Select right hand and repeat the same process as above.

### Child Lock

1. Press and hold (5) until you see red light behind lock (5).
2. To remove the lock, press and hold until the red light appears.

### Shut Down Appliance Safely

Controller will be stopped automatically after working for a while.

Power Setting Level	Working time limit in hours
1-2	6
3-4	5
5	4
6-9	1.5


The power display will be "H" after shut down the appliance, until the temperature for the surface is lower than 60°C. If it is in timed status, the timer hour is the working time limit.

### Automatic Heat

It makes cooking easier. You just need stand by, the heat plate will heat by automatic; it will heat with the maximum power for a while, then heat with the power settled.

Power Setting Level	Working time limit in hours
1	1
2	3
3	4.8
4	6.5
5	8.5
6	2.5
7	3.5
8	4.5
9	-

### Turn on Automatic Heat

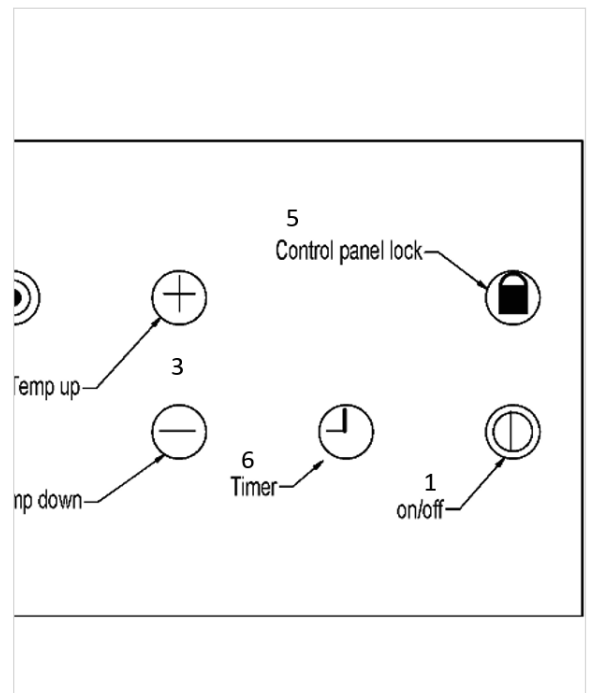


1. Press (2) to choose heat plate.
2. Press-/+ to "9" level then press+ to make "A" and "9" display by turns, and press to set the cooking power you need.

For example: Set "9" level and turn on automatic heat by + (show "9").

3. Press- to set "6" level for cooking power. The heat plate will heat for 2.5 minutes under "9" level, "A" and "6" display by turns. Then the power will turn to "6" level (Show "6").

## Change the Power Setting During Automatic Heat

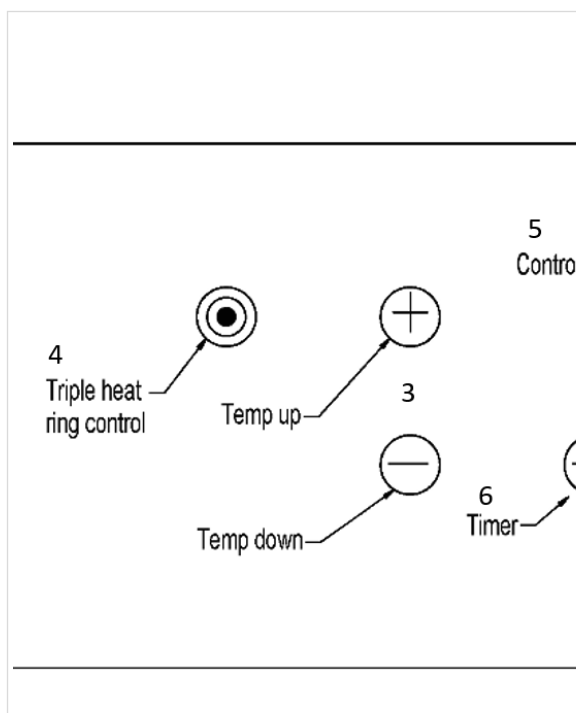


1. Heat plate (2) 12 is effective. Corresponding radix point @ is on.
  2. Choose different power through-/+
- ⓘ Attention:** If it is heated less than 30 seconds under the maximum power, you have to press- to reduce power. If it's heated more than 30 seconds, press- will exit automatic heat mode. When change the power, the time passed will be added up. For example: If you choose "1" level (1 minute), then change it to "4" level (6.5 minutes) after 30 seconds, the automatic heat will run 6 minutes.

## Stop Automatic Heat

1. Heat plate (2) is effective. Corresponding radix point ( ) is on.
2. After 30 seconds, press @ to stop automatic heat.

## Timing Functions

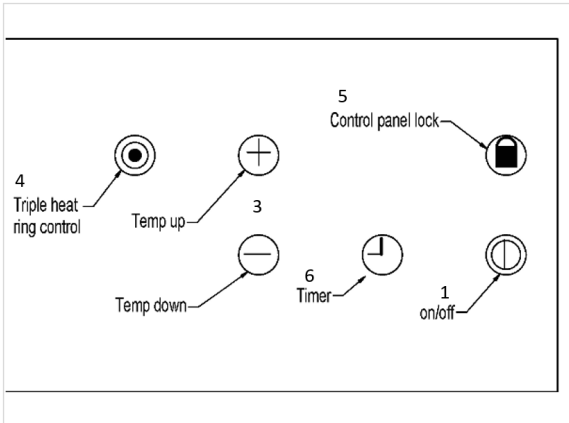

It makes cooking easier. The heat plate will be closed automatic by the control of timer.

## Turn on Timing Functions


1. Heat plate (2) 1 is effective. Corresponding radix point (13) is on.
  2. Set the power (1-9 level)
  3. Press (6) and show "00" on the timer.
  4. Set heat time by pressing-/+ (1-99 minutes) The timing functions have been turned on. And (11) is on.
- ⓘ Attention:** Press-/+ continuously to set the heat time quickly. Only one timer for a heat plate can be operated at the same time.

## Change the Time

The time can be adjusted anytime.

1. Press (6)
  2. Adjust the time by pressing-/+.
- ⓘ Attention:** Press-/+ continuously to set the heat time quickly.

## Stop Timing Functions

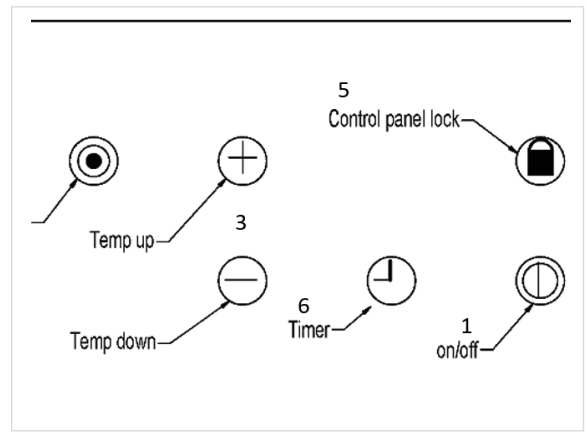

When the time out, it will have warning tone last 2 minutes. You can close the warning tone by pressing any key in this 2 minutes. The heat plate will be off when the time out.


- ⓘ Attention:** If the key are locked, you can only close the warning tone by pressing the locking key.

## Close Timer in Advance

1. Press (6)
  2. Press (3) to set the time to "00".
- ❗ Attention: The timer will be closed when the heat plate is off.

Timing function is only to remind of time, it will not affect the working of all burners.

## RZ94T-1 Circuit Diagram

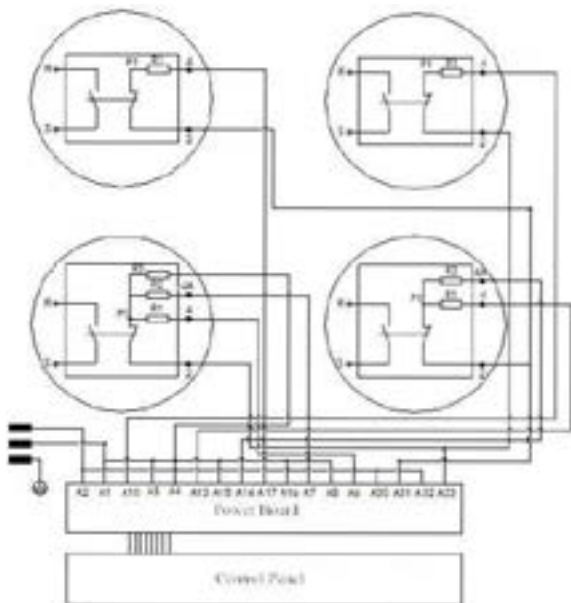

# TROUBLESHOOTING

---

## Malfunction

## Troubleshooting

---

Cooktop doesn't work.

- Check the circuit connection.
- Check fuse and rated current with installation.

---

Lamp is still lighting after cooktop is turned off.

The lamp will be off, when temperature for the surface of panel is lower than 60C.

---

Smoke when cooktop is turned on.

It's normal when you use it the first time. Eliminate the draft in the heat plate or hear area.

---

Cooking zones seem to turn themselves off and on during use.

They cycle off and on to maintain the selected setting or prevent the glass from overheating. This is normal and needs no action.

---

The touch controls are difficult to operate.

- There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.
  - Make sure the touch control area is dry and use the ball of your finger when touching the controls.
-



---

The glass is being scratched.

- Make sure you're not using rough-edged cookware, which is unsuitable.
- Don't use abrasive scourers for cleaning.
- Use cookware with flat and smooth bases.
- For more information, please see 'Cookware and cooking tips'.

---

The cooktop cannot be turned off.

Possible electronics fault. Switch the power to the cooktop off at the wall and call your Authorised Service Centre or Customer Care.

---

## CARE & CLEANING

---

### Important

- ❗ For your safety, switch the power to the cooktop off at the wall before any cleaning. In this case, there will be no 'Hot surface' indication, but the cooking zones may still be hot! Take extreme care.
- ❗ Do not use a steam cleaner to clean your cooktop.
- ❗ Do not use scourers or any harsh/abrasive cleaning agents to clean your cooktop, as these can scratch the ceramic glass or stainless steel.
- ❗ Remove any excess cleaner and wipe dry with a clean cloth or paper towel.
- ❗ Remove the excess with ceramic cooktop cleaner using a sponge or non-abrasive scourer suitable for ceramic glass.
- ❗ Remove stains left by melts and sugary food or spill overs immediately. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface.

### Spill Over On The Touch Controls

- ❗ Switch the power to the cooktop off at the wall.
- ❗ Soak up the spill.
- ❗ Wipe the touch control area with a clean damp sponge or cloth.
- ❗ Wipe the area completely dry with a paper towel.
- ❗ Switch the power to the cooktop back on at the wall
- ❗ If the cooktop is not cleaned after every use and copper or aluminium stains are allowed to burn onto the surface, they may react with the glass and no longer be removable.

# ENERGY GUIDELINES

---

## Reducing the Environmental Impact

- ❶ Using the correct size pot for the element
- ❷ Using a cover when boiling water
- ❸ Cutting food into smaller pieces to reduce the cooking time.
- ❹ Simmering foods instead of boiling vigorously.

## Model: RZ94T-1

LF Wok	110/170/210	850/1700/2300
LR Simmer	140	1200
RR Simmer	140	1200
RF Rapid	120/1700	700/1700

- ❶ Disclaimer: the manufacturer has the right to amend the appliance. If there are some in-conformities between manual and appliance, please subject to the appliance. The manufacture reserve the final explanations.

# WARRANTY & SERVICE

---

## Before You Call for Service or Assistance

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- Your product is correctly installed with Compliance Certificate.
- You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, Customer Care, or contact us +61 39799 9660 through our website [www.goldlinecorp.com.au](http://www.goldlinecorp.com.au).

This cooktop has been designed and constructed in accordance with the following codes and specifications: AS/NZS 4417.1:2012 Regulatory Compliance.

## Conditions of this Warranty

- 1.1. The company agrees to replace, or at its option put in order, any part of this appliance which is proved at time of delivery, or within a period of 24 months to be defective through faulty materials or craftsmanship.

Please note: Transport costs outside of the metropolitan area, are excluded from this warranty. Where the product is installed outside of the normal servicing area of the nearest Service Centre, or authorised agent of the Warrantor. The purchaser is responsible for the expenses incurred sending the unit to and from the service agent or agent's premises or for the agent's costs to the place of installation.

- 1.1.1. Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;

- 1.1.2. Consumer means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Goldline product;
- 1.1.3. Consumer Guarantees means the guarantees under the Australian Consumer Law;
- 1.1.4. You means the Consumer.
- 1.2. Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.
- 1.3. Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Goldline product will be free of manufacturing defects and will perform to the Company's specifications.
- 1.4. The benefit of this warranty extends only to the Consumer as original purchaser of a Goldline product which is installed in a residential property.
- 1.5. This warranty commences on the date of purchase of the Goldline product by the Consumer and continues for the benefit only of the Consumer until the expiry of one (1) year (Warranty Period).
- 1.6. If within the Warranty Period a manufacturing defect is discovered in the Goldline product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship ( Defect) then the Company will, at its option, repair the Goldline product or supply a replacement Goldline product free of charge. A replacement Goldline product may differ from the original product purchased by the Consumer.
- 1.7. This warranty will not apply to any Goldline product:
  - 1.7.1. Installed by any person other than a qualified tradesperson; or
  - 1.7.2. Subjected to misuse, neglect, negligence or accidental damage; or
  - 1.7.3. Operated in any way contrary to any operating or maintenance instructions; or
  - 1.7.4. Improperly handled, installed or maintained; or
  - 1.7.5. Altered or modified prior to or after installation; or

- 1.7.6. Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply.
- 1.8. You must provide proof of your purchase of the Goldline product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9. If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Goldline product for service nor is the service agent traveling costs to and from your home.
- 1.10. If you are required to transport the Goldline product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Goldline product prior to it being received by the Company or its service agent.
- 1.11. You will be responsible for all costs of returning a Goldline product to the Company and for redelivery of the Goldline product by the Company (whether it is the original/repaired/replacement Goldline product) and for any other expenses you incur in claiming under this warranty.

- 1.12. The Company or its service agent will examine any Goldline product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Goldline product in accordance with this warranty.

### **Do Not Send in This Warranty**

Fill out the following details and file with your purchase invoice. **RETAIN & FILE WITH YOUR RECEIPT** Your Purchase Receipt/ Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges. Company name Goldline reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

To register your product, please visit the Goldline website.

**For Customer Record**

Place of purchase:  
\_\_\_\_\_

Company name:  
\_\_\_\_\_

Address:  
\_\_\_\_\_

Date of purchase:  
\_\_\_\_\_

Serial number:  
\_\_\_\_\_

Model number:  
\_\_\_\_\_

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

For warranty service call Goldline at 03 9799 9660 to connect you to your nearest authorized service supplier.

For Spare Parts and  
Service Contact Numbers

58-60 Quantum Close,  
South Dandenong, Victoria,  
Australia, 3175

03 9799 9660  
info@goldlinecorp.com.au  
www.goldlinecorp.com.au



M-F 8:30AM - 4:30PM