

■ Please carefully read the operation instructions before powering on, and keep them safe.

■ Product specifications subject to change without notice.



The Creative Life

## **Two-door Household Refrigerator Operating Instructions**

**P529SBN  
P529SBS  
P529SBW**



## Contents

**Thank you for buying TCL refrigerator. We hereby express our thanks.  
Welcome to use TCL refrigerator. We will do our best to provide you with quality service.**

Safety instructions .....	P2
Safety information .....	P5
Safety information .....	P6
Product introduction .....	P7
Handling and placement .....	P8
Preparations prior to use.....	P9
Operation keys .....	P10
Ice-making .....	P13
Disassembly and assembly method of accessory .....	P14
Care and maintenance .....	P14
Failure analysis .....	P15
Non-failure .....	P15
Technical parameter.....	P16
Packing list.....	P17

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

4. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

5. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

6. **WARNING:** Do not damage the refrigerant circuit.

7. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

8. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

9. This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.

## **1.Warning**

**Warning:** No barrier is allowed around the appliance or in the embedded structure in order to ensure the free ventilation.

**Warning:** Never damage the refrigerating circuit.

**Warning:** Never place liquid beverages or food contained in glass containers in the freezing chamber as the glass container may crack.

**Warning:** If powered off, the refrigerator shall be powered on 5min later to reduce the risk of damaging the compressor.

**Warning:** If any live part, abnormal noise, smell, smoke or other abnormality is found during use, it is necessary to power off the appliance immediately and contact the after-sales service department of the Company timely.

**Warning:** Never place your finger or hand under the refrigerator, especially rear bottom of refrigerator; otherwise, you may be hurt by sharp edges.

**Warning:** The children must not play or climb the refrigerator. The operation by the children must be supervised by their parents for fear of danger.

**Warning:** Never place your hand between the doors to open or close door for fear of jamming your finger. The door handle shall be used to open or close the door.

**Warning:** Under the rated climate types SN, N and ST, the operating ambient range of the appliance is 10°C~38°C; under the climate types SN, N, ST and T, the operating ambient range of the appliance is 10°C~43°C. If the appliance operates outside the rated climate type (ambient temperature range), the appliance may not maintain the satisfying interior temperature.

### **Warning:RISK OF CHILD ENTRAPMENT**

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigeration products are still dangerous – even if they will sit for "just a few days." If you are getting rid of your old appliance, please follow these instructions to help prevent accidents.

Before You Throw Away Your Old Refrigeration Product:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

**Warning:**If you wish to dispose of this refrigerator, please contact your local authorities and ask for the correct method of disposal.

**Warning:**When positioning the appliance, ensure the supply cord is not trapped or damaged.

**Warning:** Do not connect multiple portable socket-outlet or portable power supplies.



Risk of Fire:The refrigerant of your refrigerator is R600a,it's highly Flamible.

## **2. Caution**

**Cautions:** The power supply of this product must be uniform with the power supply mentioned on the nameplate, and the standard independent 3-hole socket shall be used (above 10A, and reliably grounded). One socket must not be shared by more than one appliance; otherwise, fire may be caused due to overheating.

**Cautions:** Never pull the power cord by hand. It is necessary to hold and unplug the power connector from the socket to disconnect the power supply. The power cord or connector must not be touched by wet hands for fear of electric shock.

**Cautions:** The power cord must not be squeezed by the refrigerator or any heavy load, and the power cord shall not be bent in an extreme position. Damaged or peeling of the power cord may result in fire or electric shock. If the power cord is broken or cut, please contact the after-sales service department immediately.

**Cautions:** No flammable or explosive matter or corrosive acid or alkaline matter is allowed in the refrigerator.

**Cautions:** The refrigerator must not be used in the rain or in direct sunlight.

**Cautions:** It is forbidden to place the containers with fluid on top of the refrigerator because breakage or tipping of the container may affect the electrical insulation of refrigerator and result in electric shock or fire.

**Cautions:** The refrigerator must not be disassembled or modified without permission. The repair of refrigerator must be performed by an authorized service agent or qualified technician .

**Cautions:** In case of leakage of any flammable gas such as natural gas, it is necessary to close the leaking valve first and then open the window for ventilation. Do not unplug the refrigerator connector immediately to prevent the risk of fire or explosion due to an electric spark.

**Cautions:** Effervescent drinks should not be stored in the freezer compartments or cabinets.

**Cautions:** Do not exceed the storage time(s) recommended by the food manufacturers for any kind of food.

**Cautions:** Be mindful of frozen food in storage in the event of an extended non running of the refrigerating appliance (interruption of power supply or failure of the refrigerating system).

**Cautions:** Preparations need to be taken when the refrigerating appliance is switched off and taken out of service temporarily or for an extended period (e.g. emptied, cleaned and dried, and the door(s) or lid(s) propped ajar).

## Safety information

---

### Daily use

Do not place any hot items in the fridge as it may cause damage to the plastic or operation.

Appliance's manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions.

### Care and cleaning

Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.

Do not clean the appliance with metal objects.

Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

### Installation

**Important!** For electrical connection carefully follow the instructions given in specific paragraphs.

Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.

It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.

Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.

Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, condenser) to prevent possible burn.

The appliance must not be located close to radiators or cookers.

Make sure that the mains plug is accessible after the installation of the appliance.

## Safety information

---


### Service


Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person. This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

### Energy saving


- Don't put hot food in the appliance;
- Don't pack food close together as this prevents air circulating;
- Make sure food don't touch the back of the compartment(s);
- If electricity goes off, don't open the door(s);
- Don't open the door(s) frequently;
- Don't keep the door(s) open for too long time;
- Don't set the thermostat on exceeding cold temperatures;
- Some accessories, such as drawers, can be removed to get larger storage volume and lower energy consumption.

### Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol ♻ are recyclable.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Packaging materials

The materials with the symbol  are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

### Disposal of the appliance

As a responsible supplier, we care about the environment. As such, we ask that you follow the correct disposal procedures for your product and packaging. This will help ensure that your product

## **Safety information**

---

 
is recycled in a manner that protect the environment and your health.

You must dispose of your product and packaging according to local laws and regulations. Because this product contains electronic components and possibly batteries, this product and its accessories must be disposed separately from your household waste when the product reaches end of life. Contact your local authority to learn about disposal and recycling. The product should be taken to your local collection point for recycling. Please note that regulations may change, so always consult with your local authorities at time of disposal.

The LED Lamp is not user replaceable. Contact your service agent for more details.



## Product introduction

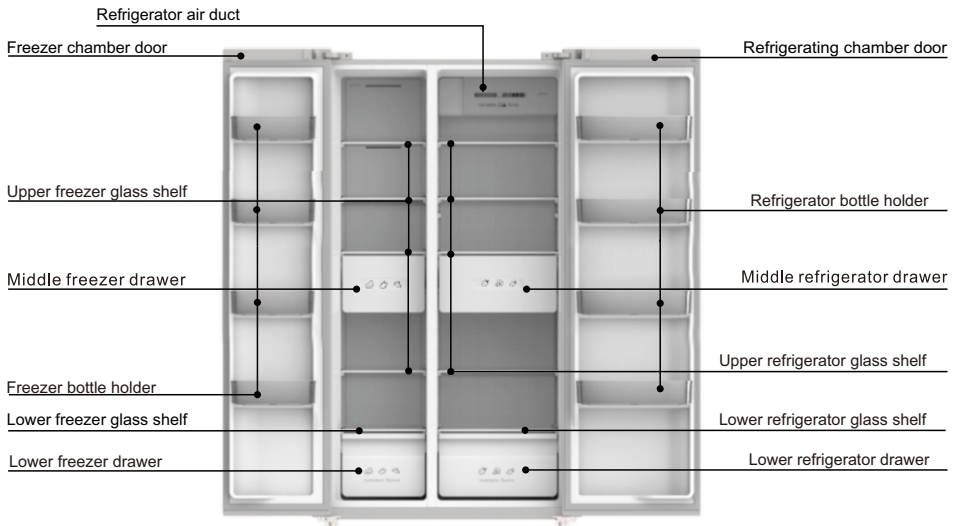


The pictures are for reference only. Please refer to the object

### ***Warm prompt:***

 
Product specifications subject to change.

## Handling and placement


Please leave the minimum recommended space on the sides, back and top of the refrigerator

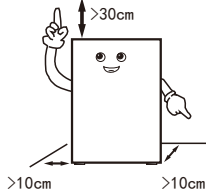

 
Do not trolley the refrigerator from the front or back

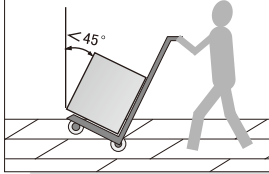

 
The refrigerator shall be placed in an environment which is dry, has good ventilation, far from direct sunshine and heat source.

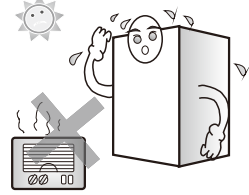

 
The refrigerator shall be placed on a flat and firm surface. If the ground is not flat, adjust the adjusting leg to keep it level.

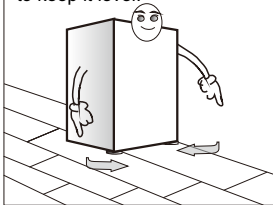

 Never place the refrigerator into a very cold environment that may get frozen.

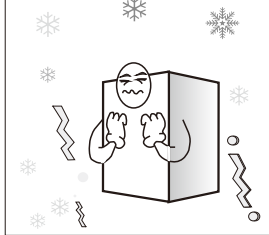

 Do not operate the refrigerator on the foam base it was shipped on. This will help heat dissipation and reduce the risk of fire.

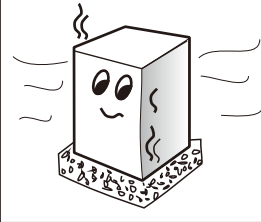


### **Warm prompt:**

- When handling the refrigerator, at least two people are required – one lifts the top rear part, the other one handles the bottom .
- When moving the refrigerator, the lower runner may damage and scratch the floor. If you need to move the refrigerator for a long distance, the internal accessories must be fixed using adhesive tape. Otherwise, the accessories may get damaged by crashing into each other.
- Please place the refrigerator in a position with small exposure to vibration.
- Sufficient clearance shall be left around the refrigerator. If the clearance is too small or goods are placed on the top or close to the side, the heat dissipation of refrigerator will be affected, and thus to cause unnecessary electric energy waste as well as burn out of the wall and other goods; the contact between the back and wall will cause vibration and noise;
- Adjust the front part and adjusting leg of the refrigerator to level it. An unlevelled refrigerator will cause vibration and noise.

## Handling and placement

**This refrigerating appliance is not intended to be used as a built-in appliance**

 The outline dimension of the product and the space needed by the use of product are shown in the following pictures:

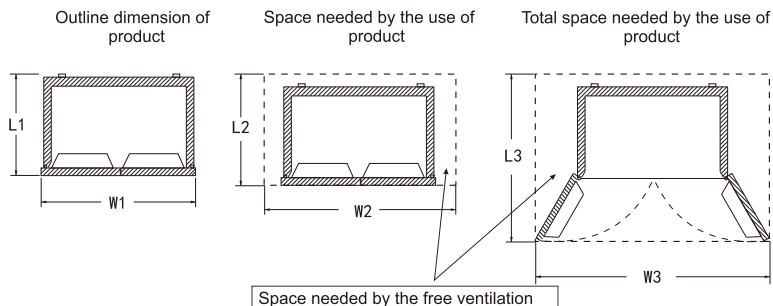

Unit: mm

Product model	Outline dimension of product		Space needed by the use of product		Total space needed by the use of product	
	L1	W1	L2	W2	L3	W3
P529SBN P529SBS P529SBW	630	920	>L1+100	>W1+200	>L1+380	>W1+600

## Preparations prior to use

1. Remove all packing materials such as adhesive tape, plastic bags, etc., especially the foam base.
2. Use a warm wet cloth to clean both interior and exterior of the refrigerator, (neutral detergent can be added to warm water).
3. After leveling and cleaning the refrigerator, keep it upright for about 2 hours before plugging in the power for the first time. Let the refrigerator run for 2 to 3 hours before storing foods.

1. Remove fixing tape

Wipe with warm and wet cloth

In hot summer, 24 hours are needed to fully freeze the food. Check the refrigerating condition on the second day.

2. Connect to power

3. Store food after connecting to power for 2-3 hours

Do not open the doors frequently to save electricity.

The plastics deodorant will disappear automatically after freezing for a while.

The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.

Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.

Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.

Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.

Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Please refer to the product introduction picture on page 5 for the placement of accessories.

**Operation and diagram of the electronic control board**



The above is the computer control board of the product

## Operation keys

### **Powered on for the first time**


When it is powered on for the first time, the refrigerator will start the intelligent mode and run at 5 °C for the refrigerator chamber and -18 °C for the freezer chamber.

### **Child lock function**

In the unlocked state, enter the "child lock" function:

Automatically turn on the child lock function: There is no key operation on the display; after 30 seconds, the child lock function will be automatically turned on;

the child lock icon "" will be lit; the keyboard will be locked;

Exit the child lock function: When the child lock icon "" is lit, press and hold the "long press for 3 seconds to unlock" button for 3 seconds to unlock.

### **Manual temperature adjustment**

When there is no key operation on the display within 30 seconds, the display will go out automatically, and the keyboard will be automatically locked. When the display is off, press the button for the first time to wake up the display; press and hold the "long press for 3 seconds to unlock" button for 3 seconds to unlock, and then press the button again to make the button function effective.

### **Refrigerator chamber temperature adjustment (2°C ~ 8°C)**

In the unlocked state, repeatedly press the "temperature area" button until the refrigerated storage temperature area is lit, and then presses the "temperature" button to adjust the temperature of the refrigerator chamber. The temperature of the refrigerator chamber should be set between "02" - "03" - "04" - "05" - "06" - "07" - "08" - "OF" - "02". Select the appropriate temperature which will be set after releasing the button.

### **Freezer chamber temperature adjustment (-24°C ~ -15°C)**

In the unlocked state, repeatedly press the "temperature area" button until the freeze storage temperature area is lit, and then presses the "temperature" button to adjust the temperature of the freezer chamber. The temperature of the freezer chamber should be set between "-24" - "-23" - "-22" - "-21" - "-20" - "-19" - "-18" - "-17" - "-16" - "-15" - "-24". Select the appropriate temperature which will be set after releasing the button.

### **Power Cool function**

When the refrigerator is under unlock state, press "function" button repeatedly till the "Power Cool" icon blinks, after that, stop the key operation and wait for 3 seconds to enter refrigerator chamber power cool function. You can quit the power cool function with the same operation.

The Refrigerator will automatically quit the power cool function after entering it for 2 hours.

Under "Power Cool" state, the setting temperature for the refrigerator chamber is displayed by 2°C till quitting the function. Under "Power Cool" state, when setting other functions, you may automatically quit the power cool function. Under "Power Cool" state, you will automatically quit the power cool function when the refrigerating door is opened over 3 minutes. (Under "Power Cool" state, when setting other functions, you may automatically quit the power cool function.)

### **Power Freezing function**

When the refrigerator is under unlock state, press "function" button repeatedly till the "Power Freezing" icon blinks, after that, stop the key operation and wait for 3 seconds to enter freezer chamber power freezing function. You can quit the power freezing function with the same

## Operation keys

operation. Once entering "Power Freezing", the refrigerator will automatically quit the power freezing function after it is under "Power Freezing" for 4 hours.

Under "Power Freezing" state, the setting temperature for the freezer chamber is displayed by  $-32^{\circ}\text{C}$  till quitting the function. Under "Power Freezing" state, when setting other functions, you may automatically quit the power freezing function. Under "Power Freezing" state, you will automatically quit the power freezing function when the freezing door is opened over 3 minutes. (Under "Power Freezing" state, when setting other functions, you may automatically quit the power freezing function.)

### **Smart function**

When the refrigerator is under unlock state, press "function" button repeatedly till the "smart" icon blinks, after that, stop the key operation and wait for 3 seconds to enter intelligent function. You can quit the smart function with the same operation. When the smart function is enabled, the refrigerator will realize self-monitor for the state of each chamber, so as to run with the most effective way. Under the smart state, the refrigerator may automatically enter "Power Cool" or "Power Freeze" function according to the temperature rise in the refrigerator and freezer chamber. (Under smart state, when setting other functions, you may automatically quit the smart function.)

### **Refrigeration shutdown function**

In the unlocked state, repeatedly press the "temperature area" button until the refrigerated storage temperature zone is lit, and then presses the "temperature" button to adjust the temperature of the refrigerator chamber. When the temperature range of the refrigerator chamber is selected to "OF", stop the key operation, and then enter the refrigeration shutdown function. Set the set temperature of the refrigerator chamber to non-"OF" to exit the refrigeration shutdown function. (Under the refrigeration shutdown function, when other functions are set, the refrigeration shutdown function may be automatically exited. Note: Before the refrigeration shutdown function is activated, please take the food out of the refrigerator chamber.)

When the "refrigeration shutdown" function is turned on, the refrigerator chamber will enter the off state.

### **Power off memory**

When power goes off, the instantaneous working state at the time of power off will be locked. After power on, it will still work according to the setting before power off.

### **Door alarm**

If the refrigerator or freezer door is not closed tightly or stays open for more than 1 minute, beep issue "Didi, Didi". Press any key to pause the alarm; send an alarm again after 1 minute; close the refrigerator or freezer door tightly to stop the alarm.

### **Over temperature warning of freezer chamber**

When the power is switched on and the temperature in the freezer chamber is higher than  $-12^{\circ}\text{C}$ , the freezer zone indication is visible, and the display flashes. This is an indication to show that the freezer temperature is still high, and it may be worthwhile to wait to put in frozen food to allow time for the freezer to get cold. Press any key to display the temperature of the freezer chamber when powered on. Press the key again, or 10 seconds later, it will return to the normal display state.

### **Display protection function**

If there is no any key operation within 30 seconds, the refrigerator will enter the display protection function, and the keyboard will be automatically locked. In the display protection mode, press any key to exit the display protection function

## Operation keys

### **Foods storage**

#### **Refrigerating chamber (2°C~8°C)**

--The refrigerating chamber is mainly used for storing short-term foods, like milk, eggs and bottled drinks.

--Vegetables, melons and fruits shall be put into the fruit and vegetable box to prevent water loss.

--The cooked foods shall be put into the refrigerator after packaging with the preservative bags, to prevent power from increasing.

#### **Freezing chamber (-24°C~-15°C)**

--The freezing chamber is used for the foods to be stored for long-term.

--Fish and meat to be frozen shall be cut into small pieces, packaged with preservative bags separately and then put into the frozen drawer.

--Glass containers or the sealed containers filled with liquid shall not be stored in the freezing chamber, to prevent the risk of bursting due to freezing.

--The fresh foods shall not be stored together with the frozen foods.

--Do not place food close to inside wall in freezer lest food and wall should be frozen together.

 
#### ★ ★ Warm tips:

Stored food, if any, must not block the air duct outlet and return port as this will affect the performance.

Never place hot foods or liquids in the refrigerator or freezer. Always wait until the foods or liquids cool to room temperature.

#### **Ice making**

Fill the ice tray with water, then place it in the freezer. When the water in the ice tray turns to ice, twist the ice tray and drop the ice into a container.

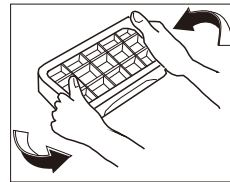

## Operation

### Disassembly and assembly method of accessories

--Glass shelves in the refrigerator compartment: the height of the shelves are adjustable, which facilitates the storage of articles with different volumes. Pull the shelves slightly outwards and upwards to take out.

 
--Crisper Box: for storing vegetables and fruits. It can be easily taken out by pulling outwards.

--Freezer Drawer: storing foods to be preserved long-term, such as meat and fish. It can be easily taken out by pulling outwards and lifting upwards.


Note: It is recommended that large pieces of meat are cut into small pieces, as it will be very difficult to cut when frozen. The quick-freezing foods shall be distributed uniformly and stored together after being frozen.

--Refrigerator Door Shelves: for storing eggs, different kinds of bottled drinks and other items. To remove, gently squeeze from both sides at the same time and make sure the clips are dislodged, and then slowly lift out.

--Caution: do not pull out the door shelf forcibly when it is dismantled, so as not to damage the refrigerator

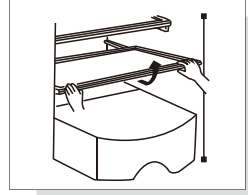

 Take out by pulling upwardly and outwardly in a slight way

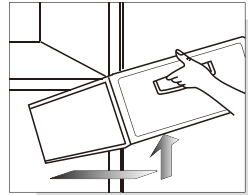

Take out by pulling outwardly and upwardly in a slight way

## Care and maintenance

It is suggested to maintain the refrigerator once per month;

--Unplug the power plug to prevent from electric shock;

--Use wet cloth or neutral detergent (cleanser essence to wipe off the oil contamination and other dirt. Then completely wipe off the detergent.

--Do not use alkaline detergent, soap powder, gasoline and alcohol, talcum powder etc.; otherwise the coats or plastics may be damaged;

 
--Regularly clean the refrigerator body and clear the ground dust to keep the refrigerator clean.

Inspections after maintenance:

1. Whether there are damages to the power line and plug;
2. Whether there is dust on the power plug;
3. Whether there is abnormal heat on the plug;
4. Whether the socket is loose;
5. Whether the plug is totally inserted.

### Note:

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

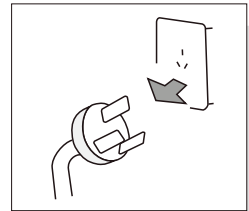

Unplug the refrigerator plug before cleaning



Please use neutral detergent



---

## **Failure analysis**

The following items shall be inspected before occurring failures which require maintenance:

### **Failures:Refrigerator does not work,The refrigeration effect is poor**

Causes:1. Check the connection of power supply. 2. Check whether the refrigerator is exposed to direct sunlight or whether there is heat source nearby. 3. Check whether there is heat dissipation space around refrigerator.

Remedies:1. Connect the power supply. 2. Move the refrigerator to a place without direct sunlight and heat source. 3. Leave sufficient space between refrigerator and wall.

### **Failures:Foods in refrigerating chamber are frozen**

Causes:1. Check whether the setting temperature is too low. 2. Check whether foods with too much water are too close to the rear wall.

Remedies:1. Adequately increase the temperature. 2. Move the foods with too much water to the door side of glass shelf

### **Failures:There is abnormal sound in refrigerator**

Causes:1. Check whether the bottom of refrigerator is stable. 2. Check whether the refrigerator is too close to the wall. 3. Check whether the refrigerator touches other objects.

Remedies:1. Adjust the bottom adjusting leg to stabilize the refrigerator. 2. Leave sufficient space around refrigerator. 3. Remove the obstacles.

### **Failures:There is abnormal odor in refrigerator**

Causes:1. Check whether the foods are sealed for storage. 2. Check whether the refrigerator is clean. 3. Check whether the foods are stored for too long time.

Remedies:1. Sealed foods for storage. 2. Regularly clean the refrigerator. 3. Do not store foods for too long time.

---

## **Non-failures**

### **Phenomenon:Fever or hot on two sides and spacing part surface between refrigerating chamber and freezing chamber.**

Cause:Refrigerator pipes (condenser, anti-fog pipes) are on two sides and front part of refrigerator for heat dissipation and to prevent from condensation.

### **Phenomenon:The door is too tight and not easy to open**

Cause:Reopening of the door immediately after closing it is hard because hot air enters the refrigerator and contracts to produce pressure difference. It is easy to open the door after a while.

### **Phenomenon:There is water ripple in refrigerator**

Cause:When starting or stopping the compressor, the refrigerant will make such sound; Water produced after defrosting will also make such sound.

### **Phenomenon:There is "Click" sound or tick sound in refrigerator**

Cause:Shrinkage and swelling of case will make such sound;When the case is cold or the door is opened, this sound will occur;Phenomenon:There is hum sound in refrigerator

Cause:Running of compressor will make such sound (if the refrigerator is not leveled, this sound will be louder)

### **Phenomenon:There is condensation or frosting freezing chamber door surface or food surface**

Cause:Temperature or humidity around the refrigerator is high;The door is opened for too long time;The foods with too much water are not sealed or tightly wrapped

### **Phenomenon:There is condensation on the built-in light surface**

Cause:Light will produce heat after being lit, and the door is opened for too long time. So there is temperature difference, and thus the light case will have condensation.

### **Phenomenon:There is condensation and water mist on body**

Cause:Humidity around refrigerator is high, and the moisture in the air will gather in the case to form condensation

## Technical parameter

Model	P529SBN	P529SBS	P529SBW			
Climate type	T	T	T			
Electric shock resistance	I	I	I			
Star sign	<b>* C**</b>	<b>* C**</b>	<b>* C**</b>			
Total Volume	505L	505L	505L			
Fresh food compartment	324L	324L	324L			
Volume of Freezer	181L	181L	181L			
Volume of Two-star Section	/	/	/			
Power type	220-240V~/50Hz	220-240V~/50Hz	220-240V~/50Hz			
Rated current	1.7A	1.7A	1.7A			
Power consumption	399 kWh/a	399 kWh/a	399 kWh/a			
Lamp power	3W	3W	3W			
Weight	83kg	83kg	83kg			
Dimension	920x630x1768mm	920x630x1768mm	920x630x1768mm			
Refrigerant and charge amount	R600a,75g	R600a,75g	R600a,75g			
Noise Volume	41dB(A)	41dB(A)	41dB(A)			

## Packing list

Annex \ Model	P529SBN	P529SBS	P529SBW			
Refrigerating shelf	4	4	4			
Freezer shelf	5	5	5			
Fruit and vegetable box cover	1	1	1			
Fruit and vegetable box	1	1	1			
Ice Tray	1	1	1			
Egg Tray	1	1	1			
Refrigerating door bottle bracket	4	4	4			
Freezer door bottle bracket	4	4	4			
Freezing drawer	1	1	1			
Middle freezer drawer	1	1	1			
Middle refrigerator drawer	1	1	1			
Operating instruction	1	1	1			

## Safe recovery instructions

### Disposal

Old appliances still have some surplus value. An environmentally friendly approach will ensure that valuable raw materials are recycled.

The refrigerants used in your equipment and insulation materials require special handling procedures. Make sure there is no pipe damage on the back of the equipment before handling. Up-to-date information on the options for disposing of old equipment and packaging from old equipment can be obtained from the local municipal office.

Correct Disposal of this product.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Table 1 Climate classes

Class	Symbol	Ambient temperature ranges°C
Tropical	T	+ 16 to + 43

Extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';

temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';

Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 38°C';

Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 43°C';

### **Dear customer**

if you need customer service, please check warranty card for further information.



TCL Electronics Australia Pty Ltd.  
ABN 83 111 032 896  
Telephone: 1300 738 149  
[sales.au@tcl.com](mailto:sales.au@tcl.com)  
[www.tcl.com/au](http://www.tcl.com/au)

Material number:8B110-001059  
Edition:202106-A.1