

### DT-360F Dual Temp / Full Size / Glue Gun

Dual Temperature for High and Low bonding.

High Temp Bond: Wood, metal, plastic, fabric, leather, ceramic, etc.

Low Temp Bond: Lace, ribbon, floral, lightweight fabric, foam, etc.

Temperatura doble para una unión alta y baja temperatura.

Unión a alta temperatura: Madera, metal, plástico, tela, cuero, cerámica, etc.

Unión a baja temperatura: Encaje, cinta, diseños florales, tela liviana, espuma, etc.

Double température pour une adhérence à haute et basse température.

Adhérence à haute température: Bois, métal, plastique, tissu, cuir, céramique, etc.

Adhérence à basse température: Dentelle, ruban, bouquet, tissu léger, mousse, etc.



#### \*\*Safety Features

**Safety Fuse:** Shuts the glue gun off automatically in the event of a short.

**Side Fins:** Allows glue gun to lay safely on its side, preventing glue back up.

**Insulated Nozzle:** Safe guards against burns.

**Auto Shut Off:** A timer shuts the glue gun off after 30 mins of non-use.

#### \*\*Características de Seguridad

**Fusible de seguridad:** Apaga automáticamente la pistola encoladora en caso de un cortocircuito.

**Aletas laterales:** Permiten posar la pistola de costado con seguridad, evitando que el pegamento se apilrese en su interior.

**Boquilla aislada:** Protege contra quemaduras.

**Apagado automático:** Un temporizador apaga la pistola encoladora después de 30 minutos si no se ha usado.

#### \*\*Caractéristiques de Sécurité

**Fusible de Sécurité:** Arrête automatiquement le pistolet à colle en cas de court-circuit.

**Alettes Latérales:** Permet de laisser reposer le pistolet sur le côté, prévenant tout reflux de colle.

**Buse isolée:** Prévient les brûlures.

**Arrêt Automatique:** Une minuterie éteint le pistolet à colle après 30 minutes d'inactivité.

## Instructions

### WARNING

When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify this plug in any way.

**WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. (This warning is given in compliance with California's Proposition 65.)

#### Safety Information

1. Work environment should be clean, dry, well lit and clear of flammable materials.
2. Do not use outdoors or near water.
3. Do not expose gun to rain, moisture or direct sunlight.
4. Keep away from children and store locked up when not in use.
5. Do not carry gun by cord or unplug from outlet by pulling electrical cord.
6. Disconnect gun when not in use.
7. Gun is on when plugged in. Do not leave unattended.
8. Do not use hot melt glue to replace structural fasteners.
9. Do not use extension cords.
10. Do not use any material other than recommended glue sticks.
11. Avoid accidental discharge. Do not touch glue stick or trigger except to dispense glue. Feeding or pushing glue stick with too much force into heated gun may cause hot glue to be unexpectedly expelled from nozzle or to flow back from inlet tube.



ANSI Z87.1

12. Allow glue gun to cool before storing.
13. Save these Safety Instructions for future reference.

#### Operating Instructions

1. Plug into 120V electrical outlet.
2. Insert 0.43" diameter glue stick into back of glue gun (feeder tube).
3. Allow gun to heat for 5 minutes.
4. For safety: Auto Shut Off feature shuts glue gun down after 30 mins of non use. Power light is off. To turn glue gun back on simply squeeze the trigger again and glue gun will start to heat up.
5. Squeeze trigger to dispense glue. More glue is dispensed by squeezing trigger again. Continue glue flow by adding additional glue sticks. **Note:** Requires approximately 2 glue sticks for initial start up.
6. Press surfaces to be glued together immediately.
7. Do not pull glue sticks from gun. If changing glue, feed remainder of glue stick through gun.
8. Unplug after use and allow to cool before storing.

**Dual Temp Glue Gun:** Use High Temperature for wood, plastic, metal, ceramics magnets, leather, paper, fabric, and other porous and non-porous materials. Low Temperature for lace, foil, ribbon, floral foam, lightweight fabric & other delicate materials.

#### Troubleshooting

- Glue gun will not heat up:** Make sure glue gun is plugged into a 120V electrical outlet. If gun still does not work, the internal fuse of the glue gun may be blown and the glue gun is not repairable. **Do not use.**
- Glue backs up at inlet tube:** Glue sticks may be the wrong size. Use only the recommended 0.43" diameter glue sticks. Note: Do not elevate front of glue gun. Always use side stands or attached stand.
- Glue gun shuts off:** Auto Shut Off feature shuts glue gun down after 30 mins of non use. Power light is off. To turn glue gun back on simply squeeze the trigger again and glue gun will start to heat up.

**CAUTION** Do not touch heated glue gun nozzle or melted glue; temperature can reach 380°F. If accidental contact occurs, do not remove glue. Immediately put burned area into cold water. Always wear protective clothing - safety glasses - gloves - long sleeve shirt - long pants. Keep away from flammable materials. Manufacturer assumes no responsibility for consequential or indirect damages from the use of this product.

## Instrucciones

### ADVERTENCIA

Cuando use herramientas eléctricas, siempre debe seguir las precauciones básicas de seguridad para reducir el riesgo de incendio, descarga eléctrica y lesiones personales. Este aparato tiene un enchufe polarizado (una clavija es más ancha que la otra). Para reducir el riesgo de choque eléctrico, este enchufe se destina a encayar en un tomacorriente polarizado en una única dirección. Si el enchufe no encaja completamente en el tomacorriente, reinvertir el enchufe. Si aún así no encaja, comuníquese con un electricista calificado. No modifique este enchufe de ninguna manera.

**ADVERTENCIA:** Este producto contiene sustancias químicas que el Estado de California sabe que provocan cáncer, defectos de nacimiento u otras complicaciones reproductivas. (Esta advertencia se da en cumplimiento con la Proposición 65 de California).

#### Instrucciones de Seguridad

1. El área de trabajo deberá estar limpia, seca, adecuadamente alumbrada y libre de todo tipo de material inflamables.
2. No utilice la pistola al aire libre o cerca del agua.
3. No la exponga a la lluvia, humedad o directamente al sol.
4. Manténgala lejos del alcance de los niños y guárdeala bajo candado o cerrojo cuando no esté en uso.
5. No cargue ni agarre la pistola por el cordón. No la desconecte jalando el cordón eléctrico.
6. Desconecte la pistola cuando no esté en uso.
7. La pistola se prende automáticamente cuando se conecta. Nunca la deje desatendida.
8. Nunca utilice pegamento en lugar de broches estructurales.
9. No la utilice con extensión eléctrica.
10. No utilice ningún otro material que no sean las barras adhesivas recomendadas.



ANSI Z87.1