

# 用戶手冊



# **NEP-TW1 PLUS**

使用前請詳細閱讀

感謝您購買TW1 PLUS 無線立體聲耳機,在使用本產品之前,您必須事先 了解和熟悉您手機的藍牙功能,和細閱此用戶手冊。

# 安全規則

- 為確保安全,敬請遵守此手冊中提到的規則。在使用本產品之前。 我們建議您閱讀此手冊。
- 2. 請著重提防鋒利的澆緣,不平的表面,金屬件,配件和包裝,以免出 現任何可能的傷害。
- 3. 請不要拆除,維修此產品,這樣可能會導致起火,電子擊穿甚至徹底 損壞本產品,這些都不在保修之列。
- 4. 請不要用油及其他揮發性液體擦拭本產品。
- 5. 請不要在有危險的地方使用本產品。

所有產品説明,請以英文版本為準

# 配件清單





用戶手册



為了獲得最佳的音頻體驗,請嘗試每一個不同尺寸的耳帽,佩戴 正確後,耳朵內應感覺到緊貼,配戴穩固,



# 耳機充電方式

請在第一次使用前先將耳機和充電座的電池充滿電. 磁性接觸式充電,充電時紅燈恆亮,充滿電紅燈滅.



# 快充功能

充電座可支持耳機持續使用約9小時.

當耳機處於低電狀態時,給耳機充電15分鐘可讓耳機持續工作至少1.5小時

充電狀態下: LED指示燈數量表示電量狀態,充滿電後,充電座底部4個LED燈 均為藍燈長亮.

關機狀態下: LED指示燈數量表示電量狀態。

電量0%-25%:一個LED指示燈亮

電量25%-50%:兩個LED指示燈亮 電量50%-75%:三個LED指示燈亮

電量75%-100%:四個LED指示燈亮











色指示燈長亮,充滿後指示燈熄滅.

手動開機:長按觸摸鍵約2秒,藍燈閃亮,耳機開機並有提示音

自動開機: 打開充電座蓋,耳機藍燈常亮一下後熄滅,耳機自動開機,並有提示音

手動閣機: 長按觸控鍵約至耳機指示燈紅燈堂亮一下後熄滅,並有提示音

自動關機: 耳機放回充電座並合上蓋子,耳機自動關機並充電.充電座紅





接聽/結束雷話:

基本操作説明

輕觸一下觸控鍵接通電話: 通話中輕觸一下觸控鍵掛斷電話

充電完成後,請把充電線從機身拔出,避免讓產品長期處於充電狀態。

為產品充電,如因充電器之輸出電壓和電流超出指定,這會對本產

品造成嚴重破壞,產品之保用將同時失效。

Safety Warning

to charge the product.

請勿使用快速充電器 (輸出電壓8V以上) 為產品充電。

product, and the product warranty will be invalid.

Do not use the quick charger (output voltage 8V above)

請使用充電器(要求輸出電壓和電流不大於 5V/1A)和本產品的原配充電線

Please disconnect the USB cable after charging. Product should not be

charging in a long time. Please use the charger or adaptor with output

voltage and current (max) 5V/1A and product original charging cable for the product charging. If the output voltage and current of the charger exceeds the requirement, it will cause severe damage to the

# 拒接來電:

來雷中.快按2下且機拒接來雷

耳機正在播放音樂時,按1下觸控鍵暫停播放

且機處於連接狀態時,按1下觸控鍵播放音樂

# 單耳使用説明

### 單耳配對(手動)

隨意選取一個耳機,長按觸控鍵2秒,開機至藍燈閃爍,然後按2下觸控鍵, 耳機LED燈紅藍交替閃爍, 打開手機藍牙列表,搜索 "TW1 PLUS" 並點擊連接,耳機與手機連接成功,耳機LED燈轉變為藍燈閃爍,



### 單耳配對(自動)

隨意選取一個耳機並確保餘下一個耳機留在充電座裡,和合上充電座蓋子,取 出的耳機自動開啟,等待至耳機紅藍燈交替閃爍,點擊手機配對名 "TW1 PLUS"與手機連接,手機連接成功後,耳機藍燈閃爍.



注·加兩個耳機之間已有互連紀錄 要取其中1個作單耳使用時 請先清空該耳 機的連接紀錄,再按上述方法連接使用(清空方法,見後面描述).

### 第二次或後續使用:

長按觸控鍵2秒開機,開機後耳機會與之前連接過的手機 自動回連(單個耳機5分鐘沒有連接到藍牙設備,藍牙耳機自動關機。)

Signeo Design International Limited 端小心保存

產品網上登記保養

Online Product Warranty Registration

http://www.signeodesign.com/pages/warranty-registration

# 雙耳機立體聲使用説明

手動開機同時長按兩個觸控鍵約2秒,藍燈閃亮,並有提示音.

自動開機確保2個耳機留在充電座裡並合上蓋子.打開充電座蓋子.耳機自動 開機並藍燈閃爍.



 
開機狀態下,長按耳機觸控鍵至紅燈長亮一次後熄滅,同時出現相應的提示音 (當兩個耳機互相連接好並處於開機狀態時,只需關閉一個耳機,另一個將自動

### 將耳機放入充電座後合上蓋子,耳機將關機並進入充電狀態.


# 設備配對:初次連接使用

在關機狀態,同時長按2個耳機觸摸鏈至紅藍燈閃爍,耳機互連成功後,其中一耳 機進入紅藍燈交替閃爍,此為主機,而另一耳機只藍燈閃爍,定為副機 主機配對狀態時 紅藍燈交替閃爍 點擊手機配對名 "TW1 PLUS" 超手機連接

手機連接成功後,耳機指示燈轉為藍燈閃爍.



 主機(左)/副機(右)自動配對:將一對耳機放入充電座合上蓋子,然後 打開充電座蓋子.耳機自動開啟.主副機自動進入配對模式,主機轉為紅 藍燈閃爍,副機轉為藍燈閃爍,



.連接成功後,主機LED燈由紅藍燈交替閃爍轉變為藍燈閃爍,副機依 舊閃藍燈,雙耳與手機連接成功.



時,打開充電盒上蓋兩個耳機自動開機並配對再與該手機自動回連。 直接取出耳機即可使用(如耳機在10分鐘沒有連接到手機,耳機自

### 耳機通話

播放音樂: 耳機處於連接狀態時,快按1下觸控鍵播放音樂,或暫停播放.

# 音量+/音量-

此時再打閱手機藍牙列表,找到配對名"TW1 PILIS"並點擊連接

來雷狀態下僅主機有來雷提示兩個耳機都能聽到對方聲音 接通/結束通話:來電時輕觸1下觸控鍵接通電話;通話中輕觸1下觸控鍵

拒接來電:來電時·快按2下觸控鍵拒接電話。 (主副機觸控鍵可以接通和結束通話)

USB充電線

### 播放音樂

耳機在播放音樂時: 音量+:快按2下主機(左)觸控鍵。 音量-:快按2下副機(右)觸控鍵. 音量每調一度,會有"嘟"提示音.

耳機在播放音樂時,長按主機(左)觸控鍵2秒 切換至下一曲.聽到有"嘟"聲需要鬆手(如果繼續長按便關機).

且機在播放音樂時.長按副機(右)觸控鍵2秒. 切換至上一曲,聽到有"嘟"聲需要鬆手(如果繼續長按便關機).

### 清空配對列表(恢復出廠設置)

在開機狀態下,長按耳機觸控鍵,一直到耳機LED燈紅藍燈同時閃,表示耳機 已清空配對記錄,恢復出廠設置,耳機恢復出廠設置後,會自動關機,

當耳機電池低電時,耳機LED指示燈會紅燈快閃,並有 "Low battery, please charge"提示音,警示耳機已處於低電狀態,此時請給耳機充電;若無視提示 音並繼續讓耳機工作一段時間,耳機將自動關機

# 產品參數

	項目	參數
耳機	電池	經費子電池60mAh
中恢		
	藍牙版本	V5.0
	工作電壓	3.2V-4.2V
	咪頭靈敏度	-40 ± 2db
	藍牙頻率	2.4-2.48GHZ
	藍牙距離	10M
	音頻傳送格式	A2DP/HFP/HSP/AVRCP
	耳機重量	4.7克
	產品尺寸	直徑13.9mm長22mm
充電座	充電座容量	鋰離子電池400mAh (可給耳機充電2次)3.7V/1.48WH(max)
	DC 輸出電壓	DC5V
	DC 輸出需法(MAY)	1Δ

			1 月)不用,請對其充電。
幾	電池	鋰離子電池60mAh	
	藍牙版本	V5.0	
	工作電壓	3.2V-4.2V	警告
	咪頭靈敏度	-40 ± 2db	
	藍牙頻率	2.4-2.48GHZ	1.請勿將產品放置在溫度太低或太高的
	藍牙距離	10M	池容量,甚至縮短使用壽命。
	音頻傳送格式	A2DP/HFP/HSP/AVRCP	2.雷雨來臨時請勿使用本設備,否則可 擊的風險。
	耳機重量	4.7克	3.請勿將本產品靠近火源,陽光等高溫
	產品尺寸	直徑13.9mm長22mm	4.切勿以任何理由拆卸或改裝耳機,否 將耳機送往授權服務中心進行修理
電座	充電座容量	鋰離子雷池400mAh	5.請勿使用任何腐蝕性或磨蝕性清潔額
-6/1	700272	(可給耳機充電2次)3.7V/1.48WH(max)	6.將設備和所有附件放在兒童接觸不到
	DC 輸出電壓	DC5V	被吞嚥導致窒息並造成嚴重後果。
	DC 輸出電流(MAX)	1A	7.請勿將產品放入水中。
	DC 充電電壓	DC5V	
	DC 充電電流(MAX)	1A	
	充電座重量	25 克	
	產品尺寸	長4.48x高5.35x深2.17 cm	

# 注意事項

2. 耳機在電量低音時,LED顯示紅燈.

3. 耳機在充電時,請先套上"中號"耳帽.

1. 當TW1 PLUS未進入配對狀態時手機將無法搜索到耳機.請在搜索前確認耳 機啟動到配對狀態(紅藍燈交替閃爍)

必須選擇合規格的充電器和正規充電線,如果產品長期(超過3個

- 至溫度太低或太高的環境中,可能會導致變形,減少電
- 使用本設備,否則可能會導致操作失靈,並增加遭受雷
- 拆卸或改裝耳機,否則可能導致耳機發生故障或燒毀.請 服務中心進行修理。

- 近火源,陽光等高溫高熱的環境中.
- 蝕性或磨蝕性清潔劑。 件放在兒童接觸不到的地方,小部件可能會
- жф。

# 注意事項

故障	原因	解决方法
啟動失敗	低電量	為耳機充電
配對後沒有聲音	錯配對	重新配對
紅燈在電話交 談期間發光	低電量警告	請立即收費
充電期間沒有指示器	耳機沒有放入充電電纜	檢查耳機是否插好
自動關閉	低電量	為耳機充電
迴聲	音量太高或環境過於嘈雜	調整音量或改變環境
電話中的噪音	環境干擾或 耳機太遠了來自設備	改變環境或縮短之間的距離 耳機和設備
來電人數量低	耳機佩戴不當	調整耳機位置
信號不好,有斷續	環境干擾或 耳機離設備太遠	遠離干擾信號或縮短耳機與 設備之間的距離

有用戶維修零件。 請將耳機送往授權服務中心進行修理。

- 1.本設備不適用於高濕度房間(例如浴室)。
- 3.請勿放置 點燃蠟燭,在設備上或與設備直接相鄰。

故障	原因	解决方法
啟動失敗	低電量	為耳機充電
配對後沒有聲音	錯配對	重新配對
紅燈在電話交 談期間發光	低電量警告	請立即收費
充電期間沒有指示器	耳機沒有放入充電電纜	檢查耳機是否插好
自動關閉	低電量	為耳機充電
迴聲	音量太高或環境過於嘈雜	調整音量或改變環境
電話中的噪音	環境干擾或 耳機太遠了來自設備	改變環境或縮短之間的距離 耳機和設備
來電人數量低	耳機佩戴不當	調整耳機位置
言號不好,有斷續	環境干擾或 耳機離設備太遠	遠離干擾信號或縮短耳機與 設備之間的距離

### 重要的安全説明

警告(電擊風險不會打開)警告:降低觸電危險,不要拆除產品。 產品內部沒

- 2.避免異物和液體進入設備。
- 4.請勿使用任何腐蝕性或磨蝕性清潔劑。

設計和規格若有變更,恕不另行通知。

數碼 / 影音產品保用証 Digital / AV Product Warranty Card

### 荃灣德士古道220-248號荃灣工業中心2305室 Room 2305 Tsuen Wan Industrial Centre, 220-248 Texaco Road, Tsuen Wan N.T.

辦公時間 Office Hours: 星期一至五 Monday - Friday 9:00am - 12:30nm 2:00nm - 5:30nm 星期六、日及公眾假期休息 Saturday, Sunday and Public Holiday Closed

# 多謝閣下購買本公司之產品,請參閱下列保用條款:

- . 本公司為客提供由購機日起計之6個月免費保用服務
- 本公司為各選供田隣國上起訂之 旬 月空候採用級務。
   如屬屋務時。等戶必須出宋原程及有效之正本草達。
   幼田屋務時。等戶必須出宋原程表有效之正本草達。
   幼田屋如經邊改一一經無效。
   林全公司體實商工事使用情況下發生的環境或故障。本公司將於保用期內提供免費維修服務。
   本公司所不會為任何則接成相應的損失。資料的損失或利能的損失負責。 此保用証只適用於香港特別行政區範圍以內本公司擁有本保用証的發出及終止權。

### Thank you for your purchase of our products. Please read the following terms and conditions: . Our company provides a Six-month warranty from the date of nurchase.

- Customer must present a valid original invoice and warranty card. Any alteration to this warranty card will be invalid.
- our Company will provide free of charge renair service. Our company will not be responsible for any indirect or consequential loss, loss of data or loss of profits.
   This warranty card is effective within Hong Kong SAR only.
- Our company has the right to issue or terminate this warranty card.

# 查詢電話 Hotline: 2428 2309 電郵 Email: support\_av@signeo.net

注意: 顧客請保留此保用証和購貸發票,並需在檢查維修時出示,否則保用無效。 Note: Please keep and present this warranty card and purchase invoke when services are rendered, otherwise this warranty will be not valid

香港地區 HK Area



# **USER MANUAL**



Please read this user manual carefully before use.

Thank you for purchasing the TW1 PLUS true wireless earphones. Before using this product, you must understand and familiar with the bluetooth function of your mobile phone and device, and read this mannal

### Safety rules:

- 1. Please follow the instruction described in this manual closely to ensure your safety. Before using this product, we would strongly encourage you to read through this user manual.
- 2. Be more wary of any edges uneven surfaces metal parts accessories and its packaging so as to prevent any possible injury or damage.
- 3. Do not modify, repair or dismantle this product. Doing so may result in fires, electric shocks, complete breakdown of this product, etc. All of which are not covered under warranty
- 4. Do not use any diluents or volatile liquid to clean the product
- 5. Do not use the product in a hazadous location

# ACCESSORIES

Small

Medium

# Famhones Left Right Soft silicone eartips

Charging case



# PRODUCT OVERVIEW 1. Touch control button 2. Microphone and LED indicator 3. Soft silicone eartips Charging case Charging case LED indicator 6. USB Charging port 7. Earphones charging LED indicator

In order to get best audio performance, try every eartips (small, medium and large), The correct seal in your ear to achieve optimal fit and stability.



Please use medium size eartips for charging

# CHARGING

The bluetooth earphones and charging case must be fully charged before first time to use

### Charge the bluetooth earphones

Magnetic charging design, the LED indicator of the earphones will be in solid red when charging, and it will turn off when the earphones are fully



- 2. The red light will flash when the battery is low.
- 3. Use medium size eartips for earphones charging

### FAST CHARGING

Charging case supports earphones to recharge and continuous playback for about 9 hours. 15mins earphones recharge can work for about 1.5hours of listening time.

# CHARGING CASE BATTERY STATUS

Charging status the number of blue LED light indicate battery status, the LED indicator will turn blue when the charging case is fully charged.

Power off status LED indicators, indicate battery status

Power 0%-25%: one blue LED indicator lights on Power 25%-50%: two blue LED indicators light on Power 50%-75%: three blue LED indicators light on Power 75%-100%: four blue LED indicators light on













### Power on (manual) Power off (manual)

(Red LED)

Answer a call/End a call: Tap the touch control button once to answer the incoming call. Tap the touch control button once to end a call.

BASIC OPERATION

Power off

Reject a call: Double-tap the touch control button to reject the incoming call.

Power on(manual): Press the touch control button about 2 seconds,

discharged and the LED, will flash blue, you will hear "nower on" voice prompt.

Power off (manual): Press and hold the touch control button until

the LED flash red. unit turns off and you will hear "power off" voice prompt.

Power off(auto): Place earphones back into charging case, earphones

the LED light will flash blue, you will hear "power on" voice prompt.

Power on(auto): Open the charging case, the earphone will be

will power off automatically and start recharge. Red LED lights up.

> (Blue LED)

Music: When the earphone is connected with the bluetooth device, single click the touch control button to play music, single click it again to pause the music.

# SINGLE EARPHONE OPERATION (MONO)

# Pairing: first time to use

### Mono pairing (manual)

- Take either one, press the touch control button around 2 seconds
- . The earphone will power on with LED flashes blue
- . Double click the touch control button, the LED indicator will turn to red and blue alternately and ready for connecting.
- Turn on the bluetooth of the device and search the pairing ID "TW1 PLUS", click it to connect, the blue LED flashes, the earphone is connected with the bluetooth device successfully.









# Mono pairing (Auto)

- Take either one from the case, leave one keep in the case. Close the lid of charging case.
- The earphone will turn on automatically wait until LED flashes red and blue alternately, entering into the pairing mode.
- Turn on the bluetooth function of the device and search the pairing ID "TW1 PLUS", click it to connect, the earphone will flash blue LED, the earphone is connected with the bluetooth device successfully



Remarks: Please clear the pairing list (reset to factory setting) of the selected mono earphone first. Reset procedure refer to the following page.

### Pairing:Second time or later use

· Press the touch control button around 2 seconds to power on the earphone, it will auto connect with the bluetooth device which has previous connected record. P.S. In pairing mode, single earphone will power off automatically if it can't

# connect with bluetooth device in 5 minutes

### STEREO EARPHONES OPERATION

Power on (manual): press the touch control button for about 2 seconds, the ED will flash blue and you will hear "power on" prompt.

Power on (auto): open the charging case, both earphones will power on automatically and both LED of the earphones will flash blue



### Power off

### power off (manual):

Press and hold the touch control button until the LED flash red, you will hear power off " prompt and the earphone is turned off. P.S. Power off one earphone and the other side will power off automatically.

### Power off (auto): Put both earphones into the charging case and close the lid of charging case, the

earphones will power off and start to be recharged. Pairing: first time to use

- Long press the touch control buttons of both earphones until the LED of the earnhones flash blue and red alternately release the buttons
- . Put the earphones together to pair each other, LED of both earphones will flash blue once.
- The master unit (Left) will turn to red and blue flashing alternately again, the slave unit (Right) will turn to flash blue, now both earphones are paired together successfully and they are ready for connecting with the bluetooth devices.
- Turn on the bluetooth of the device and search the pairing ID "TW1 PLUS", dick to connect. Both earnhones will flash blue LED
- The earphones are connected with the bluetooth device successfully

# Red/Rlue (Left)

 
# Master(Left)

### **Auto Pairing:** Make sure 2 earphones are in the charging case and the lid of charging case is closed.

- . Open the lid, the earphones will turn on automatically, and wait until the master will flash red and blue alternately and the slave will flash blue.
- · Both earphones are paired together successfully, and they are ready for connecting with the bluetooth devices.
- . Click it to connect, the LED indicator will flash blue The earphone are connected with the bluetooth device successfully.

### Auto Pairing





# Pairing:Second time or later use

Make sure 2 earphones are in the charging case and the lid of charging case is

P.S. In pairing mode, stereo earphones will power off automatically if it can't

Take out 2 earphones from the charging case, earphones will turn on Connect with each other, and they will auto connect with the bluetooth device

# connect with bluetooth device in 10 minutes.

**Calling**Both earphones can hear the voice when calling and the touch button of both sides are functionable.

Answer a call /End a call: Tap the touch control button once to answer the

# incoming call and end a call. Reject a call:Double-tap the touch control button to reject the incoming call.

which has previous connected record.

Play music
When the earphones are connected with the bluetooth device, tap the touch control button once to play music, tap it again to pause the music.

### Volume+/Volume-

When the earphones are playing with music: Volume+: double click the touch control button of the master(left) to increase volume Turn on the bluetooth of the device and search the pairing ID "TW1 PLUS" Volume -: double click the touch control button of the slave unit(right) to decrease volume.

When the earphones are playing with music, press the touch control button of the master 2 seconds to the next song, please release the touch control button once you heard the "Beep" sound, otherwise, the earphone will power off after long press.

When the earphones are playing with music, press the touch control button of the slave 2 seconds to the previous song, please release the touch control button once you heard the "Beep" sound. otherwise, the earphone will power off after long press.

# Clear the pairing list(reset factory setting)

When the earphones are in status of power on, long press and hold the touch control button for around 10 seconds until the LED indicator flashes red and blue once at the same time, reset to the factory setting and the earphone will turn off

Low power alarm
The LED indicator of the earphone will flash red quickly and a prompt of "Low

battery, please charge" will remind you to recharge the earphone in a short time, or the earphone will shut down automatically after several minutes if you ignored

### SPECIFICATIONS

	Items	Specifications
Earphones	Battery	Lithium-ion battery 60mAh
	Bluetooth Version	V5.0
	Working voltage	3.2V-4.2V
	Microphones sensitivity	-40±2db
	Bluetooth freguency barnd	2.4+2.48GHZ
	Bluetooth range	10M
	Audio transmission protocols	A2DP/HFP/HSP/AVRCP
	Weight	4.7 grams (each)
	Dimension	13.9mm x 22mm

### Charging case Capacity Lithium-ion hatten/ 400 mAh 3.7V/1.48WH(max) (to recharge earphones for 2 times)

DC output voltage DC5V DC output current(MAX) DC5V DC charging voltage DC charging current(MAX)

### Weight 25 grams Dimension 4.48 x 5.35 x 2.17cm

# NOTICE

Please ensure the earphones TW1 PLUS is in pairing mode (LED indicator of the earphone flash red and blue alternately.) or the mobile will not find the relevant pairing ID to connect it

You must select a qualified adapter and USB cable to charge this product. You must charge the earphone if it has not been used for more than 3

- 1. Do not put the product at the environment of too low or too high temperature for a long time, that may cause deformation, reduce the
- 2. Do not use the device when the thunderstorm coming, may cause a
- 3. Do not place open e.g. lit candles, on or directly adjacent to the device.
- lead to headset fault or burned, please send product to authorized service center for repairs.
- damage the surface of the device. 6. Place the device and all accessories out of the reach of children
- 7. Do not put the product into the water.
- 8. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like

- battery capacity, even shorten service lifetime
- failure, and increase the risk of struck by lightning.
- 4. Do not remove or modified product for any reason, otherwise may
- 5. Do not use any corrosive or abrasive cleaning agents. These could
- and pets, small parts may be swallowed cause suffocation and serious consequences.

# TROUBLESHOOTING

Phenomenon	Reason	Solution
Starting-up failure	low battery	charge for the headset
No sound after paired	wrong paired	re-pairing
Red light shines during phone talking	low battery warning	please charge immediately
No indicator during charging	Headset didn't put into the charging cable well	check the headset if it's well put into
Shut down automatically	low battery	charge for the headset
Echo	volume is too high or environment is too noisy	adjust volume or change environment
Noise during phone calls	environment disturbance or headphone is too far away from device	change environment or shorten the distance between headphone and device
Low volume of the caller	wrong wear of headphone	adjust headphone position
Signal is not well, interrupting	environment disturbance or headphone is too far away from device	far away from the interference signal or shorten the distance between headphone and device

### Important Safety Instructions

Warning (risk of electric shock do not open) caution; to reduce the risk of electric shock. Do not remove cover (or back). No user-servicealbe parts inside. Refer servcing to qualfied service persionnel.

- I. The device is not intended for operation in rooms with high humidity (e.g. bathrooms). 2. Avoid foreign bodies and liquids entering the device.
- 3. Do not place open e.g. lit candles, on or directly adjacent to the device.
- Do not use any corrosice or abrasive cleaning agents. These could damage the surface of the device. i. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Design and specifications are subject to change without notice.

henomenon	Reason	Solution
rting-up failure	low battery	charge for the headset
sound after red	wrong paired	re-pairing
d light shines ing phone ing	low battery warning	please charge immediately
indicator ing charging	Headset didn't put into the charging cable well	check the headset if it's well put into
ut down omatically	low battery	charge for the headset
10	volume is too high or environment is too noisy	adjust volume or change environment
se during one calls	environment disturbance or headphone is too far away from device	change environment or shorten the distance between headphone and device
v volume of caller	wrong wear of headphone	adjust headphone position
nal is not well,	environment disturbance or headphone is too far away	far away from the interference signal or shorten the distance

充電完成後,請把充電線從機身拔出,避免讓產品長期處於充電狀態。 請使用充電器(要求輸出電壓和電流不大於 5V/1A 或 5V/1.5A)和本產品的原 配充電線為產品充電,如因充電器之輸出電壓和電流超出指定,這會對本產 品造成嚴重破壞,產品之保用將同時失效。

# 請勿使用快速充電器 (輸出電壓8V-12V) 為產品充電。

### Safety Warning

安全警告

Please disconnect the USB cable after charging. Product should not be charging in a long time. Please use the charger or adaptor with output oltage and current (max) 5V/1A or 5V/1.5A and product original charging cable for the product charging. If the output voltage and current of the charger exceeds the requirement, it will cause severe damage to the product, and the product warranty will be invalid.

Do not use the quick charger (output voltage 8V-12V) to charge the product.

# Signeo Design International Limited M小O保存

產品網上登記保養

http://www.signeodesign.com/pages/warranty-registration

### 數碼 / 影音產品保用証 Digital / AV Product Warranty Card

服務中心 Service Centre 荃灣德士古道220-248號荃灣工業中心2305室

### 辦公時間 Office Hours: 星期一至五 Monday - Friday 9:00am - 12:30pm 2:00pm - 5:30pm

- 此保用証只適用於香港特別行政區範圍以內。 . 本公司擁有本保用証的發出及終止權。

### Our company provides a Six-month warranty from the date of purchase.

- Customer must present a valid original invoice and warranty card. Any alteration to this warranty card will be invalid.
- our Company will provide free of charge repair service. ur company will not be responsible for any indirect or consequential loss, loss of data or loss of profits.
- This warranty card is effective within Hong Kong SAR only. Our company has the right to issue or terminate this warranty card.

查詢電話 Hotline: 2428 2309 電郵 Email: support\_av@signeo.net

ote: Please keep and present this warranty card and purchase invoice when services are rendered, otherwise this warranty will be not valid





ntre 220-248 Teyaco Road Tsuen Wan N T

### 星期六、日及公眾假期休息 Saturday, Sunday and Public Holiday Closed

多謝閣下購買本公司之產品,請參閱下列保用條款: 本公司為客提供中職機日起計之6個日免費保用服務

以下的血切时至成。一件無双。
 程本公司證實為正常使用情況下發生的損壞或故障,本公司將於保用期內提供免費維修服務。
 本公司將不會為任何閱接或相應的損失、資料的損失或利潤的損失負責。

# Thank you for your purchase of our products. Please read the following terms and conditions:

For product defects under normal circumstances and at the discretion of our Company,

注意: 顧客請保留此保用証和購貨發票,並需在檢查維修時出示,否則保用無效。







NEP-TW1 PLUS

USB charging cable









