


PLEASE RETAIN



Erin Non Boiler Solid Fuel Stove

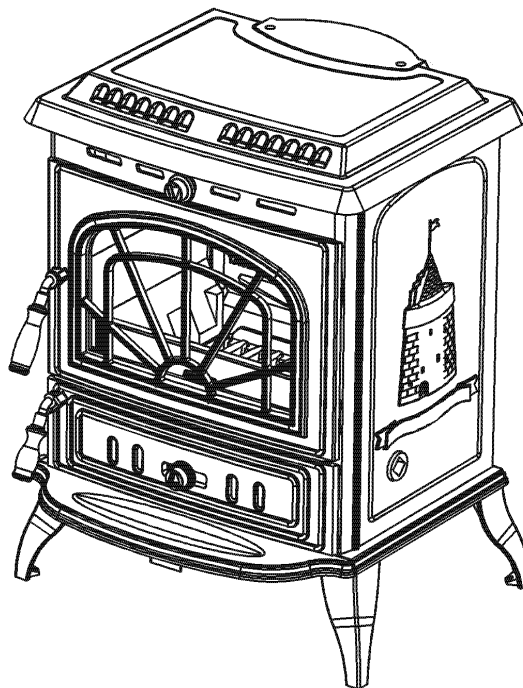

INSTALLATION AND OPERATING INSTRUCTIONS

This appliance is hot while in operation and retains its heat for a long period of time after use. Children, aged or infirm persons should be supervised at all times and should not be allowed to touch the hot working surfaces while in use or until the appliance has thoroughly cooled.

When using the stove in situations where children, aged and/or infirm persons are present a fireguard must be used to prevent accidental contact with the stove. The fireguard should be manufactured in accordance with BS 8423:2010.

ERIN SOLID FUEL STOVE EXPLODED VIEW

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. TOP FLUE OUTLET - B00053AXX 2. LEG (SHORT) - B00054AXX 3. TOP FLUE BLANKING PLATE - B00055AXX 4. ASHTRAY - B00056AXX 5. HOB - B00057BXX 6. DOOR GRILL - B00058AXX 7. FIRE DOOR - B00059CXX 8. ASHPIT DOOR - B0061CXX 9. AIR CONTROL KNOB - B00063AXX 10. LEFT HAND SIDE PANEL - B00066EXX 11. PRIMARY AIR SLIDE - B00067AXX 12. FRONT FRAME - B00069EXX 13. RH SIDE CASTING - B00071BXX 14. RIDDLING TOOL - B00076AXX 15. TOOL HOLDER - B00078AXX 16. BASE - B00079CXX 17. BACK PANEL - B00080AXX 18. PRIMARY AIR CONTROL KNOB - B00153AXX 19. SECONDARY AIR DAMPER BKT - B00389AXX 20. SECONDARY AIR DAMPER - B00391AXX 21. INNER TOP - B00553AXX 22. ACCESS PLATE - B00578AXX 23. DOOR GLASS CLIP - F00003AXX 24. ASHPAN - F00018AXX 25. PRIMARY AIR SLIDE CLIP - F00019AXX 26. GASKET CLAMP PLATE - F00022AXX 27. TOP LATCH COVER PLATE - F00023AXX 28. LOWER LATCH COVER PLATE - F00024AXX 29. SIDE SUPPORT CLIP - F00029AXX 30. PLATE TO DAMPER - F00833AXX 31. FIRE BRICK SIDE - H00012AXX 32. BACK BRICK - H00013AXX 33. LH FRONT BRICK - H00014AXX 34. RH FRONT BRICK - H00015AXX 35. FIRE BRICK BOTTOM LEFT - H00016AXX 36. BOTTOM SIDE BRICK - RH - H00017AXX 37. SERIAL NUMBER PLATE - N00234BXX 38. DATA PLAQUE - N00476AXX 39. PRIMARY AIR BOX - Q00028AXX 40. PRIMARY AIR SHUTTER - Q00029AXX 41. FRONT ROCKER BAR CLAMP - Q00030AXX 42. SHAKER BARREL - Q00037AXX | <ol style="list-style-type: none"> 43. FRONT ROCKER BAR - Q00044AXX 44. BACK ROCKER BAR - Q00045AXX 45. ROCKER BAR FRAME - Q00047BXX 46. FIRE FENCE RETAINER - Q00048CXX 47. AIR DUCT BACK PLATE - Q00049AXX 48. AIR INLET BOX - Q00571AXX 49. BACK FLUE COVER PLATE - Q00578AXX 50. BAFFLE - Q00753AXX 51. GLASS - T00003AXX 52. DOOR HANDLE (SHORT) - U00008AXX 53. DOOR HANDLE LONG - U00009AXX 54. HINGE - U00153AXX 55. SECONDARY AIR CON ROD BKT - V00017BXX 56. OPERATION TOOL - V00020BXX 57. SPIGOT TO DOOR HANDLE - V00021AXX 58. DOOR HANDLE AXLE - V00022BXX 59. DOOR LATCH - V00023AXX 60. CONICAL SPRING - V00024AXX 61. PRIMARY AIR CONTROL SHAFT - V00027AXX 62. SPACER - V00033AXX 63. SPRING - V00034AXX 64. SPACER - V00039AXX 65. AIR SLIDE SPINDLE - V00067AXX 66. CON ROD TO AIR DAMPER - V00068AXX 67. SPACER - V00489AXX 68. BADGE - V00730BXX 69. TOP AIR DUCT PLATE - Z00001AXX 70. BOTTOM AIR DUCT PLATE - Z00002AXX 71. FIRE FENCE - Z00003AXX 72. SECONDARY AIR BACK PLATE - Z00006AXX |
|--|---|

