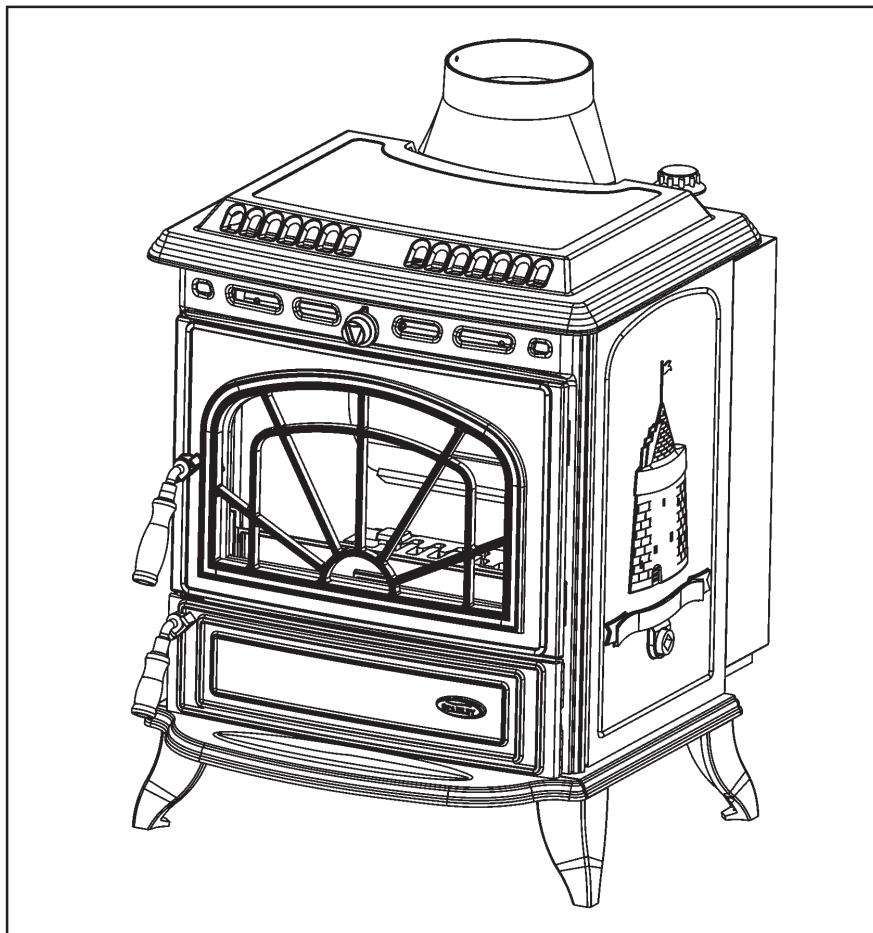

Spare Parts Guide



Erin Boiler Solid Fuel Stove



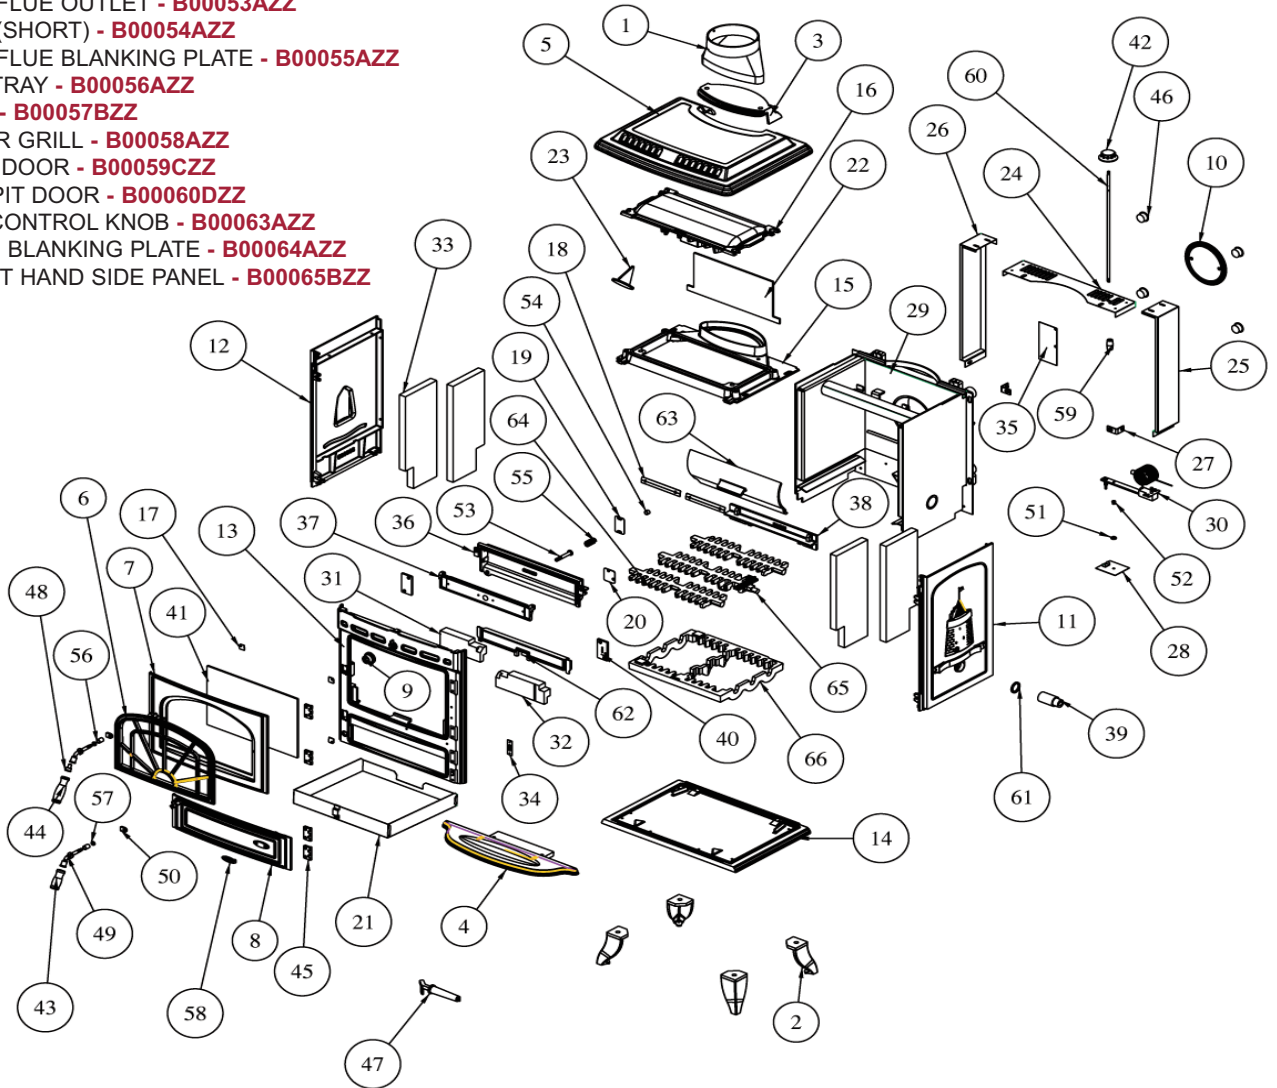
INSTALLATION AND OPERATING INSTRUCTIONS

This appliance is hot while in operation and retains its heat for a long period of time after use. Children, aged or infirm persons should be supervised at all times and should not be allowed to touch the hot working surfaces while in use or until the appliance has thoroughly cooled.

When using the boiler stove in situations where children, aged and/or infirm persons are present a fire-guard must be used to prevent accidental contact with the stove. The fireguard should be manufactured in accordance with BS 8423:2010.

ERIN SF HPB EXPLODED VIEW

1. TOP FLUE OUTLET - **B00053AZZ**
2. LEG (SHORT) - **B00054AZZ**
3. TOP FLUE BLANKING PLATE - **B00055AZZ**
4. ASHTRAY - **B00056AZZ**
5. HOB - **B00057BZZ**
6. DOOR GRILL - **B00058AZZ**
7. FIRE DOOR - **B00059CZZ**
8. ASHPIT DOOR - **B00060DZZ**
9. AIR CONTROL KNOB - **B00063AZZ**
10. FLUE BLANKING PLATE - **B00064AZZ**
11. RIGHT HAND SIDE PANEL - **B00065BZZ**



12. LEFT HAND SIDE PANEL - **B00066EZZ**
13. FRONT FRAME - **B00069EZZ**
14. BASE - **B00079CZZ**
15. INNER TOP - **B00553AZZ**
16. ACCESS PLATE - **B00578AZZ**
17. DOOR GLASS CLIP - **F00003AXX**
18. GASKET CLAMP PLATE - **F00022AXX**
19. TOP LATCH COVER PLATE - **F00023AXX**
20. LOWER LATCH COVER PLATE - **F00024AXX**
21. ASHPAN - **F00898AXX**
22. BAFFLE PLATE - **F00923AXX**
23. BAFFLE SUPPORT - **F00924AXX**
24. TOP SHROUD - **F01048AXX**
25. RH SHROUD - **F01049AXX**
26. LH SHROUD - **F01050AXX**
27. FLOATING BRACKET - **F01051AXX**
28. STAT PLATE - **F01055AXX**
29. BOILER - **F01065AXX**
30. THERMOSTAT - **G00001AXX**
31. LH FRONT BRICK - **H00010AXX**
32. RH FRONT BRICK - **H00011AXX**
33. SIDE INSULATION - **J00007AXX**
34. SERIAL NUMBER PLATE - **N00234BXX**
35. DATA PLAQUE - **N00469AXX**
36. PRIMARY AIR BOX - **Q00028AXX**
37. PRIMARY AIR SHUTTER - **Q00029AXX**
38. GRATE SUPPORT - **Q00040BXX**

39. SHAKER BARREL - **Q00046AXX**
40. FIRE FENCE RETAINER - **Q00048CXX**
41. GLASS - **T00003AXX**
42. AIR CONTROL KNOB - **U00006AXX**
43. DOOR HANDLE (SHORT) - **U00008AXX**
44. DOOR HANDLE (LONG) - **U00009AXX**
45. HINGE - **U00153AXX**
46. BOILER PLUG - **V00016AXX**
47. OPERATION TOOL - **V00020BXX**
48. SPIGOT TO DOOR HANDLE - **V00021AXX**
49. DOOR HANDLE AXLE - **V00022BXX**
50. DOOR CATCH - **V00023AXX**
51. CONICAL SPRING - **V00024AXX**
52. HANK BUSHING - **V00025AXX**
53. PRIMARY AIR CONTROL SHAFT - **V00027AXX**
54. SPACER TO DOOR HANDLE - **V00033AXX**
55. SPRING - **V00034AXX**
56. SPACER - **V00039AXX**
57. SPACER - **V000489AXX**
58. BADGE - **V00730BXX**
59. D SHAFT CONNECTOR - **V00964AXX**
60. CONTROL ROD - **V00965AXX**
61. WASHER - **W00820AXX**
62. FIRE FENCE - **Z00003AXX**
63. BOILER CLEANING PLATE - **Z00004BXX**
64. SIDE FIRE BAR - **Z00027AXX**
65. ROCKER FIRE BAR - **Z00028AXX**
66. FIRE BAR FRAME - **Z00030AXX**