
PLEASE RETAIN



Tara Boiler / Non Boiler & DHW Solid Fuel Stove

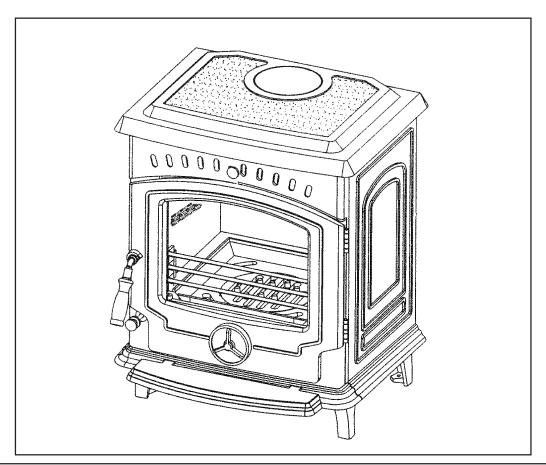


WARNING: This appliance is hot while in operation and retains its heat for a long period of time after use. children, aged or infirm persons should be supervised at all times and should not be allowed to touch the hot working surfaces while in use or until the appliance has thoroughly cooled.

When using the boiler stove in situations where children, aged and/or infirm persons are present a fireguard must be used to prevent accidental contact with the stove. The fireguard should be manufactured in accordance with BS 8423:2010.

INSTALLATION AND OPERATING INSTRUCTIONS

TARA NB EXPLODED VIEW

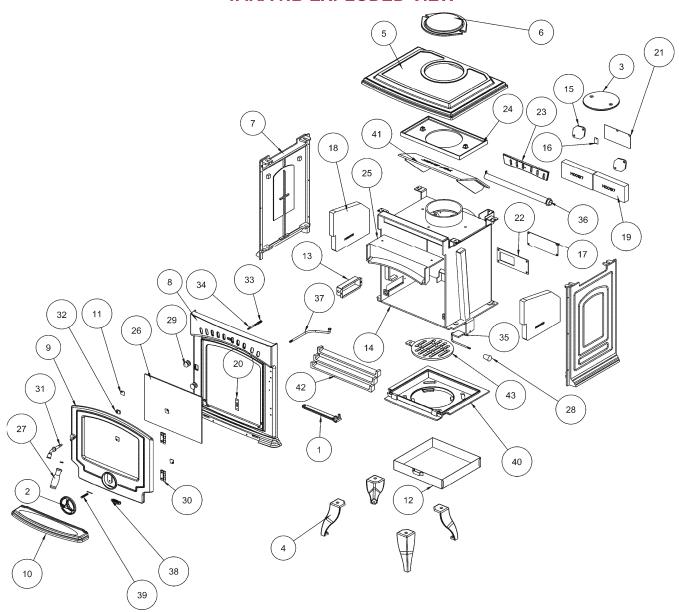

- 1. OPERATING TOOL B00009BZZ
- 2. SPIN VALVE B00012AZZ
- 3. FLUE BLANKING PLATE B00064AZZ
- 4. LEG (LONG) **B00077BZZ**
- 5. HOB B00209AZZ
- 6. HOB BLANKING PLATE B00210AZZ
- 7. SIDE PANEL B00211BZZ
- 8. FRONT PANEL B00257JZZ
- 9. FRONT DOOR B00258CZZ
- 10. ASHTRAY FRONT B00259AZZ
- 11. DOOR GLASS CLIP F00003AXX
- 12. ASHPAN F00221AXX
- 13. PULL ROD BOX F00223BXX
- 14. DRY SHELL F00238DXX
- 15. WS PLUG F00506AXX
- 16. RATING PLATE HOOK V01072AXX
- 17. BLANKING PLATE F01029AXX
- 18. SIDE BRICK **H00070BXX**
- 19. TARA BRICK FOR DRY SHELL H00197AXX
- 20. SERIAL NUMBER PLATE N00234BXX
- 21. DATA PLAQUE N00442AXX
- 22. OSA DAMPER GASKET P00101AXX

- 23. SECONDARY AIR WASH SHUTTER Q00247AXX
- 24. DRY SHELL PROTECTION PLATE Q00250AXX
- 25. AIR WASH PLATE Q00564AXX
- 26. GLASS WINDOW T00009AXX
- 27. DOOR HANDLE LONG U00009AXX
- 28. SECONDARY AIR CONTROL U00018AXX
- 29. AIR WASH KNOB U00077AXX
- 30. HINGE **U00153AXX**
- 31. DOOR HANDLE AXLE V00022BXX
- 32. DOOR LATCH V00023AXX
- 33. SPRING (RS 751-584) V00151AXX
- 34. AIR WASH SHUTTER V00158AXX
- 35. SECONDARY AIR DAMPER V00161AXX
- 36. SECONDARY AIR TUBE V00162AXX
- 37. PULL ROD V00393AXX
- 38. BADGE V00730BXX
- 39. M8X44 SPINDLE V00763AXX
- 40. FIRE BOX INSERT Z00016BXX
- 41. FLUE CLEANING PLATE Z00019BXX
- 42. FIRE FENCE **Z00020AXX**
- 43. GRATE **Z00025BXX**