



DECORATO A MANO
HAND DECORATED

CATENE



NERO



ZAFFIRO



SCARLATTO



SMERALDO

CATENE NERO - TABLEWARE



PIATTO PANE | BREAD PLATE
004RG00 FPT110 01 0160 G00125500
CM 16 IN. 6 1/2



PIATTO DESSERT | DESSERT PLATE
004RG00 FPT110 01 0220 G00125500
CM 22 IN. 7 3/4



PIATTO PIANO | FLAT PLATE
004RG00 FPT110 01 0280 G00125500
CM 28 IN. 11



PIATTO FONDO | SOUP PLATE
004RG00 FPT210 01 0245 G00125500
CM 24,5 IN. 9 1/2



SEGNAPOSTO | CHARGER PLATE
044RG00 FPT100 01 0310 G00125500
CM 31 IN. 12 1/4



COPPETTA | FRUIT BOWL
004RG00 FCP000 01 0140 G00125500
CM 14 IN. 5 1/2



TAZZA CAFFÈ | COFFEE CUP
004RG00 FTZ301 01 0800 G00125500
CC 80 OZ. 2 3/4



PIATTO CAFFÈ | COFFEE SAUCER
004RG00 FPT301 01 0110 G00125500
CM 11 IN. 2 3/4



TAZZA TÈ | TEA CUP
004RG00 FTZ401 01 0220 G00125500
CC 220 OZ. 7 3/4

CATENE NERO COLLECTION



PIATTO TÈ | TEA SAUCER
004RG00 FPT401 01 0135 G00125500
CM 13,5 IN. 5 1/4




MUG
004RG00 FTZ701 01 0400 G00125500
CC 400 OZ. 13 1/2

CATENE NERO - GIFTWARE



TAZZA CAFFÈ CON PIATTO E COPERCHIO,
SET PER 2 | TÊTE À TÊTE COFFEE SET
004RG00 FX9176 01 G00125500

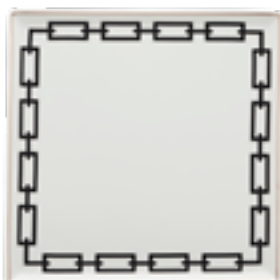

PIATTO SVUOTATASCHE QUADRATO |
VIDE POCHE SQUARED PLATE
172RG01 FVS121 01 30X G00125500
CM 30 IN. 12



COPPA QUADRATA BASSA |
LOW SQUARED CUP
172RG01 FCP220 01 13X G00125500
CM 13,5 IN. 5 1/4



COPPA GIO PONTI | GIO PONTI BOWL
020RG00 FG6499 01 G00125500
H CM 11 IN. 4 1/4



SCATOLA TALCO CON COPERCHIO |
ROUND BOX WITH COVER
017RG02 FX5080 01 G00125500
CM 13 IN 5

CATENE NERO - TABLEWARE



VASSOIO ROTONDO | ROUND FLAT PLATTER
004RG00 FPT110 01 0305 G00125500
CM 30,5 IN. 12



VASSOIO OVALE PIANO |
FLAT OVAL PLATTER
004RG00 FVS130 01 0340 G00125500
CM 34 IN. 13 1/4



VASSOIO OVALE PIANO |
FLAT OVAL PLATTER
004RG00 FVS130 01 0400 G00125500
CM 40 IN. 15 1/2



RAVIERA | PICKLE DISH
004RG00 FRV000 01 0235 G00125500
CM 23,5 IN. 9 1/4



INSALATIERA | SALAD BOWL
004RG00 FIN000 01 0265 G00125500
CM 26,5 IN. 10 1/2



MUG CON COPERCHIO | MUG WITH COVER
004RG00 FTZ703 01 0400 G00125500
CC 400 OZ. 13 1/2



TEIERA PER 6 CON COPERCHIO |
TEAPOT WITH COVER FOR 6
004RG00 FTE400 01 0900 G00125500
LT 0,90 OZ. 30 1/2

CATENE NERO - GIFTWARE



LATTIERA PER 2 | MILK JUG FOR 2
004RG00 FLT000 01 0135 G00125500
CC 135 OZ. 4 1/2



ZUCCHERIERA PER 2 | SUGAR BOWL FOR 2
004RG00 FZU000 01 0150 G00125500
CC 150 OZ. 5



SVUOTATASCHE QUADRATO PICCOLO I
SMALL SQUARED VIDE POCHE
017RG02 FG6837 01 0180 G00125500
CM 18 IN. 7



SVUOTATASCHE QUADRATO GRANDE I
LARGE SQUARED VIDE POCHE
017RG02 FG6836 01 0245 G00125500
CM 24,5 IN. 9 1/2

CATENE NERO - TABLEWARE



ZUPPIERA OVALE | TUREEN WITH COVER
004RG00 FZP030 01 0400 G00125500
LT 4 OZ. 141



SALSIERA | GRAVY BOAT
004RG00 FSA010 01 0300 G00125500
CC 300 OZ. 11

CATENE NERO COLLECTION



SVUOTATASCHE RETTANGOLARE |
RECTANGULAR VIDE POCHE
017RG02 FG6838 01 0150 G00125500
CM 15 X 19 IN. 6 X 7 1/2



VASO IMPERO CON COPERCHIO |
IMPERO VASE WITH COVER
020RG00 FA6679 01 G00125500
CM 48 IN. 19

CATENE ZAFFIRO - TABLEWARE



PIATTO PANE | BREAD PLATE
004RG00 FPT110 01 0160 G00125600
CM 16 IN. 6 1/2



PIATTO DESSERT | DESSERT PLATE
004RG00 FPT110 01 0220 G00125600
CM 22 IN. 7 3/4



PIATTO PIANO | FLAT PLATE
004RG00 FPT110 01 0280 G00125600
CM 28 IN. 11



PIATTO FONDO | SOUP PLATE
004RG00 FPT210 01 0245 G00125600
CM 24,5 IN. 9 1/2



SEGNAPOSTO | CHARGER PLATE
044RG00 FPT100 01 0310 G00125600
CM 31 IN. 12 1/4



VASSOIO ROTONDO | ROUND FLAT PLATTER
004RG00 FPT110 01 0305 G00125600
CM 30,5 IN. 12

CATENE ZAFFIRO COLLECTION



VASSOIO OVALE PIANO I
FLAT OVAL PLATTER
004RG00 FVS130 01 0340 G00125600
CM 34 IN. 13 1/4



VASSOIO OVALE PIANO I
FLAT OVAL PLATTER
004RG00 FVS130 01 0400 G00125600
CM 40 IN. 15 1/2



RAVIERA I PICKLE DISH
004RG00 FRV000 01 0235 G00125600
CM 23,5 IN. 9 1/4



INSALATIERA | SALAD BOWL
004RG00 FIN000 01 0265 G00125600
CM 26,5 IN. 10 1/2



COPPETTA | FRUIT BOWL
004RG00 FCP000 01 0140 G00125600
CM 14 IN. 5 1/2



TAZZA CAFFÈ | COFFEE CUP
004RG00 FTZ301 01 0800 G00125600
CC 80 OZ. 2 3/4



PIATTO CAFFÈ | COFFEE SAUCER
004RG00 FPT301 01 0110 G00125600
CM 11 IN. 2 3/4



TAZZA TÈ | TEA CUP
004RG00 FTZ401 01 0220 G00125600
CC 220 OZ. 7 3/4



PIATTO TÈ | TEA SAUCER
004RG00 FPT401 01 0135 G00125600
CM 13,5 IN. 5 1/4

CATENE ZAFFIRO COLLECTION



MUG
004RG00 FTZ701 01 0400 G00125600
CC 400 OZ. 13 1/2



MUG CON COPERCHIO | MUG WITH COVER
004RG00 FTZ703 01 0400 G00125600
CC 400 OZ. 13 1/2



TEIERA PER 6 CON COPERCHIO |
TEAPOT WITH COVER FOR 6
004RG00 FTE400 01 0900 G00125600
LT 0,90 OZ. 30 1/2

CATENE ZAFFIRO - GIFTWARE



LATTIERA PER 2 | MILK JUG FOR 2
004RG00 FLT000 01 0135 G00125600
CC 135 OZ. 4 1/2




ZUCCHERIERA PER 2 | SUGAR BOWL FOR 2
004RG00 FZU000 01 0150 G00125600
CC 150 OZ. 5


CATENE ZAFFIRO COLLECTION



SVUOTATASCHE QUADRATO PICCOLO I
SMALL SQUARED VIDE POCHE
017RG02 FG6837 01 0180 G00125600
CM 18 IN. 7

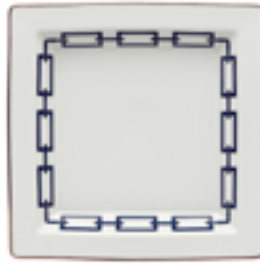

SVUOTATASCHE QUADRATO GRANDE I
LARGE SQUARED VIDE POCHE
017RG02 FG6836 01 0245 G00125600
CM 24,5 IN. 9 1/2

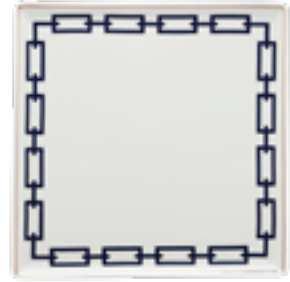

PIATTO SVUOTATASCHE QUADRATO I
VIDE POCHE SQUARED PLATE
172RG01 FVS121 01 30X G00125600
CM 30 IN. 12



COPPA QUADRATA BASSA I
LOW SQUARED CUP
172RG01 FCP220 01 13X G00125600
CM 13,5 IN. 5 1/4



COPPA GIO PONTI I GIO PONTI BOWL
020RG00 FG6499 01 G00125600
H CM 11 IN. 4 1/4



SCATOLA TALCO CON COPERCHIO I
ROUND BOX WITH COVER
017RG02 FX5080 01 G00125600
CM 13 IN 5

CATENE ZAFFIRO - TABLEWARE



ZUPPIERA OVALE | TUREEN WITH COVER
004RG00 FZP030 01 0400 G00125600
LT 4 OZ. 141



SALSIERA | GRAVY BOAT
004RG00 FSA010 01 0300 G00125600
CC 300 OZ. 11

CATENE ZAFFIRO - GIFTWARE



TAZZA CAFFÈ CON PIATTO E COPERCHIO,
SET PER 2 | TÊTE À TÊTE COFFEE SET
004RG00 FX9176 01 G00125600



SVUOTATASCHE RETTANGOLARE |
RECTANGULAR VIDE POCHE
017RG02 FG6838 01 0150 G00125600
CM 15 X 19 IN. 6 X 7 1/2



VASO IMPERO CON COPERCHIO |
IMPERO VASE WITH COVER
020RG00 FA6679 01 G00125600
CM 48 IN. 19

CATENE SCARLATTO - TABLEWARE



PIATTO PANE | BREAD PLATE
004RG00 FPT110 01 0160 G00125700
CM 16 IN. 6 1/2



PIATTO DESSERT | DESSERT PLATE
004RG00 FPT110 01 0220 G00125700
CM 22 IN. 7 3/4



PIATTO PIANO | FLAT PLATE
004RG00 FPT110 01 0280 G00125700
CM 28 IN. 11



PIATTO FONDO | SOUP PLATE
004RG00 FPT210 01 0245 G00125700
CM 24,5 IN. 9 1/2



SEGNAPOSTO | CHARGER PLATE
044RG00 FPT100 01 0310 G00125700
CM 31 IN. 12 1/4



COPPETTA | FRUIT BOWL
004RG00 FCP000 01 0140 G00125700
CM 14 IN. 5 1/2



TAZZA CAFFÈ | COFFEE CUP
004RG00 FTZ301 01 0800 G00125700
CC 80 OZ. 2 3/4



PIATTO CAFFÈ | COFFEE SAUCER
004RG00 FPT301 01 0110 G00125700
CM 11 IN. 2 3/4



TAZZA TÈ | TEA CUP
004RG00 FTZ401 01 0220 G00125700
CC 220 OZ. 7 3/4

CATENE SCARLATTO COLLECTION



PIATTO TÈ | TEA SAUCER
004RG00 FPT401 01 0135 G00125700
CM 13,5 IN. 5 1/4




MUG
004RG00 FTZ701 01 0400 G00125700
CC 400 OZ. 13 1/2

CATENE SCARLATTO - GIFTWARE



TAZZA CAFFÈ CON PIATTO E COPERCHIO,
SET PER 2 | TÊTE À TÊTE COFFEE SET
004RG00 FX9176 01 G00125700

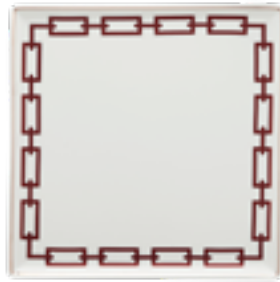

PIATTO SVUOTATASCHE QUADRATO |
VIDE POCHE SQUARED PLATE
172RG01 FVS121 01 30X G00125700
CM 30 IN. 12



COPPA QUADRATA BASSA |
LOW SQUARED CUP
172RG01 FCP220 01 13X G00125700
CM 13,5 IN. 5 1/4



COPPA GIO PONTI | GIO PONTI BOWL
020RG00 FG6499 01 G00125700
H CM 11 IN. 4 1/4



SCATOLA TALCO CON COPERCHIO |
ROUND BOX WITH COVER
017RG02 FX5080 01 G00125700
CM 13 IN 5

CATENE SCARLATTO - TABLEWARE



VASSOIO ROTONDO | ROUND FLAT PLATTER
004RG00 FPT110 01 0305 G00125700
CM 30,5 IN. 12



VASSOIO OVALE PIANO |
FLAT OVAL PLATTER
004RG00 FVS130 01 0340 G00125700
CM 34 IN. 13 1/4



VASSOIO OVALE PIANO |
FLAT OVAL PLATTER
004RG00 FVS130 01 0400 G00125700
CM 40 IN. 15 1/2



RAVIERA | PICKLE DISH
004RG00 FRV000 01 0235 G00125700
CM 23,5 IN. 9 1/4



INSALATIERA | SALAD BOWL
004RG00 FIN000 01 0265 G00125700
CM 26,5 IN. 10 1/2



MUG CON COPERCHIO | MUG WITH COVER
004RG00 FTZ703 01 0400 G00125700
CC 400 OZ. 13 1/2



TEIERA PER 6 CON COPERCHIO |
TEAPOT WITH COVER FOR 6
004RG00 FTE400 01 0900 G00125700
LT 0,90 OZ. 30 1/2

CATENE SCARLATTO - GIFTWARE




LATTIERA PER 2 | MILK JUG FOR 2
004RG00 FLT000 01 0135 G00125700
CC 135 OZ. 4 1/2



ZUCCHERIERA PER 2 | SUGAR BOWL FOR 2
004RG00 FZU000 01 0150 G00125700
CC 150 OZ. 5



SVUOTATASCHE QUADRATO PICCOLO |
SMALL SQUARED VIDE POCHE
017RG02 FG6837 01 0180 G00125700
CM 18 IN. 7

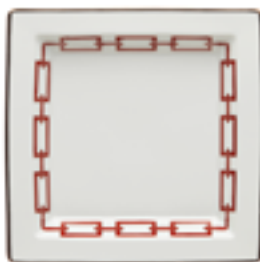

SVUOTATASCHE QUADRATO GRANDE |
LARGE SQUARED VIDE POCHE
017RG02 FG6836 01 0245 G00125700
CM 24,5 IN. 9 1/2

CATENE SCARLATTO - TABLEWARE



ZUPPIERA OVALE | TUREEN WITH COVER
004RG00 FZP030 01 0400 G00125700
LT 4 OZ. 141



SALSIERA | GRAVY BOAT
004RG00 FSA010 01 0300 G00125700
CC 300 OZ. 11

CATENE SCARLATTO - GIFTWARE



SVUOTATASCHE RETTANGOLARE I
RECTANGULAR VIDE POCHE
017RG02 FG6838 01 0150 G00125700
CM 15 X 19 IN. 6 X 7 1/2



VASO IMPERO CON COPERCHIO I
IMPERO VASE WITH COVER
020RG00 FA6679 01 G00125700
CM 48 IN. 19

CATENE SMERALDO - TABLEWARE



PIATTO DESSERT | DESSERT PLATE
004RG00 FPT110 01 0220 G00125800
CM 22 IN. 7 3/4



PIATTO PIANO | FLAT PLATE
004RG00 FPT110 01 0280 G00125800
CM 28 IN. 11



PIATTO FONDO | SOUP PLATE
004RG00 FPT210 01 0245 G00125800
CM 24,5 IN. 9 1/2



COPPETTA | FRUIT BOWL
004RG00 FCP000 01 0140 G00125800
CM 14 IN. 5 1/2



TAZZA CAFFÈ | COFFEE CUP
004RG00 FTZ301 01 0800 G00125800
CC 80 OZ. 2 3/4



PIATTO CAFFÈ | COFFEE SAUCER
004RG00 FPT301 01 0110 G00125800
CM 11 IN. 2 3/4



TAZZA TÈ | TEA CUP
004RG00 FTZ401 01 0220 G00125800
CC 220 OZ. 7 3/4



PIATTO TÈ | TEA SAUCER
004RG00 FPT401 01 0135 G00125800
CM 13,5 IN. 5 1/4

CATENE SMERALDO - GIFTWARE



TAZZA CAFFÈ CON PIATTO E COPERCHIO,
SET PER 2 | TÊTE À TÊTE COFFEE SET
004RG00 FX9176 01 G00125800



COPPA GIO PONTI | GIO PONTI BOWL
020RG00 FG6499 01 G00125800
H CM 11 IN. 4 1/4

CATENE SMERALDO - TABLEWARE



PIATTO PANE | BREAD PLATE
004RG00 FPT110 01 0160 G00125800
CM 16 IN. 6 1/2



SEGNAPOSTO | CHARGER PLATE
044RG00 FPT100 01 0310 G00125800
CM 31 IN. 12 1/4