IMPORTANT NOTICE

Do Not Return To The Place Of Purchase

If there is a problem or question about your net contact BOWNET directly

Warning:


- · Only use and set up with adult supervision.
- · Don't drag. Use two people to move net.
- · Don't leave net 'set up' unatended, overnight or for extended periods in inclement weather.
- · Keep fingers away from hinges and joints
- Only use a flat thumb to depress buttons
- · Net must only be used for the Sport for which it was designed.
- Replace damaged or missing parts IMMEDIATELY
- · Never climb or hang on net or framework. Always keep net securely anchored with stakes or sandbags. Unsecured net can fall over causing serious injury or death.



1. Place double hinge on ground with net spread out away from you. Open one half of frame resting it on the ground.




4. Lay the frame on the ground with the rubber feet down and the four tubes up

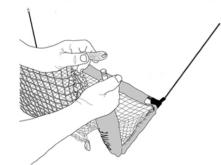

7. Take the 2 front Plastic Quick Clips and 8. Repeat with rear Plastic Quick Clips 9. Finally take black Loops (A) and place place over the tops of the front Poles.



Assembly Instructions for 3'x5' 4'x6'and 4'x8' goals

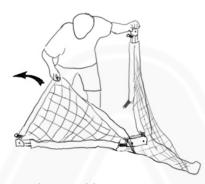

Lift side of frame until hinge locks (clicking sound)



5. Take 2 of the four Black Poles and slot them into the 2 rear tubes.



holding Poles and Net firmly.






3. Repeat on other half of frame. All four hinge buttons must be locked.



6. Feed the 2 remaining Poles down the Nets orange 'front posts' sleeves and slot them into the front tubes.

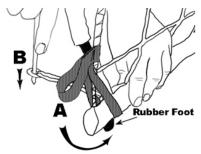

under Rubber Feet. (B) Stake the Net on Grass or use Bowbags on Turf (not supplied)

CA PROPOSITION 65 WARNING

WARNING: This product is fabricated from materials which may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

1 year limited Manufactures Warranty on Manufacturing defects only. For a full description of Warranty-Guarantee-Terms & Conditions. See www.bownet.net/pages/warranty-page