

**IMPORTANT  
NOTICE**

**Do Not Return To The Place Of Purchase**  
If there is a problem or question about your net contact BOWNET directly

**Warning :**

 
- Only use and set up with adult supervision.
- Don't drag. Use two people to move net.
- Don't leave net 'set up' unattended, overnight or for extended periods in inclement weather.
- Keep fingers away from hinges and joints
- Only use a flat thumb to depress buttons
- Net must only be used for the Sport for which it was designed.
- Replace damaged or missing parts IMMEDIATELY
- Never climb or hang on net or framework. Always keep net securely anchored with stakes or sandbags. Unsecured net can fall over causing serious injury or death.





**Assembly Instructions for  
Pitching Screen**



1. Swing net open and place one hinge on the ground then open to full width, and lay both hinges on the ground

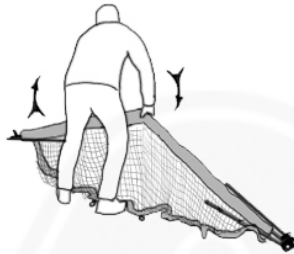

  
2. Hold legs and swing them out to the locked (clicked) position.

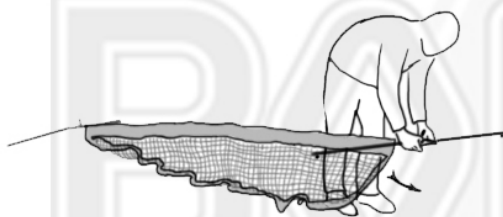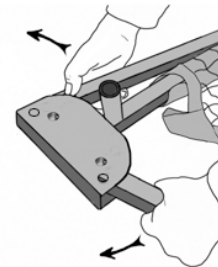

3. Repeat with all four legs 3A. Then open the top orange flaps revealing the pole sleeves



 4. Take a black pole (with silver coupling) and slide it down the orange pole sleeve. Placing the end into the frame tube.

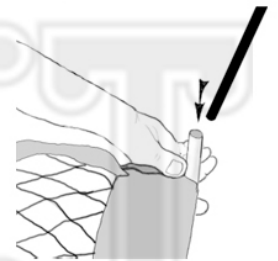


5. Slot pole (with grooved top) into silver coupling of lower pole and slide orange sleeve up



6. Loop the cord over the rod top and close orange flap



 7. Insert pole on other side

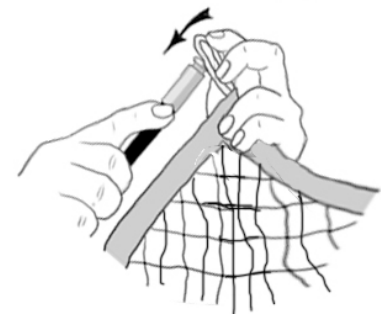

8. Finally loop cord over rod top and close 2nd flap

1 year limited Manufactures Warranty on Manufacturing defects only.  
For a full description of Warranty- Guarantee-Terms & Conditions.  
See [www.bownet.net/pages/warranty-page](http://www.bownet.net/pages/warranty-page)

**CA PROPOSITION 65 WARNING**  
**WARNING:** This product is fabricated from materials which may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.