


nutribullet®

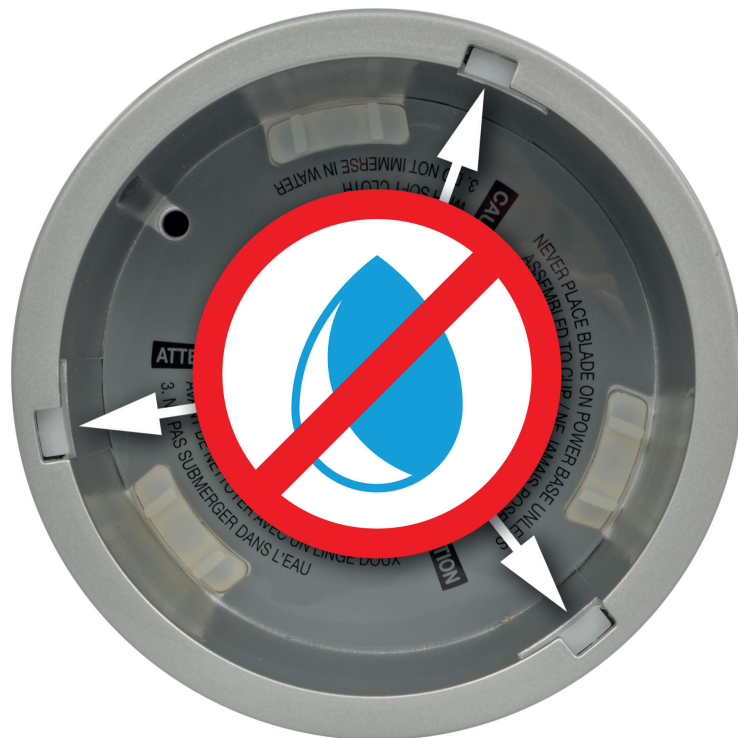

Do you know...

- No fluid may enter the engine through the 3 white rubbers in the base unit. Then there is a good chance that the engine will oxidize, the NutriBullet will make more noise, will spread a burning odor or the device will no longer function properly.
- Also, no dirt or ingredients should end up in the 3 actuator tabs (at the top on the edge of the base unit). They get stuck as a result of which the blender can no longer function.

Please note! The above problems are not covered by the warranty.

Tips:

- Twist the blade properly onto the cup, tighten it to make sure it's sealed. Check this!
- Never blend hot ingredients and liquids (max. 21°C).
- Never allow the NutriBullet to run more than 1 minute.
- Carefully keep the outside and inside of the blender clean with a damp (not wet!) cloth. Take good care of the 3 white rubbers.
- Please pay particular attention to the actuator tabs to loosen any sticky debris from drips and spills. If necessary you may use a small brush to ensure it is kept clean.
- To avoid leakage, don't overfill the cup. Stick to the maximum cup / pitcher quantity. This is indicated by a MAX line on the cup / pitcher. Also always add liquid!
- NEVER wash blades in the dishwasher, elevated temperatures warp the plastic and damage the gasket.
- Do not use your NutriBullet, its parts and accessories in the microwave or freezer.
- Replace your blade every 6 months or earlier to maintain optimal performance.

Questions?

Please read the manual and Quick Guide carefully. Or contact us for tips and tricks via info@nutribullet.nu or consult the FAQs via service@nutribullet.nu.