

JOSÉ EBER

Professional Curling Irons

For virtual salon instructions please visit
www.joseeberhair.com
www.josecurl.com

© 2013 TOL, Inc. José Eber is a registered trademark of José Eber, Inc. José Eber name, signature, likeness and logo are used under license. All rights reserved.

FEATURES & INSTRUCTIONS CLIPLESS CURLER/CLIPLESS TRIO

FEATURES

- Innovative, modern and ergonomic design
- Advanced coating non-stick barrel
- Quick heat up with even heat distribution
- Dual voltage 110-240V
- 360° tangle-free professional swivel cord

USER MAINTENANCE INSTRUCTIONS

- Your appliance is virtually maintenance free.
- Keep heated parts and surfaces clean and free from dust, dirt and chemicals (such as hair spray).
- If cleaning becomes necessary, remember to disconnect the appliance from the power supply and allow to cool. Then wipe the exterior with a damp (never wet) cloth. If the cord becomes twisted or tangled, untangle it before use.

WARNING: If any malfunction occurs, DO NOT attempt to repair it. There are no user-serviceable parts.

INSTRUCTIONS AND STYLING TIPS

1. Ensure hair is completely dry and combed through.
2. Plug the iron into a current socket of a voltage specified on the rating plate. Move the on/off switch to the on position. Wait 3-5 minutes before use.
3. Prior to using the iron, place the Heat Resistant Glove on the hand you select the hair with.
4. Your curling iron has a non-stick barrel so you can use your favorite gel, hair spray or mousse without worry of hair sticking to the iron.
5. Separate a small even section of hair to curl.
6. Place the base of the iron handle near you scalp, with the tip of the iron facing down.
7. Wrap the hair section from the base of the curling iron to the tip in a spiraling, downward direction.
8. Hold the wrapped curl in place for 2 to 5 seconds.
9. Without pulling the curling iron down, release the hair from the tip, allowing it to loosen around the barrel.
10. Slide the curling iron out of the hair.
11. After use, move the on/off switch to the off position and unplug the iron. Allow to cool before storing away.

FEATURES & INSTRUCTIONS CLIPPED CURLER/CLIPPED TRIO

FEATURES

- 3 easily interchangeable clipped barrels
- Advanced non-stick coating
- Quick heat up with even heat distribution
- Dual voltage 110-240V
- 360° tangle-free professional swivel cord.

INSTRUCTIONS AND STYLING TIPS

1. Ensure hair is completely dry and combed through.
2. Plug the iron into a current socket of a voltage specified on the rating plate. Be sure the barrel you have decided to use is securely attached to the iron base. Move the on/off switch to the on position. Wait 3-5 minutes before use.
3. Prior to using the iron, place the Heat Resistant Glove on the hand you use to hold and manipulate the hair with.
4. Your curling iron has non-stick barrels so you can use your favorite gel or mousse without worry of hair sticking.
5. Separate a small, even section of hair to curl.
6. Place the base of the curling iron at the root and press the clip handle to lift the clamp, and secure the section of hair. Let go of clamp so hair is secured.
7. With light pressure on the clamp, twist the curling iron slowly to wrap the hair around the barrel. For best results, twist curling iron in the direction away from the face.
8. Hold the wrapped curl in place for 2 to 5 seconds.
9. Without pulling the curling iron down, release the clamp, allowing hair to loosen around the barrel.
10. Slide the curling iron out of the hair. Repeat as desired around entire head.
11. After use, turn off and unplug the iron. Allow to cool before storing away.

BARREL CHANGING INSTRUCTIONS


IMPORTANT: Always make sure that the iron is turned OFF and the barrels are cool when attaching or removing a barrel.

1. To remove a barrel, press and hold the barrel release button on the underside of handle fully. At the same time, pull the barrel away from the handle.
2. To attach a barrel, align the clip handle on the barrel with the display screen. Press the barrel into the handle. When you hear a sharp click, the barrel is locked.

IMPORTANT: Always double check to make sure that the barrel is securely locked before turning the iron ON.

SPECIAL INSTRUCTIONS CLIPLESS & CLIPPED TRIO

1. Power on / off: Press and hold down the On/Off button for 3 seconds to turn the iron on. Screen becomes green and shows default temperature of 180 degrees C. When done using, press and hold down the On/Off button for 3 seconds to turn the iron off.
2. Temperature adjustment: Quick press the Temperature Up button to increase heat. Screen color will change to red. Quick press the Temperature Down button to decrease heat. Screen color will change to blue. Each press increases or decreases heat by 10° Celsius or 18° Fahrenheit. The temperature range of the iron is between: 50° - 200° Celsius or 120° - 390° Fahrenheit.
3. Display shift: Press the Temperature Up button for 3 seconds to shift display between Celsius and Fahrenheit.
4. Optional Auto Shut Off feature: Press the Temperature Down button for 3 seconds to activate Auto Shut Off feature, screen will show 30 Min, meaning the iron will shut off after half an hour. When Auto Shut Off is on, minutes will be displayed in the lower right corner of the screen. Press Temperature Down button for 3 seconds to cancel the Auto Shut Off.

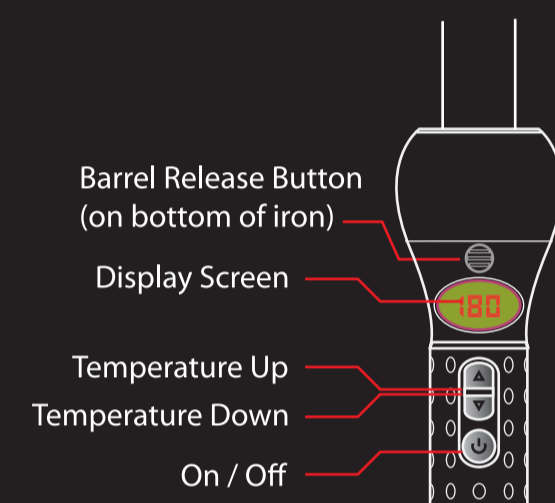

SAFETY

STORAGE

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry and out of reach children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

For questions regarding this product, please contact:

TOL, Inc.: support@tolproducts.com
26570 Agoura Rd, Suite #180, Calabasas, CA 91302

GLOVE CLEANING INSTRUCTIONS

Your iron set comes with a heat resistant styling glove. If necessary, this glove can be either hand washed or machine washed, and then tumble dried. Only use the glove when it is completely dry. Do not use if damp or wet.

READ ALL INSTRUCTIONS BEFORE USING.

KEEP THE UNIT AWAY FROM WATER.

DANGER: As for most electrical appliances, electrical parts are electrically live even if the unit is turned off.

Always hold the iron by the handle only!

Do not let the iron touch any other surface when it's hot.

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed in this manual.



Set the curling iron down in this orientation



Do not set the curling iron down in this orientation

IMPORTANT SAFETY INSTRUCTIONS

For reducing fatal risk by electrocution:

- Always unplug the appliance immediately after using.
- Do not use while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a water tub or sink.
- Do not place in or drop into water or other liquid.
- If the appliance falls into water, unplug it immediately. Do not reach into water.

To reduce the risk of burns, electrocution, fire or injury to any person:

- User should not leave an appliance unattended when it is plugged in.
- Extra care should be paid when appliance is used by, on, or near children or individuals with certain disabilities.
- Do not use any attachments which are not provided by the manufacturer. Follow all instructions mentioned in this manual when using.
- Never use the appliance when cord or plug are damaged.
- Also, if the appliance does not work properly or is dropped into water/fluid, do not use it and return the appliance to a service center for examination and repair.
- Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
- Do not use outdoors and never use the appliance together with any aerosol (spray) products.
- Never use this appliance while oxygen is administered.
- Never use while sleeping.
- Do not use an extension cord with this appliance.
- Do not put hair care product or water directly on the barrels.

STORAGE

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry and out of reach children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

SAVE THESE INSTRUCTIONS

LIFETIME WARRANTY

TOL, Inc. and Buzz Beauty Ltd. provide a limited lifetime replacement warranty on this appliance, covering any breakage, failure to heat, or other malfunction due to design or manufacturing defect, for the life of the product. This warranty does not apply to problems which are the result of misuse, or normal wear and tear. To invoke the warranty, send the appliance with all its parts to the address below.

Include your name, address, telephone number, email address, and a brief explanation of the problem. You must also include a copy of your sales receipt, and payment in the amount of US\$19.95, or UK£19.95 to cover the cost of shipping and handling of your replacement product. No refunds will be issued. Canadian customers: money orders are accepted only from a U.S. bank. The manufacturer's two year warranty IS NOT applicable to any purchases made from any unauthorized dealers or unauthorized resellers of José Eber hair appliances and will not be honored. You may confirm that a reseller is authorized to sell José Eber hair appliances by contacting customer service directly at the respective address below.

For questions regarding this warranty, please contact:

For warranties in North America:

TOL, Inc.: cs@tolproducts.com
26570 Agoura Rd, Suite #180
Calabasas, CA 91302

For warranties in United Kingdom and Europe:

Buzz Beauty Limited : cs@buzzretail.co.uk
Suites 1-3, Sweetspace (802)
Highgate Studios, 53/79 Highgate Road
London NW5 1TL

JOSÉ EBER



Conforms to UL STD.859
Certified to CSA STD. C22.2 NO. 36
Made in China



DANGER ELECTROCUTION POSSIBLE IF USED OR DROPPED IN TUB. UNPLUG AFTER USING
DANGER ELECTROCUTION UTILISE OU SI POSSIBLE EN BAISSE TUB. DEBRANCHER MOYENN. APRES.

BY MAIL

By returning your registration form, you're actively registering your product. Complete the information below and mail with a copy of your receipt to "TOL Inc."

ADDRESS

CITY/STATE/ZIP

PHONE

EMAIL

PRODUCT NAME / MODEL / UPC OR EAN #

PURCHASED FROM

DATE OF PURCHASE

ONLINE

www.joseeberhair.com
www.joseeberhair.eu

To invoke your limited lifetime warranty, please take a moment to register within 90 days of purchase. A valid limited lifetime warranty requires that terms and conditions be followed.