

# JOSÉ EBER

## DIGITAL STRAIGHTENING BRUSH

For virtual salon instructions or to shop the José Eber store please visit

[www.joseeberhair.com](http://www.joseeberhair.com)

© 2016 TOL, Inc. José Eber is a registered trademark of José Eber, Inc. José Eber name, signature, likeness and logo are used under license. All rights reserved.

Model: RST-111  
Rating: 100-240V~, 50-60Hz, 40W, Class II

### FEATURES & INSTRUCTIONS

1. Safely plug brush into an electrical outlet.
2. Turn on by pressing and holding the "ON" button for about 3 - 5 seconds. The "ON" button is located on the right hand side of the brushes' handle. The brush is on when the temperature reading display lights up.
3. Select desired temperature based on hair type.
4. Please refer this *Personalized Heat Temperature Chart*:

#### PHT CHART

Low: 320° - 360°F 160° - 180°C	Straight- Wavy - Fine - Chemically Treated - Heat Damage - Bonds - Tape
Medium: 360° - 400°F 180° - 205°C	Wavy - Curly - Medium - Chemically Treated - Heat Damage - Micro Beads
High: 400° - 450°F 205° - 230°C	Wavy - Curly - Medium - Coarse - Virgin - Sewn-in - Micro Beads


5. Set temperature by pressing the "+" or "-" buttons, located on the right hand side of the brushes' handle.
6. Check temperature reading display to ensure desired temperature has been reached. This could take up to two minutes. Once desired temperature has been reached, recovery time on this brush is immediate so the temperature will remain even while in use.
7. On dry hair, take a section and run straightening brush from roots to ends with a slow downward motion. Make sure that the section of hair penetrates deep in to the bristles of the brush. Brushing at a slow pace will ensure the correct amount of heat is absorbed throughout the section, making it easier to straighten.
8. Take sections that feel comfortable to manage, do not take sections that are too large, as the heat won't be able to penetrate deeply and evenly.
9. Don't be afraid to run the brush close to the scalp. The

### FEATURES & INSTRUCTIONS

10. We recommend paying attention to the following areas of the strand of hair:  
*Roots:* This is where volume is added or reduced depending on hair type. To add volume at the roots, place straightening brush at a 90-degree angle from the roots and brush up and away from the scalp. To decrease volume, brush hair down and close to the scalp.  
*Mid-strand:* This is where hair texture is the most resistant, especially on coarse, curly hair. If too much resistant texture is encountered, we recommend multiple passes only to that area of the hair, or setting the temperature slightly higher.  
*Ends:* This is where hair tends to be the most sensitive to heat. We recommend fewer passes and, if needed, lower heat.
11. As a safety measure, we recommend checking twice if the straightening brush has been turned off correctly. After finishing styling hair, press and hold the "ON" button until the temperature reading display is completely off, and only then will it be safe to unplug straightening brush.
12. Allow brush to cool completely before storing.

**Fahrenheit / Celsius Display:**  
Press the "+" then "-" button in rapid succession to toggle between Fahrenheit and Celsius display.

For your safety, this appliance has an Auto-Shutoff function. If left on, it will automatically shut off after 60 minutes.

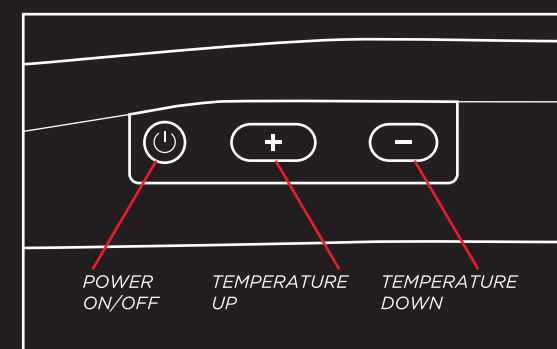

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed below.


READ ALL INSTRUCTIONS BEFORE USING  
KEEP THE UNIT AWAY FROM WATER  
DANGER: As for most electrical appliances, electrical parts are electrically live even if the unit is turned off.  
For reducing fatal risk by electrocution:

1. Always unplug the appliance immediately after use.
2. Do not use while bathing or showering.
3. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into water.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

### IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of burns, electrocution, fire or injury to any person:

1. User should not leave an appliance unattended when it is plugged in.
2. Extra care should be paid when appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never use the appliance when cord/plug is damaged. Also, if the appliance does not work properly or is dropped into water/fluid, do not use it and, and/or return the appliance to a service center for examination and repair.
5. Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Do not use outdoors and never use the appliance together with any aerosol (spray) products.
7. Never use this appliance while oxygen is administered.
8. This appliance is hot when in use. Do not let eyes and bare skin touch heated surfaces.
9. Do not place the heated appliance directly on any surface while it is hot or plugged in.
10. Never drop or insert any object into any opening on the appliance.
11. Attachments become hot during use. Let them cool before handling.
12. Never use while sleeping.
13. Do not use an extension cord with this appliance.
14. Any other servicing should be performed by an authorized service representative of that the appliance has no user serviceable parts.

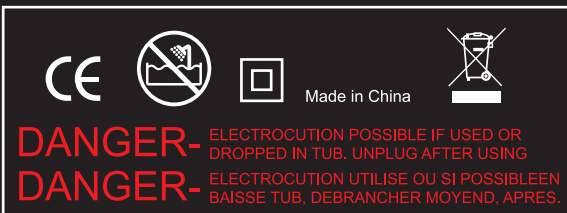

### IMPORTANT SAFETY INSTRUCTIONS

#### SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED". The symbol (square within a square) may also be marked on the appliance.

#### SAVE THESE INSTRUCTIONS

- Your appliance is virtually maintenance free. No lubrication is required.
- Keep heated parts & surfaces clean and free from dust, dirt and chemicals (such as hair spray)
- If cleaning becomes necessary, remember to disconnect the appliance from the power supply and allow to cool. Then wipe the exterior with a damp (never wet) cloth. If the cord becomes twisted or tangled, untangle it before use.
- WARNING: If any malfunction occurs, DO NOT attempt to repair it. There are no user-serviceable parts.

#### STORAGE:

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry and out of reach of children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



### LIFETIME WARRANTY

Congratulations on your purchase of our product. With proper care, this hair appliance will provide the results you seek for healthy, shiny, beautiful hair.

**TOL, Inc. and Buzz Beauty Limited** provide a limited lifetime replacement warranty on this appliance, in accordance with the legislation of the customer's own country of residence, starting from the date on which the appliance is sold to the end user. The warranty only covers defects in material or workmanship. The repairs under warranty may only be carried out by an authorized service center. The warranty will not apply in cases of: • Normal wear and tear • Incorrect use, e.g. overloading of the appliance, use of non-approved accessories • Use of force, damage caused by external influences • Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions • Partially or completely dismantled appliances. To invoke the warranty, send the appliance with all its parts to the address below. Include your name, address, telephone number, email address, and a brief explanation of the problem. You must also include the original bill of purchase (with purchase date), and payment in the amount of US\$19.95 or UK£19.95 to cover the cost of shipping and handling of your replacement product. No refunds will be issued.

If you have any questions regarding this warranty, please contact:

For warranties in North America:  
TOL, Inc.: [customerservice@tolproducts.com](mailto:customerservice@tolproducts.com)  
26570 Agoura Rd. Suite #180  
Calabasas, CA 91302

For warranties in United Kingdom and Europe:  
Buzz Beauty Limited : [cs@buzzretail.co.uk](mailto:cs@buzzretail.co.uk)  
Suites 1-3, SweetSpace (802)  
Highgate Studios, 53/79 Highgate Road  
London NWS 1TL

**JOSÉ EBER**  
DIGITAL STRAIGHTENING BRUSH

[www.joseeberhair.com](http://www.joseeberhair.com)

### BY MAIL

By returning your registration form, you're actively registering your product. Complete the information below and mail with a copy of your receipt to **Buzz Beauty Ltd.**

NAME	_____
ADDRESS	_____
CITY/STATE/ZIP	_____
PHONE	_____
EMAIL	_____
PRODUCT NAME / MODEL / UPC OR EAN #	_____
PURCHASED FROM	_____
DATE OF PURCHASE	_____

ONLINE  
[www.joseeberhair.com](http://www.joseeberhair.com)  
[www.joseeberhair.eu](http://www.joseeberhair.eu)

To invoke your limited lifetime warranty, please take a moment to register within 90 days of purchase. A valid limited lifetime warranty requires that terms and conditions be followed.