

Fitting Instructions for the Isuzu Dmax / Mazda BT50 Rear Neoprene Seat Cover


Please read this document in its entirety prior to fitting the seat cover. If you have any specific questions or troubles fitting the seat cover, please contact us first, as we are more than willing to assist with any enquiry.

	Step 1) Push the front seats as far forward to the front of the vehicle, to ensure an easier fitment of the rear seat cover. Step 2) Remove all 3 headrests
PRE FITMENT	Step 3 – HEADREST FITMENT - As per the pictures to the left, fit the headrest cover by placing the headrest into the headrest cover. Squeeze the foam in the headrest to make it easier to fit the headrest cover. The 'Feature thread' should be facing the front of the vehicle.
	 Please be gentle when fitting the headrest cover, as it is a tight, custom-fit design. The Centre Headrest is slightly smaller in size
	Step 4) Place the headrests safely to one side, as they will be re- fitted in Step 7


Step 5) Prior to the upcoming steps it is important to unclip the middle seat belt buckle (if not removed you are unable to fit the cushion section) This can be done by pressing in the red button with a blunt object (such as a key)
Step 6) Backrest Fitment – Lower the backrest by pulling the tag upwards (near the centre of the seat). For the easiest fitment of the backrest seat cover, lower the backrest to a 45-degree angle.
Step 7) Place the backrest cover over the seat back. To ensure the easiest possible fitment, you should re-fit one headrest at a time through the eyelets. This will act as a locking mechanism for the seat cover, so that it can be fitted much easier in the later steps. Note: Ensure that the cover is fitted underneath the seat belt (not over the top of it).
Once fitted, ensure that the tags, which are used to lower the backrest, are lined up and gently pulled through the slits. There is also 2 x outer clips that can be fitted through a slit in the seat cover (see photo to the left)

Step 8) Carefully tuck the neoprene between the gap of the backrest and the cushion. This will be used to join the velcro to the carpet on the other side of the backrest. Note: It is much easier to tuck the material through the gap when the cushion section is lifted up (Please refer to step 9 to see how you can lift up the cushion)
Step 9) – To raise the cushion section simply pull the strap and then lift the cushion section.
Step 10) In this step you will fit the velcro to the carpet, which is located on the back of the backrest. In order to do this lower the backrest section (as per Step 6) to a flat position. Pull the neoprene through the gap as far as possible (as per Step 8) to ensure that the backrest cover has a tight snug fit. Once pulled through sufficiently, remove the protective touch tape and affix to the carpet on the back of the backrest.
Note: Please don't throw away the removed protective touch tape, as it will be necessary to keep in the event that you remove the seat covers – Further details included in ' Removal of the Seat Cover – Special Considerations'



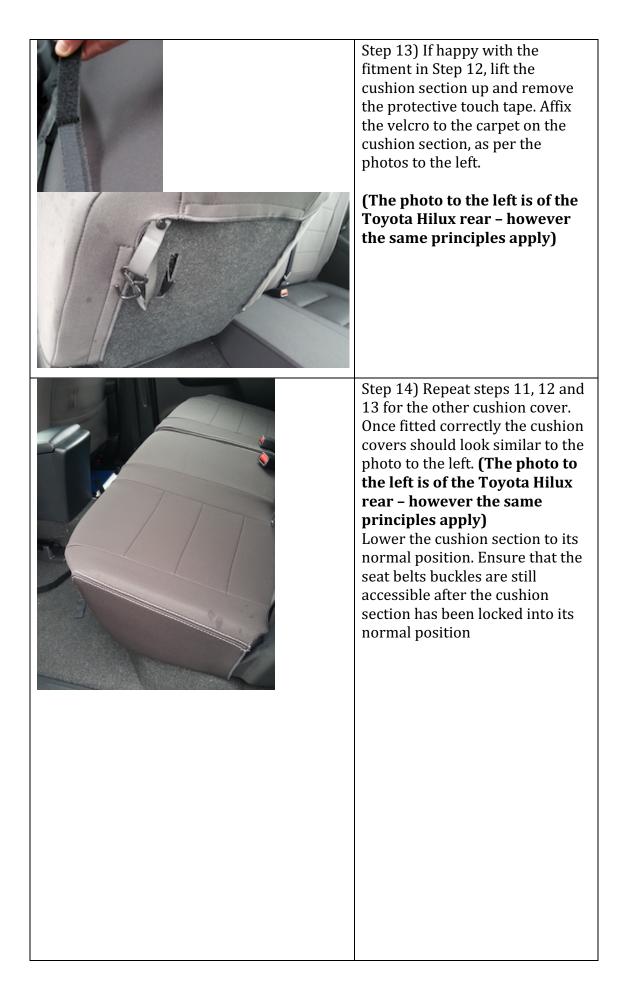

Pre October 2022 – There was an additional section of carpet underneath

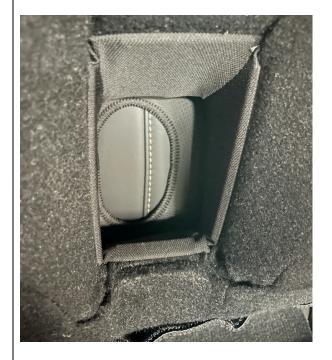

Post October 2022 – Some models had the carpet removed, which requires the seat cover to be pulled higher up on the seat



Step 15) The below steps relate to vehicles manufactured after October 2022, that have a carpet section removed.

Cushion Fitment – As there is a 60% and 40% split in the cushion, we have designed a 2 piece cushion seat cover. The same process applies for both cushion covers. Start by lifting the cushion – As per Step 9



Step 16) After the cushion is raised, place the appropriate cover over the cushion. Tuck the neoprene through the gap between the cushion and the backrest. Prior to removing the protective touch tape, ensure that you are happy with the fitment.

Step 17) Connect the Velcro at the back of the seat cover to the carpet. As mentioned earlier for October 2022 models onwards you will need to pull the cover / Velcro up higher to affix the seat cover carpet. Be careful not to be too aggressive, as you may tear the neoprene.

Once affixed you can then proceed to affix the Velcro at the front and sides of the seat cover.



You will notice that the hole for the seat belt buckle cut out is not central to the hole in the seat. This is fine. The seat belt buckles will still fit through the hole as per the below step.



Step 17) Once the cushion section has been fitted correctly you can lower the cushion into its normal position. Ensure that the seat belt buckles are slotted back into the cut out in the seat.

Gently pull the seat cover material outwards whilst raising the seat belt buckles into the upright position. The buckles do tend to want to sit flat towards the front of the vehicle, so make sure you pull it into the upright position.

Slot the material underneath the seat belt buckles so it doesn't interfere with the functionality of the buckles.



Removal of the Seat Cover – Special Considerations

- 1) Removal of the headrest covers Carefully remove the headrest from the base of the backrest. Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest and cushion cover Once completely removed, re-attach protective touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

On-going Maintenance / Care Instructions

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc

Warranty Claims

Warranty claims are valid for 1 year and will only be accepted if the material or sewing is found to be defective. Photographic evidence must be provided prior to any goods being returned to Global Automotive Accessories for a warranty claim. Failure to follow the fitting instructions will void any warranty claims. Although the material is durable and stretchable in nature, if the cover is fitted too aggressively, like all materials it can tear. Please ensure that the covers are fitted gently and with care.

Any further questions please contact:

Andrew Leask Owner / Director

Global Automotive Accessories PO Box 217 Moorabbin VIC 3189 M: 0413 438 874 E: <u>andrew@globalautomotive.com.au</u>