
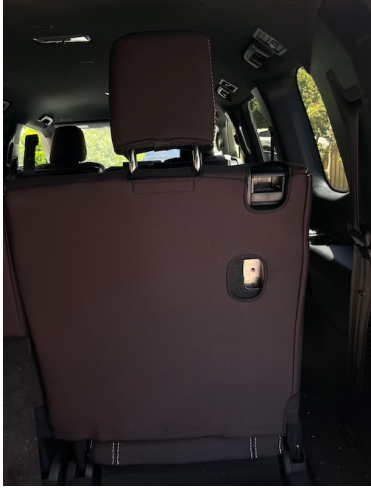



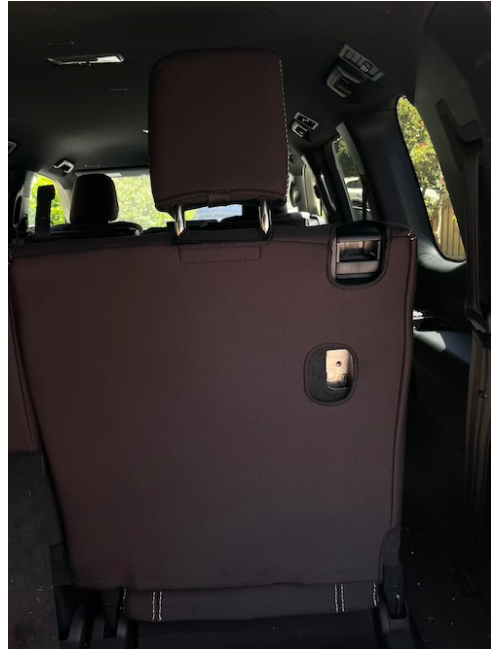
Important things to know PRIOR to fitment:

a) When fitting the seat cover over the backrest section – It is very important that you aren't too rough in the fitment (particularly on the airbag panels). You should carefully lower the cover at the same rate. If one side is drastically favoured when fitted, it will stretch the opposing panel, which may potentially tear the seat covers stitching. If needing to re-position the seat cover, please make sure you pinch the seam and re-adjust, not pull the seat cover.

	<p>Step 1) Backrest fitment – Prior to fitting the seat cover you should ensure you are fitting the correct side. The easiest way is to identify the hole on the back of the seat that has been created for access to the tether point.</p>
	<p>Step 2) Fit the seat cover over the top of the seat. Ensure that the strap which is accessible and fed through the slit that has been created in the seat cover.</p> 

	<p>Step 3) Feed the neoprene at the front of the cover through the gap of the cushion and backrest section. This will join up with the Velcro on the back of the seat. When joining the velcro together at the back of the seat push the guard towards the rear it will get hidden under the seat cover when joined together.</p> 
	<p>Step 5) Ensure that all cut outs are positioned correctly for access. NB: Some models with electric seats don't have the cut out in the top (door time side) as the seat is electronically operated. The photo to the left is of the manual adjustment.</p>
	<p>Step 6) Fit Headrest Cover and then fit the other backrest cover</p> <p>Step 7) Cushion Fitment - Place seat cover over the top of the cushion. Affix the 5 x Velcro pieces to the carpet underneath or on the back of the seat. The Velcro pieces are located in the following positions:</p> <ul style="list-style-type: none"> 1 at the back 2 on the side 2 at the front

PLEASE SEE VARIOUS PHOTOS BELOW OF HOW THE PRODUCT SHOULD LOOK IF FITTED CORRECTLY



Removal of the Seat Cover – Special Considerations

- 1) Removal of the headrest covers – Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together – This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest & cushion cover - You must carefully remove the cover evenly on both sides at the same rate. If only one side is raised first, it may result in the stitching tearing (warranty claims will not be accepted if neoprene / stitching is damaged as a result of incorrect removal).
- 3) Removal of the backrest and cushion cover – Once completely removed, re-attach touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

On-going Maintenance / Care Instructions

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc.

Any further questions please contact:

Andrew Leask
Owner / Director

Global Automotive Accessories
T: 1300 101 707
E: andrew@globalautomotive.com.au
W: www.globalautomotive.com.au