



# Fitting Instructions for the Toyota LC300 Series GX / GXL 2<sup>nd</sup> Row Neoprene Seat Cover

Due to the airbags incorporated in the vehicles seating, for your safety, it is extremely important that you read this entire document, prior to fitting the seat covers. Our customer's safety is the most important thing to us, so If you have any specific questions or troubles fitting the seat cover, please contact us first, as we are more than willing to assist with any enquiry.


## Important things to know PRIOR to fitment:

a) When fitting the seat cover over the backrest section – It is very important that you aren't too rough in the fitment (particularly on the airbag panels). You should carefully lower the cover at the same rate. If one side is drastically favoured when fitted, it will stretch the opposing panel, which may potentially tear the seat covers special airbag stitching, which has been designed specifically for airbag safety / deployment. If needing to re-position the seat cover, please make sure you pinch the seam and re-adjust, not pull the seat cover.

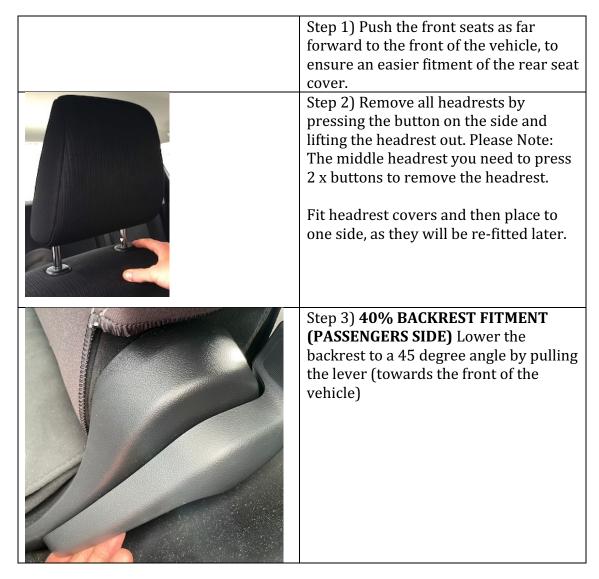

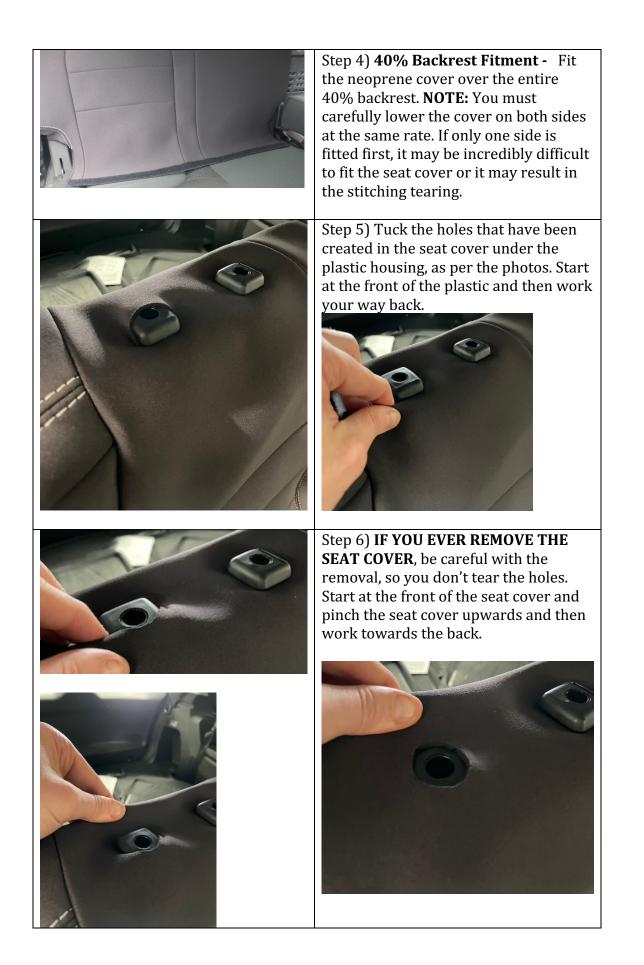

Global Automotive Accessories Toyota LC300 GX / GXL – 2<sup>nd</sup> Row Seat Cover Fitting Instructions

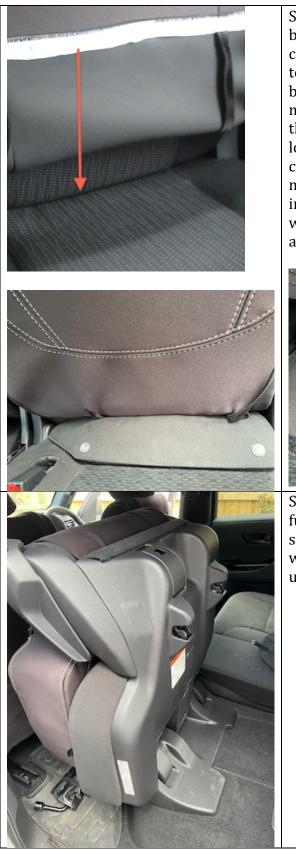

Step 7) Carefully push the neoprene between the gap of the backrest and the cushion. This will be used to join the touch tape on the other side of the backrest (see Step 9). **Please Note:** It is much easier to tuck the material through the gap when the backrest is lowered to a 45 degree angle, as covered off in Step 3. You will need to navigate around a cable that is incorporated in the seat. Which is why we have a cut out in the seat to go around the cable – See below photo.



Step 8) Once the neoprene has been fully pushed through the gap. Push the seat all the way down using the lever, which in turn will lift the cushion seat upwards.



Step 9) Join the 2 velcro tabs together that are located on the back of the cover. (as per the picture to the left). **Note: You will need to remove the protective touch tape first from one side** (see below).

Ensure that all holes and provisions on the back of the cover are correctly lined up, so that the backrest can function as normal.




**Note:** Please don't throw away the removed protective touch tape, as it will be necessary to keep if you remove the seat covers – Further details included in '**Removal of the Seat Cover – Special Considerations**'

Step 10) Raise the backrest to its original, upright position. Refit the headrest and headrest cover. To ensure the headrest cover is fitted the correct way, the twin needle stitching will always be pointing towards the rear of the vehicle with the horizontal Velcro fitted towards the front of the vehicle.

**Front of headrest** 



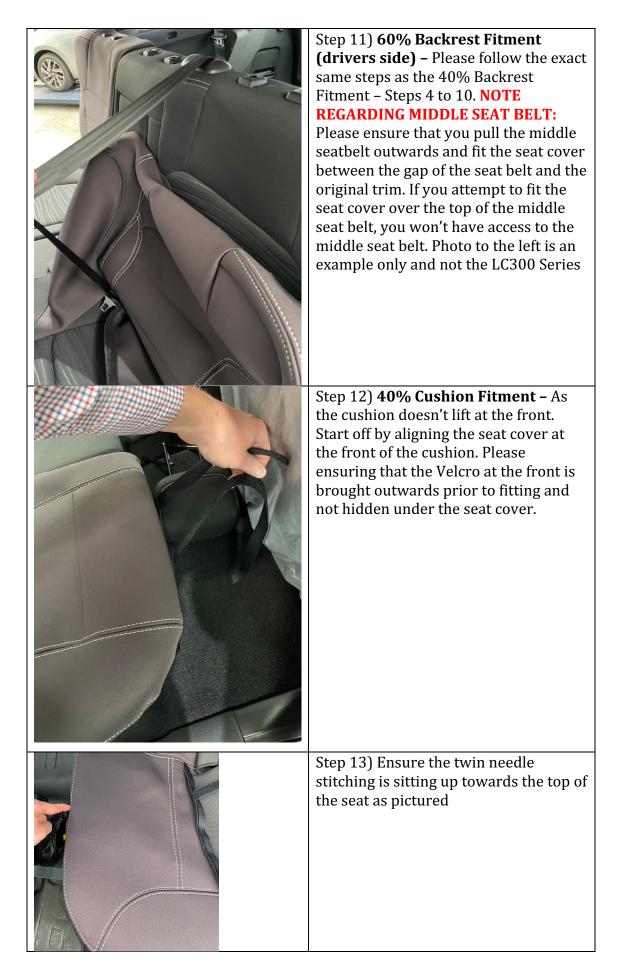

	Step 14) If you intend to use the isofix points / baby seat access please lift up the protective fabric which is affixed via Velcro and go onto Step 15. If not intending to use the isofix points you can place the seat cover over the top of the protective fabric and go to Step 16. Please Note: We are required to put slits within the seat cover irrespective of isofix use, as there must be available access
LIKE THIS	Step 15) <b>Those wanting to use ISOFIX</b> – Fold protective tape fabric inward
	(photo to the left). NOT OUTWARD (PIC BELOW)
	NOT LIKE THIS
	Step 16) Tuck the neoprene through the gap of the cushion and backrest section ensuring you also feed the 2 x long Velcro strips through the gap as well.





Step 20) As there is no slot for the Velcro strip closest to the door to go through you must turn the velcro sideways (as per the photo to the left) and then rotate it and have it slot in the crevice as per the photo below.



Step 21) Once all of the velcros are through you can remove the protective touch tape and join them all together.

There will be the following velcros:

a) 2 x Velcro straps that join together and go the length of the seat. During this step you should also affix the velcro (near the straps in "A" to the carpet on the back of the seat
b) 1 x Velcro strap that join together and go the width of the seat
c) The flap of neoprene (as covered off in Step 17) affixing to big velcro sewn to the cover

<u>C</u>







Global Automotive Accessories Toyota LC300 GX / GXL – 2<sup>nd</sup> Row Seat Cover Fitting Instructions

	Step 22) Place the seat back to the
	normal seating position and re-adjust
	where required.
Correct Fitment	Step 23) 60% Cushion Fitment -
	Similar fitting principles to the 40%
	cushion (Please follow Step 12 to 22),
	however there are the following
	differences, which need to be read
	before you follow the previous steps.
	1) Isofix fabric only features on the
	drivers side, not in the middle seat
	2) There are more velcros to connect,
	with a summary below:
	a) 3 x Velcro straps that join together and go the length of the seat. The Velcro closest to the door
	b) 1 x Velcro strap that join together
	and go the width of the seat
	c) The flap of neoprene (as covered off
	in Step 17) affixing to big velcro sewn
	to the cover

# PLEASE SEE VARIOUS PHOTOS ON THE NEXT PAGE OF HOW THE PRODUCT SHOULD LOOK IF FITTED CORRECTLY



Global Automotive Accessories Toyota LC300 GX / GXL – 2<sup>nd</sup> Row Seat Cover Fitting Instructions

### **Removal of the Seat Cover – Special Considerations**

- Removal of the headrest covers Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together – This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest & cushion cover You must carefully remove the cover evenly on both sides at the same rate. If only one side is raised first, it may result in the stitching tearing (warranty claims will not be accepted if neoprene / stitching is damaged as a result of incorrect removal).
- 3) Removal of the backrest and cushion cover Once completely removed, re-attach touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

#### **On-going Maintenance / Care Instructions**

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc.

#### Any further questions please contact:

Andrew Leask Owner / Director

Global Automotive Accessories T: 1300 101 707 E: <u>andrew@globalautomotive.com.au</u> W: <u>www.globalautomotive.com.au</u>