



AVL Looms  
2360 Park Avenue  
Chico, CA 95928-6785  
U.S.A.

530 893-4915  
530 893-1372 fax  
sales@avlusa.com  
www.avlusa.com


## Caster Information

There are four casters, which should be placed at each corner of the loom, inside the frame. The casters can be placed on either the lower horizontal or on the vertical side frame member. As individual looms can vary somewhat, check the loom they are being attached to for the best fit.

## Drill holes

The holes that need to be drilled are size H or 0.266 inch diameter. Two thru holes will need to be drilled for each bracket.

- 1) Use the diagram to determine where the holes should be drilled. Mark the position of the hole on the loom.

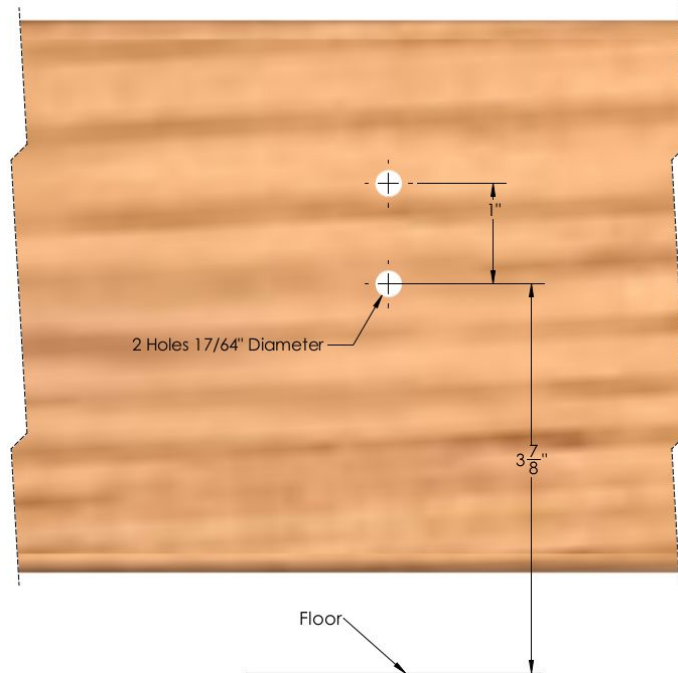

- 2) Drill thru the frame at the marked holes using a size H (.266") diameter bit.

## Attach Casters

- 1) Place the caster against the drilled holes on the inside of the loom. Place a bolt through each hole in the caster, through the loom.
- 2) Secure the caster with the nut.