



AVL Looms
2360 Park Avenue
Chico, CA 95928-6785
U.S.A.

530 893-4915
530 893-1372 fax
sales@avlusa.com
www.avlusa.com

Using the updated Auto Tensioner

The Auto Tensioner improves the quality and consistency of your winding. For best results, follow the directions below.

- 1) Insert the yarn through the first hole beside the tensioner, at the front of the Assembly.

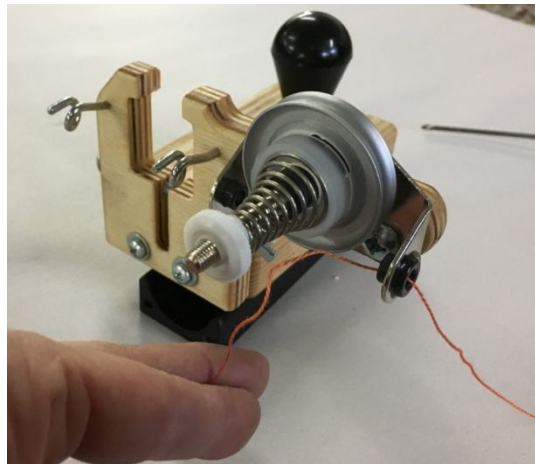


Figure 1 - Insert yarn

- 2) Thread the yarn through the hole on the other side of the tensioner and through both pigtail hooks on the counter assembly.

Note:

For easier threading, you may wish to use a hook such as a fine sley hook, or crochet hook.

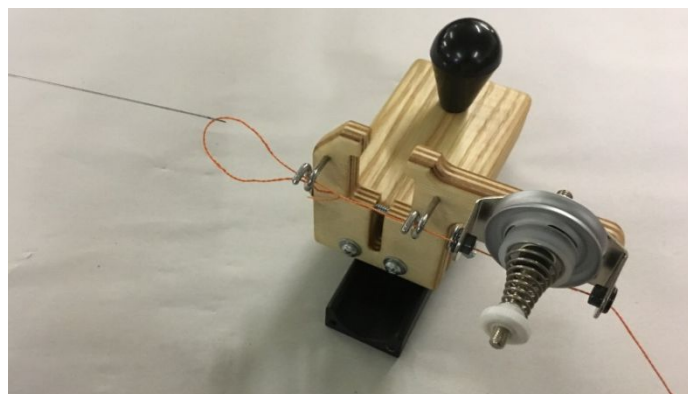


Figure 2 - Thread the assembly



- 3) Once you have the yarn seated, take the yarn over the top of the tensioner and place it between the tension plates.

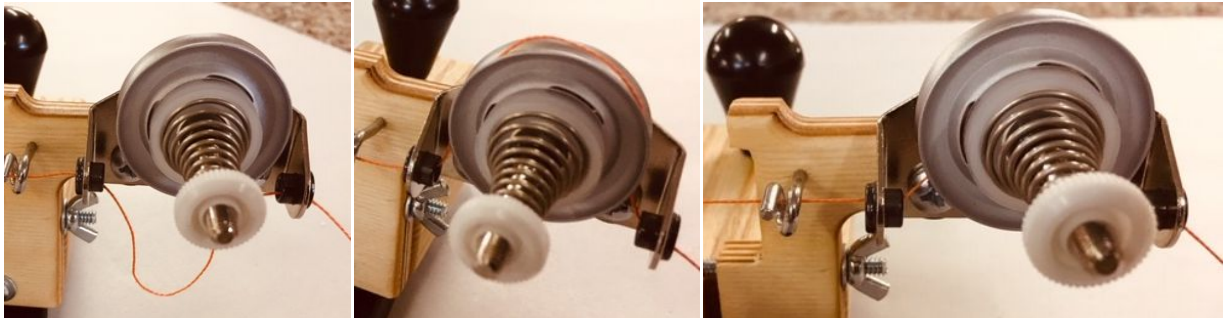


Figure 3 - Place the yarn between the tension plates

- 4) If you are using a yardage counter, twist a loop in the yarn between the two pigtails and loop it around the counter wheel.
- 5) Attach the yarn to the pirn, bobbin, or spool and wind on as you normally would.