

INSTRUCTION MANUAL DELUXE DUO KIDS TRAILER



ATTENTION:

Please read this instruction carefully before mounting and using. Disregarding the directions in this manual can cause damage or injury. All above pictures are for reference only, please subject to real product picture.

Model: Deluxe Kids Dual with stroller kit



Before you start assembly, please check the contents of the carton:

- ♦ 1 x trailer folded
- ♦ 1 x 7" front swivel wheel set
- ♦ 2 x 20" rear wheels
- ♦ 1 x tow bar
- 1 x handle-bar set
- ♦ 2 x M4 screws
- ♦ 2 x bumpers set
- ♦ 1 x flag

Model: Deluxe Kids Dual with jogger set (Optional Extra)



Before you start assembly, please check the contents of the carton:

- ♦ 1 x trailer folded
- ♦ 1 x 7" front swivel wheel set
- ♦ 2 x 20" rear wheels
- 1 x tow bar
- ♦ 1 x handle-bar set
- ♦ 2 x M4 screws
- ♦ 2 x bumpers set
- ♦ 1 x 16" jogger set
- ♦ 1 x pin spring bolt
- ♦ 1 x flag

Trailer assembly & disassembly (all functions as they act as a trailer, stroller & jogger)









Step 1: When starting to assemble the trailer, first assemble the handle-bar with the frame. Fix it with the hexagon screws.

Step 2: The folding mechanism is inside the rear pocket. Open the rear pocket first, then pull the rear tube backwards.



Step 3:Lock the buckles on both sides (2 with blue lever for locking and 2 without for reinforcement). The blue lever will be fixed and set automatically into position.



Step 4:

Disengage the parking brake. Press and hold the soft button and insert the wheel axle into the socket. The axle will be locked automatically. Verify the wheel is securely attached. To remover: press the soft button again and pull the wheel out of the axle.





Step 5:

Install the plastic wing sliding it from the front near the end (at both sides).

Insert the tow bar and slide it inwards into position until the front hole aligns with the hole in the wing. Then insert the safety pin through the hole of the wing.







Step 6:

 
When in using as a stroller: insert the front wheel (7") into the bracket. Warning: always make sure the stroller wheel is properly and fully engaged and locked!

Step 7:

Press the orientation button for a fixed direction. Release it again for all directions swiveling function.















Step 9:

When in using as a bike trailer: press the blue button to remove the front wheel. Stow the front wheel on one of the bumpers or take aside.

Attention:

Press the orientation button to lock the front wheel to avoid swiveling when in rest. Press the blue round button at the bottom side to release it.





Step 11:

Handle-bar with 8 positions to create a convenient height from 78cm to 115cm and meeting most people's operating requirement.


Attention:

When the trailer is being used as a stroller, please always use the wrist strap for security.



Step 14:

When the child is in the trailer, the the 5-point harness should always be used and adjusted carefully. When seating a child in the trailer, always seat the child on the **right** side. The seat is not suitable for children under 9 months.

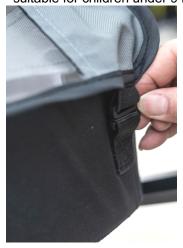

Step 10:

Step on the pedal to activate the parking brake. Release it again before strolling or riding.

Attention:

Please check if the brake is in good working condition when in use.





Step 12:

Bike: remove the nut and washer from the left end of the axle. Use a wrench to fix the coupler (A) with the rear wheel axle. Then tighten the nut to the bicycle manufacturer's recommended torque.

Step 13:

Slide the connection tube (B) over the coupler (A) and fixed it with the shackle. Then loop the back-up safety strap around the bicycle frame and hook the clip back on to the tow bar.

NOTE! Carefully check whether the safety belt cannot come in-between the moving parts of the bicycle. If required, wind it around the frame several times.





Step 15:

The sunshade is stored in the top pocket. When needed, it can be pulled out from the pocket for direct use.



Step 16:

The transparent cover is made to protect the kids from rain and dust. Usually, the rain cover is rolled up. In case you need it, pull the transparent cover down and fasten the plastic hooks with the loop on the front of the overlooked in the traffic. canopy.

Step 17:

Before using the trailer, insert the safety flag through the fabric sleeve at the left hand side of the body. This is very important, because the trailer can be easy

Jogger set installation





Step 19: Insert the front fork of the jogging wheel into the front hexagon mounting hole and push forward. The fork will be automatically locked. Then tighten the spring pin bolt.



Assemble the spring pin bolt to the trailer as shown in picture above.

(screw the thread into half position)

 




Step 20:

When folding the trailer, first take away the safety flag. Then fold the handle-bar in the horizontal position and open the rear window cover.












Step 22: Pull the horizontal rear tube forward.



Step 23: Press the top of both sides to fold the trailer.

Instruction of the use of the safety belt.

Engage the parking brake. Open the front cover(s). Loosen all of the belt adjustments.

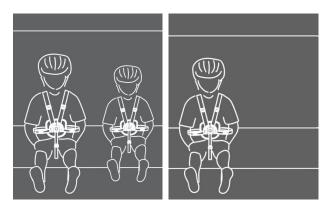

WARNING!

Always adjust the shoulder harness and crotch strap so that they meet at the child's lower chest. Adjusting harness and buckles near your child's neck could cause serious injury.

ONE CHILD

- 1. Unlock the 5-point harness from the safety lock buckle. (see below)
- 2. Seat the child in right side seat.
- 3. Place the crotch strap between the child's legs and adjust it so that the strap loop is centered at the child's lower chest.
- 4. Secure the right-hand and left-hand shoulder harness and the crotch harness. (the main body of the 5-point harness buckle is always fixed with the crotch harness).
- 5. Fasten the shoulder harness and the crotch harness and tighten securely.

6. TWO CHILDREN

- 1. Unlock the 5-point harness from the safety lock buckle on both sides .
- 2. Seat the children in the trailer.
- 3. Place the crotch strap between the child's legs and adjust so that the strap loop is centered at the child's lower chest in turn for both side.
- 4. Secure the right-hand and left-hand shoulder harnesses and crotch harness at both sides (the main bodies of 5-point harness buckles are always fixed with crotch harness).
- 5. Fasten the shoulder harnesses and crotch harnesses and tighten securely,.

Instructions for the operation of the 2nd lock buckle





Push the blue button.



Push button to release buckle from both side.



Push button to release buckle from both side.

GENERAL SATETY INSTRUCTIONS

- 1. Regular checking of all important components such as :drawbar connecting device,frame,safety belts,lighting equipment,tyres and wheels etc for safe condition; regular verification whether bolted assemblies are well tightened.
- 2. Always use the restraint system/harness as soon as the child can sit unaided.
- 3. Before each riding, ensure the attached trailer does not interfere with the bicycle's braking, pedaling or streering.
- 4. Check that the pram body or seat unit are correctly engaged before use
- 5. Do not install a car seat or any other seating device not approved by the manufacturer inside the trailer.
- 6. Never leave children unattended in or around the trailer.
- 7. Do not park the trailer near a ditch or dangerous road.
- 8. The minimum age of passengers is 9 months, and the maximum height of the passengers is 105cm.
- 9. Drawbar load:Min. 0.1kg, Max.8.0kg.
- 10. Never attach the trailer to a racing bike or off-road bike, and never to attach the trailer to any E-bike or Motorcycle with a speed of more than 24km/h (Bumpy roads, turns:8km/h).
- 11. The rider should be an adult in good physical condition. In addition the rider should pay more attention when driving .
- 12. The kids in the trailer should always wear an approved helmet.
- 13. Do not make any modifications to the trailer.
- 14. Don't put anything next to the children when sitting in the trailer as it could be of danger or injury.
- 15. Ensure that all the locking/parking devices are engaged and function well before use.
- 16. To avoid injury ensure that the child is kept away when unfolding and folding this product.
- 17. To prevent injury, please use extreme care when folding and unfolding this product.
- 18. Do not let the child play with this product.
- 19. The trailer should always be covered and closed during the drive to prevent debris from entering.
- 20. When using in the stroller function, it is not suitable for running or skating.
- 21. The parking brake device must always be engaged when placing and removing the children.
- 22. Caution on the negative influence of the trailer on the braking distance of the cycle when the trailer is attached.
- 23. Any load attached to the handle and/or on the sides of the vehicle will affect the stability of the vehicle causing serious
- 24. Accessories which are not approved by the manufacturer, shall not be used.
- 25. Check the tire pressure during assembly and before each ride(Maximum tire pressure is 43 psi.), inspect routinely, maintain cleanly.
- 26. Keep away from any fire or heat sources when kids are sitting in the trailer.
- 27. Do not allow any of the children's body, clothing, shoe laces or toys to come into contact with moving parts.
- 28. A bicycle with trailer attached requires a wide tuning radius. Do not turn sharply.

IMPORTANT



FN1888-2:2018+A1:2022

READ MANUAL BEFORE USING TRAILER

Failure to comply with the manufacturer's instructions can lead to serious injury or death of the passenger/rider.

Model Number: Deluxe Kids Trailer (Double)

Manufactured for:

Tested according to stardand EN15918:2011+A2:2017 & EN1888-2:2018+A1:2022