 
## ORDERING GUIDANCE

## **BEFORE INSTALLATION**

We recommend ordering 1 Permanent HLC Holder for each HLC Sticker that you'd like to replace

You'll also need to order new HLC Stickers which match/correspond to the current sticker #s you'll be replacing



 


Your routes and HLC location are A+ quality and will not need to be changed/moved



The environment is approved as a fit:

- No harsh reflections or light
  - Location not prone to scratching





The adhesive is permanent and may damage walls upon removal

We recommend 3-4 weeks of observation, post deployment, before switching to the permanent HLC Holder.

## **INSTALLATION STEPS**

- 1. Care needs to be taken to place the replacement HLC in the exact same spot on the wall to avoid problems with route runs
- 2. Mark the location of your current HLC:
  - a. Outline the HLC with a pencil
  - b. Remove HLC
- 3. Take a new HLC sticker (with the EXACT same HLC #) and drop it into the Permanent HLC Holder. Do not remove the sticker backing on the HLC.
- 4. Prepare to affix the Permanent HLC Holder
  - a. Hold the Holder vertically so the closed side is down (open side up), which allows the HLC to sit in the holder without falling out
  - b. Remove the adhesive backing to the Permanent HLC Holder
- 5. Affix the Permanent HLC Holder to the pencil marked outline on the wall
  - a. Place Permanent HLC Holder in the exact same outline as the previous sticker
  - b. Line up the top of the HLC holder with the top of your pencil tracing on the wall and then lower the bottom to align and then press into the wall firmly for 30 seconds

**NOTE:** Once the HLC code is inside of the HLC holder, it may be tricky to remove. A credit card inserted on the side of the HLC holder can be used to slide the HLC code out if needed.

<sup>\*</sup> Acrylic holders cannot be removed easily and look like a more permanent part of a building environment.