SERVICING YOUR WILLIAMS FURNACE

GETTING READY FOR WINTER - LIGHTING THE PILOT

FORSAIRE® TOP VENT COUNTERFLOW FURNACE

	NATURAL GAS MODELS		PROPANE GAS MODELS			
	3508632	5008632		3508631	5008631	
	6508632		6508631			
1.	This appliance has a pilot which may be lit by hand. When lighting the pilot, follow these instructions exactly.		12. To find the pilot, follow metal tube from the gas control. The pilot is mounted on the side of the burner.			
2.	BEFORE LIGHTING smell around the appliance area for gas. Be sure to smell next to the floor because some gases are heavier than air and will settle on the floor.		13. Turn knob on the gas control counterclockwise to "PILOT".14. Push in the control knob all the way and hold in. Immediately light the pilot. Continue to hold the			
3.	Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempts to repair may result in a fire or explosion.			control knob in for about one (1) minute after the pilot is lit. Release the knob and the pilot flame will po back up. The pilot should remain lit. If it goes out, repo Steps 9 through 14.		
4.	 Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water. WHAT TO DO IF YOU SMELL GAS Do not try to light any appliance or strike a match. Do not touch any electrical switch; do not use any phone or cell phone in your building. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you cannot reach your gas supplier, call the fire department. 		16. 17. 18.	Turn gas control knob counterclockwise to "ON". Close control access panel. Turn on all electric power to the appliance (if applicable). Set thermostat to desired setting.		
5.						
6. 7. 8. 9. 10.	Set the thermostat to lower If applicable, turn off all ele Open control access panel. Push in gas control knob slig Wait five (5) minutes to clea gas, including near the floo	ctric power to the appliance. htly and turn clockwise to "OFF". ar out any gas, then smell for or. If you then smell gas, STOP! safety information above. If you		GAS CONTROL KNOB PILOT ADJUSTMENT SCREW		
11.	Loosen wing nut and open (if equipped).	the pilot observation door				

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life. **IMPORTANT:** Keep burner and control compartment clean.