
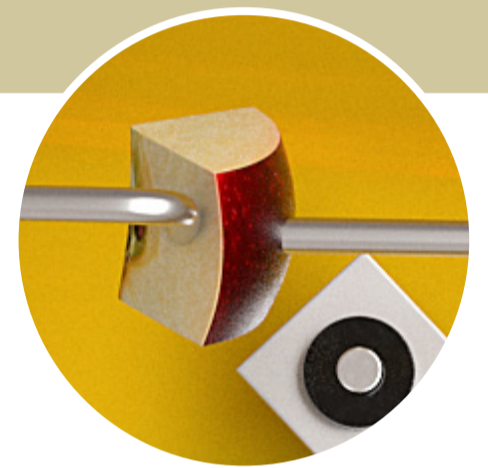


OPERATING INSTRUCTIONS FOR YOUR **FLIPPING TIMMY**

1. For best results use an apple with good scent, when using small apples cut into 1/4s, for large apples use 1/8ths. Then cut the apple segment into three pieces as shown. Use the center piece on the trigger bar, one end piece at the base of the tree, the other end wedged under the front of trap.

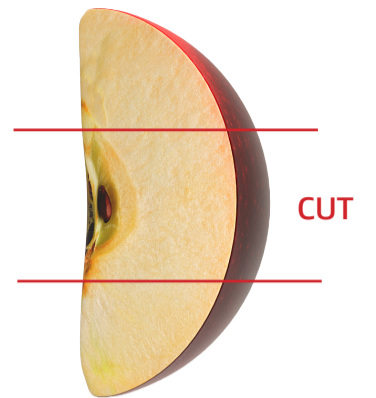

2. Skewer the apple on the trigger pin, skin side first. This ensures the possum gets a good purchase with its large bottom incisor teeth.

TIP In areas with low possum numbers or high food availability use additional visual lure, such as an icing sugar and flour blaze. Apply this as shown beneath the trap.

KEEP FINGERS CLEAR OF THE FRONT OPENING AT ALL TIMES

Your flipping Timmy has been designed to be mounted vertically to a tree or post. Attach using the supplied screws at a comfortable user height – typically 1.5m off the ground. If mounted where children frequent, it is advisable to unset the trap each morning and reset it the next night.


For full instructions on how to setup and use your Flipping Timmy, see the instruction video on our website, or contact us at info@envirottools.co.nz

FLIPPING TIMMY


OPERATING & SETUP INSTRUCTIONS

The Flipping Timmy has been ergonomically designed to be mounted vertically to a tree or post for ease and speed of use and greater effectiveness. The following user instructions are a quick guide to help you get started.


SETTING YOUR TRAP

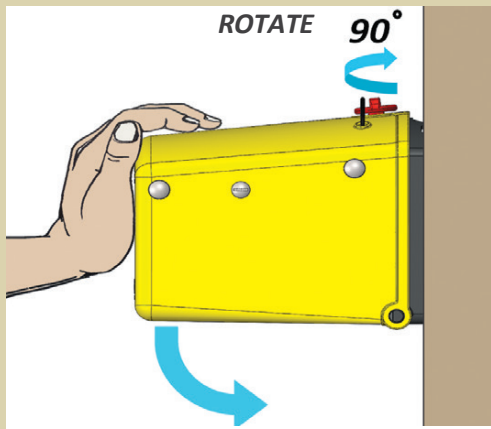


Support the top box with one hand and rotate the red button 90 degrees to unlock it. With the top box now free to pivot, guide it downward until it comes to rest on the tree or post.

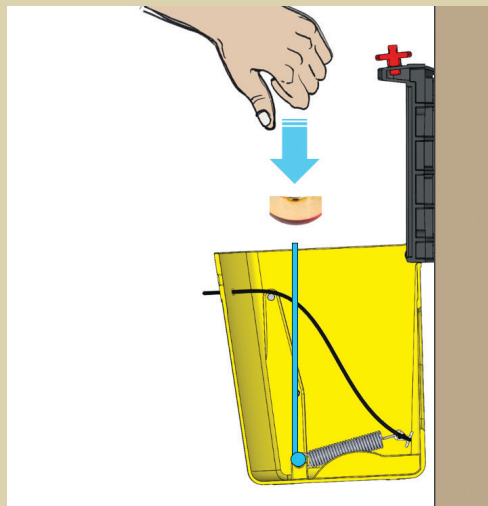

With the trap unset, it is time to bait up. See the separate baiting instructions for how to prepare and attach bait.

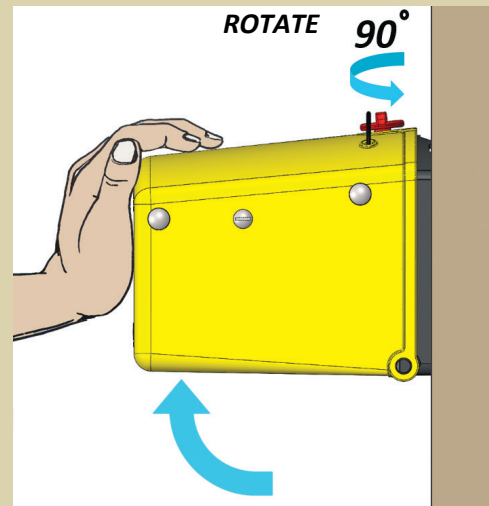


With bait in place, guide the top box back to its closed position and rotate the red button 90 degrees to lock it.

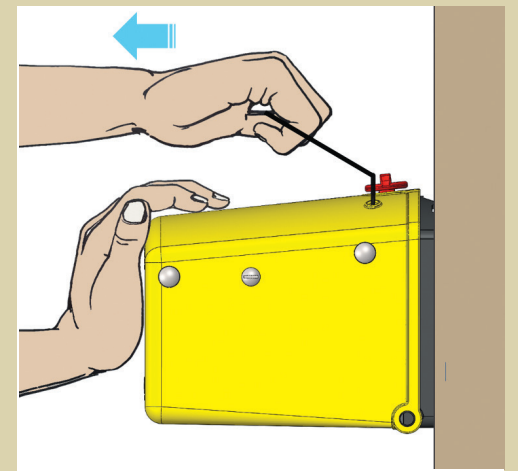


With the palm of one hand pushing against the top surface, use the other to pull the resetting cord firmly toward you until you feel the trap is set.


UN-SETTING YOUR TRAP

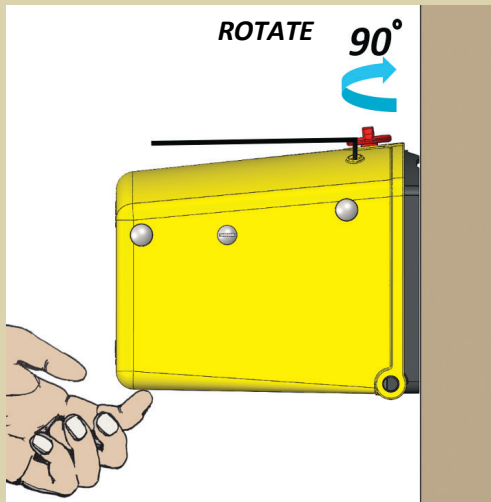


While supporting the top box with one hand, rotate the red button 90 degrees to unlock it.

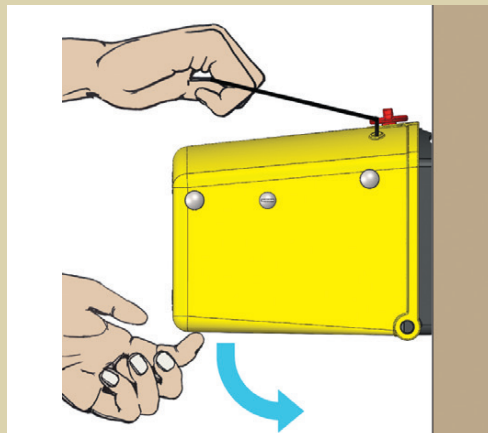

Now grab the setting cord with your free hand and pull back to keep tension while you slowly guide the trap downwards until it comes to rest on the tree or post.

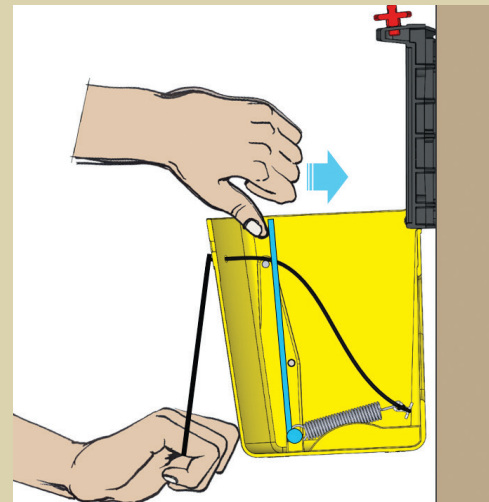

Gently push the back of the protruding bait bar forward, while keeping tension down on the setting cord.

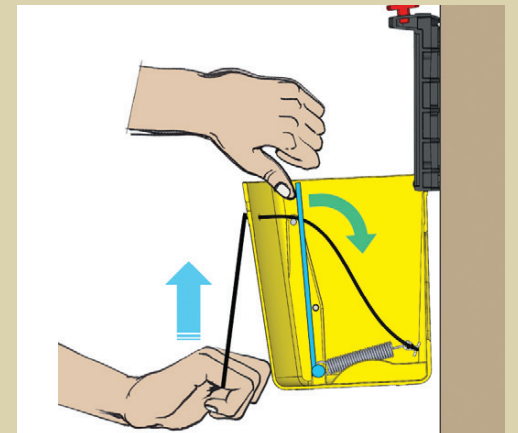


Once you feel it go over centre and start to release, slowly allow the setting cord to be drawn back into the trap, releasing the spring tension, and unsetting the trap.

RELEASING THE CATCH

Pull the resetting cord firmly toward you until you feel the trap is set.

This action releases the catch to the ground allowing you to remove it from the immediate area of the trap.

Consider good hygiene practises if handling the catch.

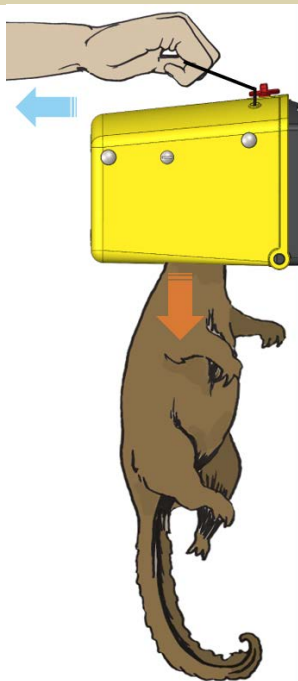


MOUNTING THE TRAP

Fasten with provided screws, you can detach the yellow box to make this easier.


When mounting to a tree or post, use middle holes, when mounting on a flat surface use outer holes.

Note you can also purchase large cable ties and use these through the slots in base - this is particularly good for punga trees.

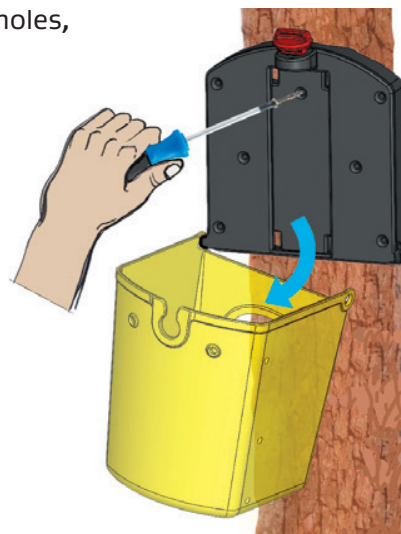

CLEANING THE TRAP

Remember clean traps catch best. If your trap gets dirty, we recommend a scrubbing brush to scrub down the trap and surrounding area.

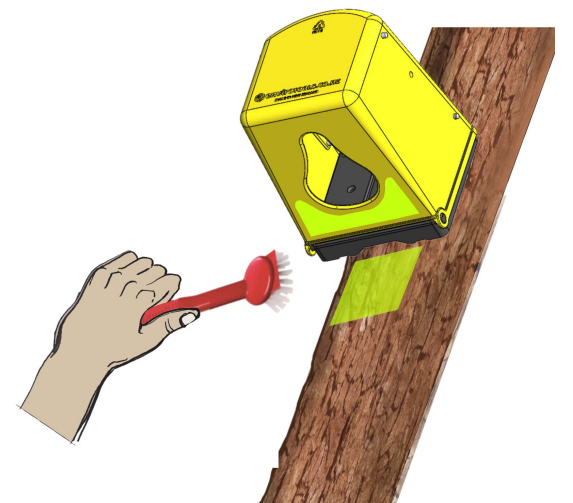

KEEP FINGERS CLEAR OF THE FRONT OPENING AT ALL TIMES