



Inserts 1.

NOTE: Does not fit Wildtrack Ranger

2019 Ford Ranger

RTR Upper Grille

RTR Grille

Grille Bezel

RTR Lighting kit

RTR Non LED Inserts

Truss head Screws

6" Cable Ties

Grille Badge

1992-7001-01 with Lighting Kit 1992-7003-01 with Non LED

Components Included

1

1

1

1

10

10

Part numbers:

2.

3.a

3.b

4.

5.

6.


In addition to common hand tools, installation of this part will require the use of a body clip tool or equivalent, T-25 & T-30 sockets, painters tape and isopropyl alcohol.




1. Raise the vehicle hood and disconnect the negative terminal on the battery.



3. Remove the 5 plastic rivets in the core support cover.

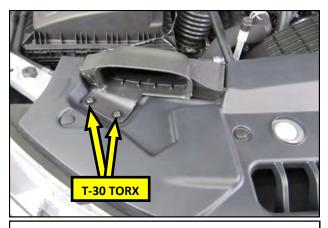


2. Using a T-30 Torx bit, remove the airbox inlet screws and set them aside.

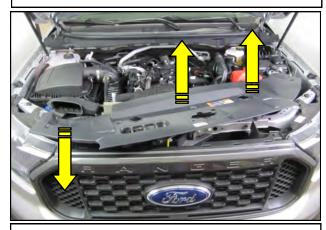

4. Pull upward forcefully on the core support cover to unseat it from the retention clips. Slide the cover out from underneath the airbox inlet and set it aside.




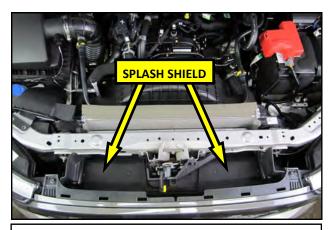

5. Remove the splash shield between the grille and the core support.




6. Using a T-25 Torx bit, remove the two screws on each side of the splash shield.

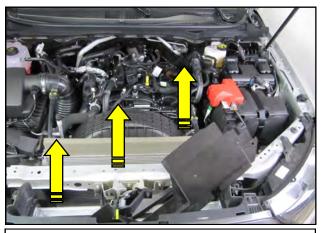

7. Push the front of the shield downward and pull the rear of the shield upward, and out of the vehicle.



8. Prepare the vehicle for grille removal by placing a protective layer of painters tape on the bumper cover, as shown.

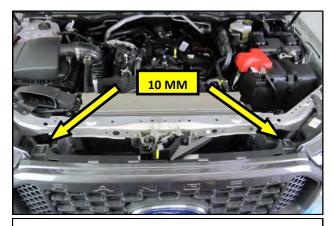


9. Remove the two bolts from each side of the OEM grille and set them aside.




10. With the grille bolts removed, lift up on the grille tabs and pull the grille slightly forward to clear the location lugs.




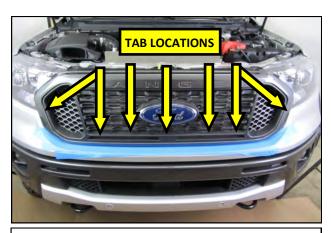


11. From behind the grille, depress the seven locking tabs securing the grille to the bumper cover.

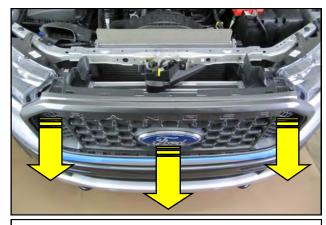

12. Pull the grille forward, away from, and out of the vehicle.

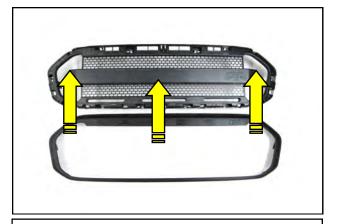


13. Set the RTR bezel onto the RTR grille and align the mounting tabs and slots.

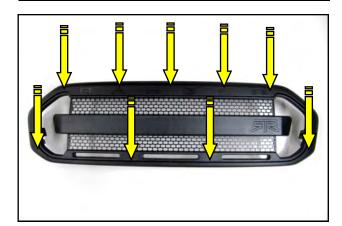


14. Press firmly onto the bezel to seat the tabs in all of the grille slots.

NOTE: The remainder of this manual contains information regarding the installation of the optional LED Lighting. If this install does not include Lighting, disregard any irrelevant steps.

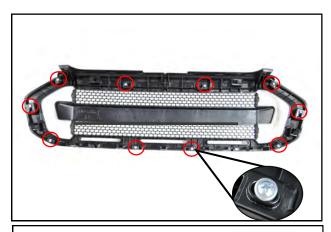

15. Use the 10 supplied screws to finish creating the grille and bezel assembly. RTR recommends installing these by hand. Do not over tighten the screws.

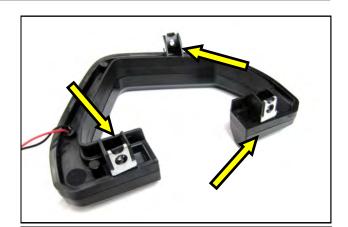


16. Install the speed nuts onto the LEDs or Inserts as shown, with the flat side facing outward and the threads facing inward.







17. Route the wiring harness through the front of the Grille and insert the LED or Insert into the RTR grille. The LEDs and Inserts are side specific and are marked accordingly on the back side.

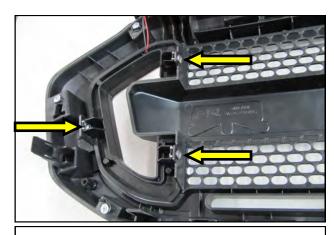


18. Align the speed nuts with the holes in the grille and secure the LED or Insert using the 5mm screws and flat washers.

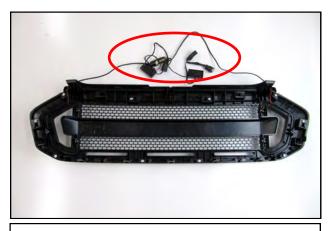


19. Install the second LED or Insert into the grille and lay the wiring harnesses up and away from the grille as shown.

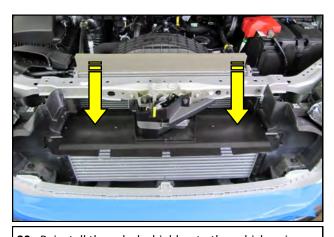

20. Reinstall the splash shield onto the vehicle using the hardware removed in step **6.**

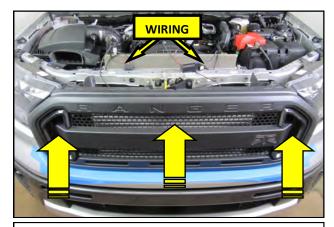

21. Carefully slide the grille and light assembly into the vehicle as shown, with the wiring on top of the core support. Press firmly at all tab locations to lock the grille in.

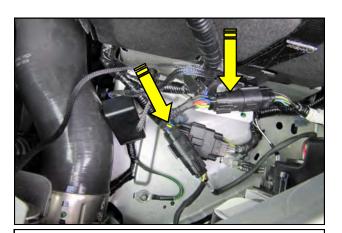


22. Disconnect the head lamp. Connect the OEM head-lamp harness to the RTR LED harness. Connect the second RTR connector to the head lamp assembly.






23. Reconnect the battery and perform a function test of the lighting. Troubleshooting tips are on page **6**.


OPERATION: The RTR grill lamps are triggered off of the parking lamp circuit. The LEDs will be illuminated when the parking lights are on or when the headlights are turned on.

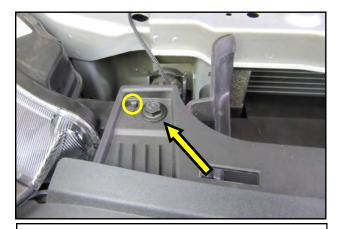

25. Slide the grille tabs over the location lugs and secure the grille using the hardware removed in step **9**.

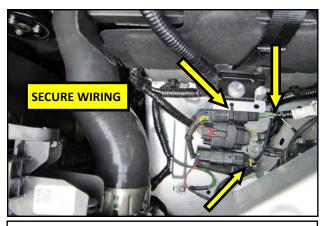


27. Finish routing the LED wiring and secure it using the supplied cable ties.

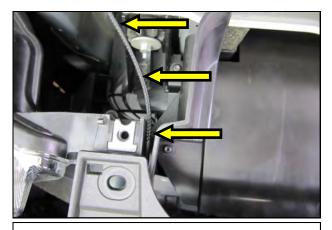

24. Once LED functionality has been confirmed, begin to neatly route the wiring harness as shown.



26. Find a suitable location for the LED Drivers. Thoroughly clean the location with a clean towel and Isopropyl Alcohol. Peel off the adhesive backing and mount the drivers.

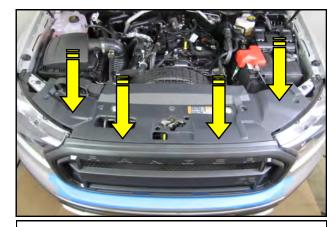


28. Return the core support cover to the vehicle and push the tabs into the clips.





29. Secure cover using the 5 plastic rivets removed in step **3**.

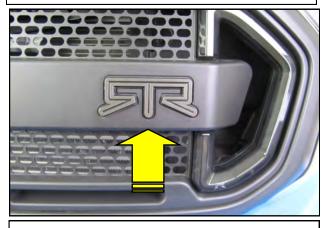

31. Clean the badge recess on the RTR grille using isopropyl alcohol and mount the badge onto the Grille.



30. Secure the air box inlet using the hardware removed in step **2**.



32. Remove the painters tape from the vehicle. Installation is now complete.

Troubleshooting

- If lamps do not illuminate, unplug the connector, inspect the connector terminals, making sure they are straight, and reconnect.
- If there is still no function, make sure the light switch is turned to the parking or headlamp position. The lamps should be turned on any time your truck's lights are illuminated.
- If LED Grille is illuminated, but headlamps are inoperable, confirm that the inline connector is connected on both sides, both to the factory harness and to the headlamp.
- If you observe condensation in the lamps, keep vehicle in a dry location for 1-2 days to allow the internal pressure of the lamp to equalize. If condensation does not disappear, or moisture persists, contact RTR Vehicles.

<u>Care</u>

- ♦ Clean the lamps using a mild solution of car soap and water.
- Do not use any harsh solvents or cleaners.
- ♦ Wipe the lenses dry using a clean microfiber cloth.
- ♦ Do not use the hi pressure hose setting at the car wash or a pressure washer to clean the Lights.

Customer Support: 1 (866) 839-7444 Customer Support Hours: Mon - Fri, 9:00 AM EST - 4:00 PM EST

REV.11.15.19 6