

OOO[®]

 
OUT OF ORDER

DAMAGED IN ITALY

Users guide
International guarantee

MAIN COMPONENTS

Model: SPORTY CRONOGRARO

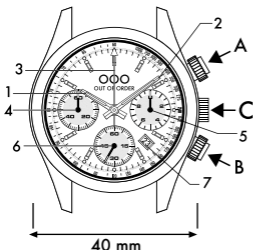

- 1 - Hour hand
- 2 - Minute hand
- 3 - Chronograph second hand
- 4 - Chronograph minute hand
- 5 - Chronograph 1/20 second hand
- 6 - Normal second hand
- 7 - Date

- A - Start/Stop pusher
- B - Reset pusher
- C - Crown

40 mm

SETTING THE TIME AND SETTING THE DATE

Model: SPORTY CRONOGRARO

SET THE TIME

- Unscrew and pull the crown out to position (2).
- Turn the crown to move the minute and hour hands to the desired time.
- Press the crown back to position (0) and screw down.

SET THE DATE

- Unscrew and pull the crown out to position (1).
- Turn the crown until the desired date appears.
- * If the date is set between 9:00 PM and 1:00 AM, the date may not change on the following day.
- Press the crown back to position (0) and screw down.

USING THE CHRONOGRAPH

 
Model: SPORTY CRONOGRARO

This chronograph is able to measure and display time in 1/20 second united up to maximum of 59sec.

The chronograph 1/20 second hand keeps continuously for 30 seconds after starting, and then stops at Zero position.

MEASURING TIME WITH THE STOPWATCH

Model: SPORTY CRONOGRARO

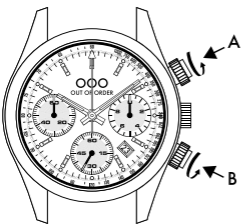

- Unscrew and press the pusher "A" to start the chronograph.
- The chronograph can be started and stopped each time button "A" is pressed.
- Press button "B" to reset the chronograph and chronograph minute and second hands return to their Zero positions.
- Screw down pushers "A" and "B".

 
* Hour and minute hands also keep the current time when the chronograph is being used.



CHRONOGRAPH RESET

(INCL. AFTER REPLACING BATTERY)

Model: SPORTY CRONOGRARO

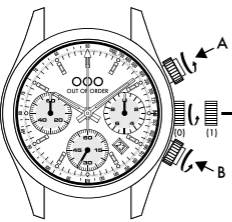

This procedure should be performed when the chronograph second hand does not return to the Zero position.

- Unscrew and pull the crown out to position (2).
- Unscrew and press the button "A" once to set the chronograph second hand to the Zero position.
- Unscrew and press the button "B" once to set the chronograph 1/20 second hand to the Zero position.

*The chronograph hands can be advanced rapidly by continuously pressing button "A" or "B".

- Once the hands are set at Zero position, reset the time and return the crown to its normal position (0), screw down crown and pushers.

OOO[®]
OUT OF ORDER
DAMAGED IN ITALY

Produced and Distributed by
OUT OF ORDER S.r.l.
Via Vanoni 14
30027 San Donà di Piave (VE) Italy
P.iva: IT04225560277

www.outoforderwatches.com
info@outoforderwatches.com
+39 0421 351608