



pillar

The Pillar Booth Seismic Anchor Installation:

- 01 Place the seismic anchoring template on the floor where you want the booth and secure it in place with tape.
- 02 Unscrew and remove the four seismic plates from the base of the booth.
- 03 Place the four seismic plates at the designated locations on the template.
- 04 Using the included screws (F), bolt the plates to the floor through the two holes in the base of the plates.
- 05 Remove the template and place the base of the booth on the floor, setting the feet inside of the seismic plates.
- 06 Align the circular foot inside of the arc of the seismic plate.
- 07 To level the base, spin the feet until each of the two built in levels show the bubble in the middle of the two lines.
- 08 Press on the base to test that it is stable on all sides.
- 09 Using the previously removed screws, bolt the base to the seismic plates through the two holes in the side of each seismic plate.
- 10 Return to step #3 in the assembly guide.

FRONT OF BOOTH