Renato's

Renato's www.enjoyrenatos.com

Renato's UNIQUE



USER MANUAL DE - IT - FR - EN - ES











GENERAL WARNINGS

Read these recommendations carefully as they contain important information about safe installation, use, and maintenance. Keep this manual with care for future reference.

After removing the packaging, and before using the appliance, make sure the appliance and all the accessories are working well. If you have any doubt, do not use the appliance until you consult a professionally qualified personnel. Packaging elements (plastic bags, expanded polystyrene - eps, nails, etc.) are a potential hazard and must not be left where children can reach them. Before connecting the appliance, make sure that the ratings correspond to those of the mains. If the plug does not fit into the wall outlet, have the wall outlet replaced with another type by a qualified electrician. He must also check that the cable section is suitable for the power absorbed by the appliance.

In general, it is not advisable to use an adaptor, multiple sockets, or an extension cord. If they are necessary, use only simple or multiple adaptors and extension cords that conform to safety regulations, being careful not to exceed the load limits indicated on the adaptor and the extension cord, and the maximum power indicated on the multiple adaptor.

The use of any electrical appliance implies observance of certain fundamental rules. In particular:

- Do not touch the appliance with wet or damp hands;
- Do not use the appliance with bare feet;
- Do not pull on the electrical cord or the appliance to pull the plug out of the mains outlet;
- Do not leave the appliance exposed to atmospheric conditions (rain, sun, etc.);

Do not allow the appliance to be used by children or disabled persons without

surveillance.

Before performing any cleaning or maintenance operation, disconnect the appliance from the mains outlet by removing the plug from the socket or by switching off the electrical installation.

If the appliance breaks down or functions improperly, shut it off and do not tamper with it.

Repairs must only be carried out by an after-sales centre authorised by the manufacturer. Always request the use of original spare parts. Non-compliance with what has been stated above could compromise the safety of the appliance.

If you decide not to use the appliance of this type any longer, it is recommended that you make it inoperable by cutting off the mains cord after removing the plug from the mains outlet.

You should also render harmless those parts of the appliance that could be dangerous, especially for children who might use an abandoned appliance as a toy. Installation must be performed according to the manufacturer's

instructions Incorrect installation could cause damage to person, animals and things, for which the manufacturer cannot be held responsible.

To avoid dangerous overheating, it is recommended that you unwind the electrical cord to its entire length and that you use the appliance as recommended in section "Precautions for use".

Do not allow the power cord to pass around corners, sharp edges, or very hot objects.

Do not leave the appliance connected when not in use. Remove the plug from the mains outlet when the appliance is not used. If the electrical cord of this appliance is damaged, it must be replaced by an Authorised Customer Service Centre since specialised tools are necessary.

Keep the appliance at least 60 cm from washbasins, taps and hot surfaces.

Do not use abrasive powders or harsh detergents to clean the parts in contact with the power sources. A damp cloth will suffice.

Pay special attention to warnings with this symbol: it indicates a hazard that may cause serious personal injury and/or damage the machine A

Pay special attention to warnings with this symbol: it indicates a hazard that may cause minor personal injury and/ or damage the machine

USAGE WARNINGS

This appliance was designed to brew espresso coffee from capsules and must be used exclusively for this purpose.

Any other use would be improper and therefore dangerous.

The manufacturer will not be held liable for damages caused by its inappropriate, incorrect or unreasonable use.

Before using the appliance, make sure it is in perfect working order.

Likewise, the electrical plug and sheath should not be cracked or broken.

If the conditions described above are noticed, immediately unplug the appliance from mains outlet and take it to an authorised After-Sales Service Centre for necessary checking.

(IEC) (EN) This appliance is not intended for use by persons (including children) with reduced physical, (EN) sensory or mental capabilities, or lack of experience and knowledge, (EN) unless they are supervised and instructed concerning its use by a person responsible for their safety.

(EN) Children should be supervised to ensure that they do not play with the appliance.

Do not leave the appliance unattended while turned on.

The electrical safety of this appliance relies strictly on its connection to an efficient grounding system, as set forth by the safety standards in force. This safety requirement is of paramount importance and must be ascertained by a skilled electrician. The appliance must only be connected to the electrical system with a grounded plug.

For your personal safety, we suggest that you power the appliance by means of a differential switch (RCD), whose operating current does not exceed 30mA.

Do not unplug the appliance by pulling on the power cord. Do not carry and/or pull the appliance holding it by the cable.

Never submerge the appliance in water when cleaning it.

The surfaces get hot during use.

Set the appliance on a flat, even, and stable surface. Place the appliance in a safe place, where it cannot be tipped over or cause harm to people and/or property. Do not use the appliance in the open air. Never leave the appliance in areas where temperatures are lower or equivalent to 5°C if it is filled with water.

Do not place the appliance on hot surfaces or close to open flames, as this will damage it.

If the appliance will not be used for an extended time period, empty the water reservoir.

During delivery of the beverage, pay attention to any possible splashes of hot liquid. Do not touch the hot parts of the appliance immediately after use. Burn warning

Should there be problems with the appliance, contact the authorized service centre.

Avoid repairing the appliance on your own. Any repairs carried out on the appliance by unauthorised personnel will automatically invalidate the warranty, even if it has not reached its expiry date. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by guests in hotels, motels and other residential type environments;

LEGAL INFORMATION

These instructions contain essential information for proper operation and accurate maintenance of the appliance as well as information on appliance functions. Understanding such information and adhering to the instructions in this booklet are critical to the safe operation and maintenance of the appliance, free from hazards.

For more information, or if you encounter specific issues which you feel were not explained clearly in this user manual, please contact your local retailer or the manufacturer directly.

In addition, we would like to point out that these instructions are not part of any previous or existing convention, agreement or legal contract, which has no bearing on the contents thereof.

All of the manufacturer's obligations are contained in the appliance sale agreement, which also contains the full and exclusive terms and conditions concerning the warranty.

All the warranty terms contained in the sale agreement are neither restricted nor extended by way of these explanations.

These instructions for use contain information protected by copyright.

These instructions for use may not be photocopied or translated into another language without the prior written permission of the Manufacturer. ATTENTION

The manufacturer accepts no liability for damage caused by:

- Use which is improper or which does not conform to that which is intended;
 - Use of non original parts and accessories.
- Repairs carried out at unauthorised repair centres;
 - Tampering with the power cord;
 - Tampering with any component of the appliance;
- Malfunctions caused by water scale and by failure to periodically de-scale the unit;
- Malfunctions caused by operating the appliance at voltages other than that specified on the data plate;

• Use of non original parts and accessories. In such cases the warranty shall be null and void.

For more information, or should you encounter any problems which are not covered by these instructions, entirely or in part, please contact the manufacturer

The manufacturer reserves the right, at its discretion, to implement any changes to the product for regulatory, industrial, commercial or aesthetic reasons.

STORING THE MACHINE

After each use, turn off all the switches on the appliance, unplug and empty the reservoir.

Store the appliance in a dry place, out of the reach of children.

Protect the appliance from dust and dirt.

CHARACTERISTICS

- Supply voltage: 120V - 60 Hz
- Total power: 1250 W
- Power supply cord length:
 1 m
- Rerservoir capacity: 1.5 L
- Appliance dimensions (cm): 30x38.5x29
- Weight: 8.5 Kg
- Capsule container: 30 capsules

The device was designed to use capsules with the following measurements.



66

PRODUCT DESCRIPTION

- 1. Machine body
- 2. Side panel
- 3. Cup warmer
- 4. Cup support for small cup
- 5. Cup support for large cup
- 6. Drip tray
- 7. Command lever to load the capsules
- 8. Capsule insertion space
- 9. Coffee dispensing spout
- **10.** Water reservoir (removable)
- 11. Water softener filter
- 12. Capsule container
 - A liquid container
 - B capsule container

BUTTONS

- Backlit buttons
- 13. STAND BY
- 14. ESPRESSO
- 15. ESPRESSO LUNGO
- 16. SUPPLY AS DESIRED
- 17. Display

MOUNTING THE WATER SOFTENER FILTER

- **1.** Remove the water reservoir (10).
- 2. Raise the reservoir lid.
- **3.** Pour water into the reservoir up to the water limit mark (min.).
- 4. Place the water softener filter under running water to remove any air trapped within it and to avoid any device malfunctions.
- 5. Insert the filter into the reservoir.
- 6. Close the cover and reposition the reservoir within the machine.

REFILLING THE RESERVOIR

- **1.** Remove the water reservoir (10).
- **2.** Raise the reservoir lid.
- **3.** Pour water into the reservoir up to 1.5 litres max.
- 4. Close the cover and reposition the reservoir within the machine.

Before filling the reservoir, ALWAYS disconnect the plug from the electrical socket. Use cold tap water only to fill the water reservoir. Use fresh water every time you fill the reservoir. Do not use sparkling mineral water or other fluids.

Running the water pump with no water in the reservoir will cause the pump to overheat.

RINSING THE INNER CIRCUITS

When using the appliance for the first time, or if it has been switched off for a long time, you must rinse it first. By performing this quick procedure, you will ensure that all inner circuits are rinsed.

- 1. Wash the reservoir (10), using a hard brush, water and washing up liquid then rinse well, dry it and place it back in the machine.
- **2.** Fill the reservoir with water, up to 1.5 litres max.
- **3.** Power on the appliance through the main switch
- **4.** Move the small cup support (4) and remove the large cup support (5)
- When the machine has warmed up, without inserting a capsule, press button (15) and wait for the dispensation process to finish Repeat the operation 2 or 3 times. The water dispensed will be collected in the drip tray (6).

HOW TO MAKE COFFEE

Use "CECCHETTO CAPSULES" only Make sure that there is enough water in the reservoir. Do not use the coffee machine without water in the reservoir.

- **1.** Place a cup on the cup support (4) centring it under the spout (9).
- **2.** Slowly raise the loading lever (7) (until it stops).

Note Note

Buttons (14), (15) and (16) will turn off.

- **3.** Place the capsule in the special slot (8) inserting its outer edges in the guides.
- **4.** Completely lower the loading lever (7) (until it stops).
- Press button (14), (15) or (16). Once the programmed quantity of product has been reached, the machine will stop automatically and the capsule will be released.
- Note

When using a large cup that does not fit on the small cup support (4), just rotate the support and use the other one (5). **Note**

RF R

After 15 minutes of inactivity, the appliance will go into stand-by mode.

To place the appliance in stand-by at any time, press and hold button (13) for 2 seconds.

During stand-by, the cup warmer will also turn off.

To restart the appliance, press button (13).

EMPTY THE CAPSULE CONTAINER

When the waste bin symbol begins to flash on the display, the stand-by button (13) is red and buttons (14), (15) and (16) are off, it means the capsule drawer is too full, sending the machine into error mode.

- Lift the large cup rest (5) and slowly remove the device's drawer (12).
- **2.** Remove the bin from the tray (12-B), empty it, and rinse it.
- **3.** Clean the bin (12-A) and the drip tray (6) of any coffee residue.
- **4.** Rinse and reassemble all the components and return the container (12) to the appliance all in one piece. (12-A; 12-B; 6; 5)

DAILY CLEANING

- Without inserting a capsule, press button (15) and wait until the machine has stopped dispensing. The water dispensed will be collected in the drip tray (6).
- 2. Empty the tray at the end of washing (6).

CLEANING THE MACHINE

- 1. To clean the body of the machine (1) use a damp cloth, avoiding the use of abrasive detergents.
- **2.** Follow the steps described in the section titled "EMPTY THE CAPSULE CONTAINER".

Note Note

Do not wash the machine's components in the dishwasher.

3. Before reinserting the plug in the outlet, make sure that the machine and its components are completely dry.



Before cleaning, ALWAYS unplug from the mains outlet.

Never immerse the body of the appliance (1) in water or other liquids nor wash it in a dishwasher. It is forbidden to dry any part of the appliance in conventional and/or microwave ovens.

DESCALING

The build-up of lime scale is a natural consequence of using the appliance. Descaling is necessary every 5-6 months; if the water is very hard, you need to descale the appliance more often. To de-scale your coffee machine, you can use any commercially available non-toxic, non-harmful descaling product.

- **1.** Switch off the appliance.
- 2. Remove the reservoir and empty it.
- **3.** Fill the reservoir with the descaling solution, following the instructions listed on the descaling container.
- 4. Remove the support.
- 5. Switch on the appliance.
- **6.** Without inserting a capsule, press button (15) and wait until the machine stops dispensing.

The water dispensed will be collected in the drip tray (6).

- 7. Turn the appliance off
- **8.** Let the descaling solution sit in the machine while it is powered off for about 10-15 min.
- **9.** Repeat operations 5 to 7 until there is no more descaling solution in the reservoir.
- **10.** Extract the water reservoir, rinse it thoroughly and refill it again with fresh, potable water.
- 11. Power on the appliance
- Without inserting a capsule, press button (15) and wait until the machine stops dispensing. Repeat until the tank is empty. The water dispensed will be collected in the drip tray (6).
- **13.** When the reservoir is empty, power down the machine.
- **14.** Fill the reservoir with water again and repeat the steps described in point 12.
- **15.** Once a second rinse cycle has been carried out, refill the reservoir once again. By doing so the appliance is ready for use.

Note Note

Do not wash the machine's components in the dishwasher.

LONG PERIODS OF DISUSE

- **1.** If the appliance is not to be used, power it off and unplug it from the outlet.
- 2. Store the appliance in a dry place, away from dust and away from the reach of children.
- **3.** We recommend storing the appliance in its original packaging.
- The storage temperature must not be below 5°C to ensure that the internal parts of the machine are not damaged by frozen water.

DOSAGE SETTINGS

1. Turn the machine on and keep the stand-by button pressed (13).

Note Note

Buttons (14), (15) and (16) will begin to flash.

- **2.** Insert the capsule.
- **3.** Press the button for the beverage you would like to programme (14), (15) or (16).
- **4.** Once the desired quantity has been reached, press the button of the selected beverage.
- **5.** Repeat the same operation for other beverages.
- **6.** Turn the machine off and back on to save the settings.

ADJUSTING THE CLOCK

Note Note

To adjust the clock, the machine must be in stand-by.

- **1.** With the machine in stand-by, press and hold button (15) for 3 seconds.
- **2.** Use button (16) to change from hours to minutes.
- 3. Press button (14) to increase.
- 4. Press button (15) to decrease.
- **5.** To confirm/save, press and hold button (13) for 2 seconds.

Note

To confirm/save or exit the menu, press and hold button (13) for 2 seconds and the machine will go back to stand-by. Or, an automatic exit will be launched after 60 seconds with the clock unchanged.

74

TROUBLESHOOTING

Problem	Cause	Solution
The product is not dispensed.	The reservoir is empty. The water reservoir is not fully inserted. Capsule drawer full. The ducts are blocked with limescale. The pump is defective.	voir. Insert it correctly. Carry out a descaling cycle
The coffee is not hot enough.	The cup is cold. The heating system is defective.	Pre-heat the cups. Contact the re- tailer.
The pump makes too much noise.	The water reservoir is not fully inserted. The pump is defective.	Insert it correctly. Contact the re- tailer.
A few drops come out of the dispenser unit, especially when the machine is warming up.	This is not a defect.	It is normal for a few drops to come out, this is not a defect.
The coffee tastes acidic.	After descaling, the machine was not rinsed.	Rinse the ma- chine again.

ACTIVATE / DEACTIVATE THE CUP WARMER

To activate/deactivate the cup warmer with the machine in stand-by, press and hold button (14) for 3 sec. Using button (14), select ON / OFF. To exit and confirm, press and hold button (13) for 2 seconds and the machine will return to standby or automatically exit after 60 seconds. When ON, this symbol on the display will light up **\$\$**

Water finished alarm	Button (13) flashing red (14)(15)(16) Off Symbol on the display: 🖄
Capsule container full alarm	Button (13) flashing red (14)(15)(16) Off Symbol on the display: 🝿
Alarm for missing water flowmeter	Button (13) flashing red (14)(15)(16) Off Symbol on the display: 🖄
Alarm for missing reservoir	Button (13) flashing red (14)(15)(16) Off Symbol on the display: 🖄
Alarm for missing drawer	Button (13) flashing red (14)(15)(16) Off Symbol on the display: 🕅
Alarm for open capsule lever	Button (13) white (14)(15)(16) Off

ALARMS

DISPOSAL

• This product complies with Directive 2012/19/EC.

• The symbol representing the crossed out waste bin on the appliance indicates that the product, at the end of its useful life, must be treated separately from domestic waste. It must be taken to a recycling centre for electrical and electronic appliances or turned in to the point of sale when purchasing a new, equivalent, appliance.



• The user is responsible for taking the appliance to the recycling centre at the end of its life, under penalty of the sanctions established by the current legislation on waste handling.

• Correct collection and delivery of the no-longer used appliance to a recycling centre for treatment and environmentally-compatible disposal helps avoid negative impacts on the environment and public health, and permits recycling of the materials from which the product is made.

• For more detailed information regarding the available collection systems, contact the local refuse centre or the shop where the product was purchased.

• The manufacturer and importers comply with their responsibility for recycling, treating and environmentally compatible disposal of waste both directly and in a collective system.