



GOLF

GPS Watch & Scorecard



ScoreBand Golf GPS Watch
Model #: SB-GPS1
www.ScoreBand.net

GET STARTED

Before using for the first time:

1. Thoroughly dry the device and adaptor contacts prior to charging or connecting to computer.
2. Fully charge the device.

CHARGING

Typical charging time from zero power remaining to fully charged is 2-4 hours.

1. Plug the USB cable into USB port on computer or use the AC adaptor and plug into outlet.



2. Align charging clip contacts with the four contacts on device and release clip. When charging, battery icon will appear with percent of charge completed.



2

GET FAMILIAR



BUTTON FUNCTIONS

1. POWER / LIGHT / ESC
 - Press 2 seconds to turn on / off device.
 - When device is on, press to turn on backlight.
 - Within modes, press to go back a step (ESC).
2. OK / SHOT
 - Press (OK) to make a selection from modes and options within modes.
 - In PLAY GOLF mode, press for 2 seconds to mark your location before/after a shot.
3. UP / SCORE
 - Press to scroll UP through selections.
 - In PLAY GOLF mode, press to go to next hole.
 - In PLAY GOLF mode, press for 2 seconds to enter Score screen. Press again to add stroke while on Score screen.
4. MODE / DOWN
 - Press to move to next mode option (TIME>SCORE>PLAY GOLF>SETUP).
 - Press to scroll DOWN through selections.
 - In PLAY GOLF mode, press to go to previous hole(s).
 - In PLAY GOLF mode, press for 2 seconds to view distance to hazards.

3

MODES

TIME

View battery life, GPS signal strength, time-of-day, month and day-of-week.



SCORE

View up to 10 rounds scorecard history.



PLAY GOLF

View GPS course database and access full course navigation & scorekeeping features.



SETUP

View configurations and status of device.



4

CONFIGURE DEVICE WITHIN SETUP MODE

1. Press Mode button until SETUP screen appears.
2. Press OK button.
3. Press OK button to choose SYSTEM.
 - To adjust Backlight / Contrast / Night Mode, select upper left Watch icon.
 - To adjust Time Format / Time Zone / Daylight Savings, select upper right Clock icon.
 - To turn sound on or off, select lower right Speaker icon.
 - To choose preferred language, select lower language bar at bottom of screen.
 - To choose preferred unit of measurement, select Scale icon.

5

VIEW STATUS OF DEVICE WITHIN SETUP MODE

1. Press Mode button until SETUP screen appears.
2. Press OK button.
3. Press DOWN button to highlight STATUS option.
4. Press OK button.
5. Choose desired Status by pressing DOWN button to highlight option.
6. Press OK button to view:
 - A. System Info - Scroll down to view:
 - Strength of GPS signal
 - Battery life %
 - Firmware Version
 - B. GPS Set (these settings should not be adjusted)
 - WAAS ON/OFF – This setting should remain on. WAAS uses a network of groundbased reference stations. Readings from the reference stations are used to correct for sources of error. The correction data is sent to geostationary WAAS satellites that transmit them back to WAAS-enabled GPS receivers to improve position accuracy.
 - COLD START – Resets GPS signal
 - C. Default Set – Choose this option to reset device to factory settings.

6

ON THE COURSE

Now that you are familiar with your device, it's time to get out and play. Hold watch to face the sky to fix GPS reception. Then:

1. Press Mode button until PLAY GOLF screen appears.
2. Press OK button.
3. Satellite icon will appear with signal strength level. Press OK button.



4. Find Course using "AUTO" or "MANUAL."



- A. AUTO – Automatically locates nearest courses to your current location and lists them for you to choose.



7

UPDATING FIRMWARE


To improve performance and features, occasional upgrades and updates will be made to the device's firmware. Be sure to register your device at the ScoreBand GOLF web page to receive update alerts.

1. Power off device.
2. Connect USB cable to device and PC.
3. PC will detect device in drive as "Removable Disk."
4. Open this "Removable Disk" drive.
5. Locate "Device Firmware Upgrade" folder and open.
6. Go to <http://www.scoreband.net/products/scoreband-golf-gps-watch> and download Firmware Update file from bottom of product page (downloaded file title will start with "ScoreBand_GOLF_GPS_firmware_update...").
7. Copy and paste this file into the "Device Firmware Upgrade" folder. The new file will automatically replace the old file.
8. Remove USB cable and power on device.
9. Display will show "firmware upgrade in progress." After 2-4 minutes, the firmware update process will complete and device will power off.

Do not interrupt during update process.

10

- B. MANUAL – Manually narrow down to desired course by Continent/Country/State/City/Courses.

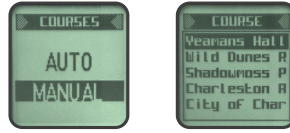

5. Select course by scrolling down list of courses and press OK button when desired course is highlighted.
6. Press OK button when screen shows, "PLAY?" Front | Center | Back distances will display on screen along with Hole #, Par for the hole, and Strokes (plus or minus par).

Distance to Green:



Modes within PLAY GOLF mode



8

Score – Press SCORE button for 2 seconds until the scorekeeping screen appears. Press up or down to correspond with the number of strokes you are above or below Par for the hole.

Shot Distance – Press SHOT button for 2 seconds to set the start location of the shot; when you arrive at location where ball landed, check display to view distance of shot.

Distance to Hazards – Press MODE button for 2 seconds and select HAZARD to view distance to all hazards on hole.

Save & Exit round – when round is complete, press ESC button.

- If you are not ready to Save & Exit round, press ESC button again.
- If you are ready to Save & Exit round, press OK button. Score will be saved and PLAY GOLF screen will appear.

CHECK SCORE (stores scorecards from last 10 rounds)

1. From main menu, press MODE button until SCORE screen appears.
2. Press OK button. Dates of historical rounds will appear.
3. Scroll to select desired round.
4. Make selection to view course played, total score breakdown by front and back nine hole totals and scores by hole.

9

Troubleshooting

If device becomes unresponsive, press and hold ESC button for 10 seconds to reboot.

Battery Warnings

Do not attempt to remove battery. It is non-replaceable.

If the following guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the GPS device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not leave the device exposed to a heat source or in a high-temperature location. To prevent damage store it out of direct sunlight.
- Do not puncture or incinerate the device or battery.
- When storing the device for an extended time, store within the following temperature range: from 32°F to 77°F (from 0°C to 25°C).
- Do not operate the device outside of the following temperature range: from -4°F to 122°F (from -20°C to 50°C).
- Contact your local waste disposal department to dispose of the device/battery in accordance with applicable local laws and regulations.

11

Legal Disclaimer

By using this product, you agree that One Seed, LLC / ScoreBand will not be held legally responsible for any injury or damage to you or any person or property caused by the user's improper operation and/or poor judgment while using this product.



COUNT ON IT.

ONE SEED

PO Box 20171
Charleston, SC 29413
www.ScoreBand.net

Call 888.722.0444 with any questions.

ScoreBand GOLF is covered by a limited one-year warranty. Go online to register your device for warranty and to receive firmware update alerts by email. Visit: www.scoreband.net/products/scoreband-golf-gps-watch

PLAY WELL!

12