



PLAY

Quick-touch,
four-mode
scorekeeping watch



ScoreBand PLAY Watch
Model #: SBPL-BLU/-GRY/-PNK
www.ScoreBand.net

Remove film on display and press any button to awaken your new ScoreBand PLAY.

GET FAMILIAR: Buttons/Display



1. SCORE BUTTON #1 – In **Time** mode press and hold to set Hour.
 - In **Golf** mode press for Hole #.
 - In **Tennis** and **AllScore** modes press when Player 1 scores a point.
2. SCORE BUTTON #2 – In **Time** mode press and hold to set Minute.
 - In **Golf** mode press for stroke #.
 - In **Tennis** and **AllScore** modes press when Player 2 scores a point.
3. MODE BUTTON – Press to switch modes (Time > Golf > Tennis > AllScore >)

NOTE: Modes do not reset when switched
4. BACKLIGHT BUTTON – Press to illuminate display.

INSTRUCTIONS TIP: Review only the modes that you plan to use.

To hide an undesired mode: press and hold the Mode button for 8 seconds while in undesired mode.

To unhide a mode: press and hold the Light button for 15 seconds while in Time mode.

TIME MODE

To switch between 12-Hour and 24-Hour mode press and hold Score button #1 and #2 for 3 seconds.

To set Hour: press and hold Score button #1 until hour digit blinks and then:

- Press Score button #1 to increase hour, or Score button #2 to decrease hour.
- Hour digits are set after 3 seconds of final button press.



To set Minute: press and hold Score button #2 until minute digit blinks and then:

- Press Score button #1 to increase minute, or Score button #2 to decrease minute.
- Minute digits are set after 3 seconds of final button press.

GOLF MODE

Quick Time view: press and hold Light button for 3 seconds and current time will briefly display.

To enter stroke: press Score button #2.

To advance to next hole: press Score button #1.

To correct score: press and hold Score button #2 until digit blinks and then press again to subtract stroke(s).

To view Front 9 and Back 9 score during round: press Score button #1 for 2 seconds. Front 9 and Back 9 scores will display for 3 seconds.

After completing 9 holes, total score will appear for 3 seconds and then proceed to hole #10.



After completing 18 holes, Front 9 score (top display) and Back 9 score (bottom display) will appear for 3 seconds and then Total Round Score will appear.

To reset: press and hold Score button #1 & #2 for 2 seconds.

GOLF MODE TIP: To track two statistics (putts per round, fairways hit, etc.) use AllScore mode. Score is not reset when mode is switched.

TENNIS MODE

Quick Time view: press and hold Light button for 3 seconds and current time will briefly display.

To enter a point: press Score button #1 for Player 1 or Score button #2 for Player 2.

To correct a point: press and hold Score button #1 or Score button #2 (for player with incorrect score) until point blinks. Then press again to subtract point(s).

After final point of a game the Set score displays for 3 seconds.



To review Set score at any time: press and hold Mode button for 2 seconds.

To reset: press and hold Score button #1 & #2 for 2 seconds.

ALLSCORE MODE

Quick Time view: press and hold Light button for 3 seconds and current time will briefly display.

To enter a point, press Score button #1 for Player 1 or Score button #2 for Player 2.

To correct a point: press and hold Score button #1 or Score button #2 (for player with incorrect score) until digit blinks and then press again to subtract point(s).

To reset: press and hold Score button #1 & #2 for 2 seconds.

ALLSCORE MODE TIP: Use AllScore mode with other modes to keep statistics/counts.



BATTERY

Type: 1.5 volt button cell (AG7 or LR/SR 927)

Life: 1 year with normal usage.

Replace: To preserve water-resistance integrity and warranty, it is strongly recommended to have a professional replace the battery.

Hibernate: To conserve battery life, put display to sleep while in Time mode. Press and hold Mode & Light buttons for 2 seconds. To awaken from Hibernate mode, press any button.

WATER RESISTANCE

ScoreBand PLAY is 3 ATM water-resistant (splash/rain resistant; not suitable for showering, bathing, swimming, or other water-oriented activities).

WARRANTY

ScoreBand PLAY is covered by a limited one-year warranty. Go online to register your device for warranty and to view full details at: www.scoreband.net/products/scoreband-play

ONESEED

PO Box 20171

Charleston, SC 29413

www.scoreband.net

Phone: 888.722.0444

Email: support@scoreband.net

PLAY WELL!